



HYDRAULIC EXCAVATOR OPERATOR'S MANUAL



ZEWEIT ^{2.7T} 3



Boleo Corporation
47 Qingyang Rd Changzhou CN-213000
E-mail: info@Boleomfg.com
www.Boleomfg.com www.BoleoUS.com

Machine models
Edition
Document order number
Language
From serial number

ZEWEIT 3
V.0.2
2000970
US
BOLEOCE24027



This Operator's
Manual includes
the AEM safety

Documentation	Language	Order no.
Operator's Manual	US	2000970

Legend	
Original Operator's Manual	x
Translation of original Operator's Manual	–
Edition	v.0.2
Date	10/2024
Document	Boleo ZEWEIT 3

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:



WARNING

The engine exhaust from this product contains chemicals known to the State Of California to cause cancer, birth defects or other reproductive harm.

The State Of California requires the above two warnings.
Additional Proposition 65 Warnings can be found in this manual.

Copyright © 2023 Boleo®, Printed in the Hong Kong.

All rights reserved, in particular the copyright, the right of reproduction and the right of distribution applicable worldwide.

This document may be used by the receiver only for the designated purpose. It may in no way be duplicated or translated in any other language, in whole or in part, without prior permission in writing from the manufacturer.

No reproduction or translation of this publication, in whole or part, without the written consent of Boleo.

Violations of legal regulations, in particular of the copyright protection, will be subject to civil and criminal prosecution.

Boleo keep abreast of the latest technical developments and constantly improve their products. For this reason, we may from time to time need to make changes to figures and descriptions in this documentation that do not reflect products that have already been delivered and which will not be implemented on these machines.

Technical data, dimensions and weights are only given as an indication. Responsibility for errors or omissions not accepted.

The cover features the machine with possible optional equipment. Non-metric weights and measurements are approximate.

Photographs and graphics are symbolic representations and may differ from the actual products.

The Operator's Manual and any amendments to it must always be available at the place of use of the machine. Possible amendments are included at the end of the Operator's Manual.

EPA Non-road Emissions Control Warranty Statement – Compression Ignition

U.S. AND CANADA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS



To determine if the Boleo engine qualifies for the additional warranties set forth below, look for the "Emissions Control Information" Label located on the engine. If the engine is operated in the United States or Canada and the Emissions Control information label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine conforms to US EPA nonroad compression-ignition regulations", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines", or "This engine conforms to US EPA and California nonroad compression-ignition emission regulations", also refer to the "California Emission Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emissions-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact your dealer for the further information.

Boleo'S WARRANTY RESPONSIBILITY

Boleo warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine including all parts of its emission-control system was designed, built and equipped so as to conform at the time of the sale with Section 213 of the Clean Air Act and is free from defects in materials and workmanship which would cause the engine to fail to conform with applicable US EPA regulations for a period of five years from the date the engine is placed into service or 3,000 hours of operation, whichever first occurs.

Where a warrantable condition exists, Boleo will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to you, including expenses related to diagnosing and repairing or replacing emission-related parts. Warranty coverage is subject to the limitations and exclusions set forth herein. Emission-related components include engine parts developed to control emissions related to the following:

Air-Induction System	Aftertreatment Devices
Fuel System	Crankcase Ventilation Valves
Ignition System	Sensors
Exhaust Gas Recirculation Systems	Engine Electronic Control Units

EMISSION WARRANTY EXCLUSIONS

Boleo may deny warranty claims for malfunctions or failures caused by:

- Non-performance of maintenance requirements listed in the Operator's Manual
- The use of the engine/equipment in a manner for which it was not designed
- Abuse, neglect, improper maintenance or unapproved modifications or alterations
- Accidents for which it does not have responsibility or by acts of God

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual.

Use of any other fuel can harm the emissions control system of the engine/equipment and is not approved for use.

To the extent permitted by law Boleo is not liable for damage to other engine components caused by a failure of an emission-related part, unless otherwise covered by standard warranty.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISIONS OF MATERIAL AND SERVICES AS SPECIFIED HEREIN. WHERE PERMITTED BY LAW, NEITHER Boleo NOR ANY AUTHORIZED Boleo ENGINE DISTRIBUTOR, DEALER, OR REPAIR FACILITY OR ANY COMPANY AFFILIATED WITH Boleo WILL BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Declaration of Conformity

Manufacturer

Boleo Corporation.
47 Qingyang Rd, Z, PRC - 213000



Product

Machine designation	Hydraulic Excavator
Model	Z27
Trade name	ZEWEIT 3
Serial number	--
Output in kW(hp)	15,2 (20.4)
Measured sound power level dB(A)	93

Declaration of conformity

Notified body according to Directive 2006/42/EC, appendix XI:

Directives and standards

We hereby declare that this product corresponds to the relevant regulations of the following Directives and standards:

2006/42/EC, 2005/88/EC, 2000/14/EC;

DIN EN ISO 12100:2010, DIN EN 474-1:2006+A1:2009, DIN EN 474-5:2012 (except for C.3.3), DIN EN ISO 3471:2010, DIN EN ISO 3744:2010, DIN EN ISO 3449:2008

The indications specified above correspond to the existing information at time of going to press. They have possibly changed in the meantime (refer to the original declaration of conformity supplied with the machine). Applies to EU countries, and countries with legislation similar to that of the EU. Applies to all machines with CE marks that have not been modified without authorization since the product was placed on the market.



WARNING

Incorrect operation of the machine can cause casualties. Before using the machine, the following should be done:

- ▲ Keep in mind the safety regulations and correct usage specification.
- ▲ Read and understand the relevant contents of the manual about the safe operation of the machine.
- ▲ Understand and get familiar with all the safety signs on the machine.
- ▲ Ask irrelevant people to leave the worksite.
- ▲ Before officially operating this machine at the worksite, you should have been trained on the safe operation of the machine in advance.

You are responsible for complying with relevant laws and regulations and complying with Boleo Heavy Industry's instructions on machine operation and maintenance.

Boleo is the registered trademark of Boleo Corporation

1. Preface

- 1-2 To users
- 1-3 Product Information
- 1-5 Machine direction
- 1-6 Machine components
- 1-7 Machine overview
- 1-7 Safety related Information
- 1-9 Technical specifications

2. Safety regulations

- 2-2 Safety general principles
- 2-4 Safety tips
- 2-5 Safety equipment
- 2-6 Safety signs
- 2-12 Safety in the workplace
- 2-14 Safe operation
- 2-24 Machine transportation and handling
- 2-25 Downtime for maintenance
- 2-27 Fire, explosion and poisoning prevention
- 2-28 Battery
- 2-30 Hydraulic system

3. Parts introduction

- 3-2 Overview of controls
- 3-3 Security lock part
- 3-4 Switch assembly
- 3-5 Electrical control panel
- 3-6 Panel meter
- 3-7 Operation of working device and rotation mechanism
- 3-9 Walking manipulation
- 3-9 Throttle handle and shutdown handle
- 3-10 Driver's seat
- 3-10 Seat belt

4. Operation guide

- 4-2 Preparation before operating the machine
- 4-3 Engine operation
- 4-9 In and out of the machine
- 4-10 Movement of the machine
- 4-12 Steering of the machine
- 4-13 Rotation of the machine
- 4-14 Operation of working device
- 4-16 Work on slopes or water

- 4-17 Get out of the muddy environment
- 4-18 Construction work guide
- 4-21 Removal and installation of bucket
- 4-22 Park the machine
- 4-23 After operation
- 4-24 Loading, unloading and transportation of machines
- 4-29 Working in cold/hot climates
- 4-31 Storage of the machine
- 4-33 Causes of technical failures and solutions

5. Maintenance

- 5-2 Common sense for maintenance
- 5-5 Maintenance summary
- 5-8 Consumable parts
- 5-8 Mandatory replaceable parts
- 5-9 Oil selection table
- 5-10 Tightening torque
- 5-13 Regular Inspection and Maintenance Table
- 5-14 Regular Inspection and Maintenance Table (continued)
- 5-15 Routine inspection
- 5-16 Engine fuel system
- 5-19 Engine cooling system
- 5-23 Engine lubrication system
- 5-25 Engine air intake system
- 5-27 Other maintenance for engine
- 5-28 Hydraulic system
- 5-37 Battery
- 5-40 Reducer
- 5-42 Track
- 5-43 Thrust wheels, supporting wheels and guide wheels
- 5-44 Lubrication
- 5-46 Bucket teeth replacement
- 5-47 Washing of floor mats

6. Accessories guide

- 6-2 Safety Precautions
- 6-4 Assembly/disassembly steps of accessories
- 6-5 Accessories operation guide
- 6-9 Daily inspection of hydraulic breaker hammer
- 6-10 Quick coupler
- 6-11 Grab bucket
- 6-13 Drilling device
- 6-15 Backhoe bucket with scraper
- 6-16 Service Record

01 Preface

- 1-2 To users
- 1-3 Product Information
- 1-5 Machine direction
- 1-6 Machine components
- 1-7 Machine overview
- 1-7 Safety related Information
- 1-9 Technical specifications

Dear respected users:

Hello!

Welcome to use Boleo Heavy Industry's excavators, and thank you for your great support for Boleo's business.

This manual is about the safety instructions and the correct use and maintenance of the machine. Before starting and operating the machine for the first time and before repairing the machine, please read this manual carefully and fully understand the safety regulations, operation guidelines and maintenance matters until you fully understand them. For convenience of reference, please keep this manual in a designated place so that the qualified machine operators can read it regularly. If this manual is lost, damaged or illegible, please order it immediately from us or our agents. Please hand over this manual together when transferring this machine, so that the next owner can use it correctly.

Please entrust the agent or maintenance station of Boleo Heavy Industry to overhaul and adjust the machine, and use the original accessories and spare parts provided by our company. If you use the non-original accessories or components, there may be no obvious impact on the machine for the time being, but it is likely to cause a series of undesirable results to the machine in the future. If the machine failure is caused by the use of non-original accessories and components or maintenance by an unauthorized unit, Boleo Heavy Industry will not undertake the three guarantees business (repair, replacement and return) even within the guarantee period.

With adherence to the principle of "customer first", Boleo Heavy Industry continuously improves its products to provide the best products to users as far as possible. Therefore, the improvement may be implemented at any time. As for the products being sold for the time being, we will not change the information and do not give advance notice.



We sincerely hope that this machine can serve you better and create greater value under your correct use and careful care.

Boleo Corporation


When you need to know the basic information of the machine, you can check it according to the position shown in the figure.

Machine information

The nameplate of the machine is on the front left side of the platform

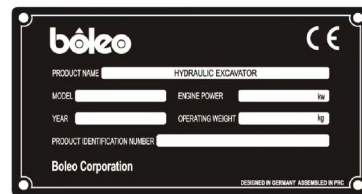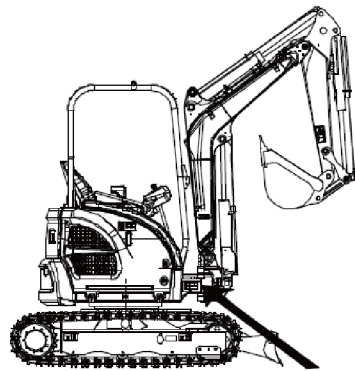


Engine information

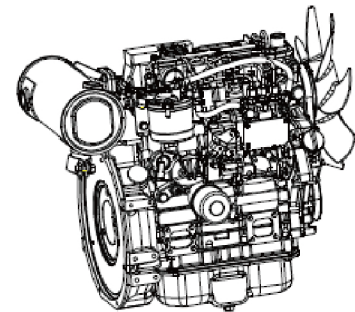

Model	Serial number

Machine operation information

The engine timer is located on the digital instrument cluster in the cab of the machine

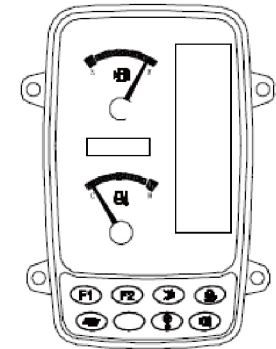


Machine archive

Fill the machine number and engine serial number of your machine in the below table. When you need to purchase machine parts or want to obtain relevant information, you can inform Boleo Heavy Industry of these codes.


Please record these numbers and keep them together with the product certificate. If your machine has been stolen accidentally, you can submit the information to the local public security agency.

boleo	
• Machine model	_____
• Machine number	_____
• Engine serial number	_____
• Distributor information	_____

The front, back, left, right, up and down in this manual refer to the directions shown in the figure.

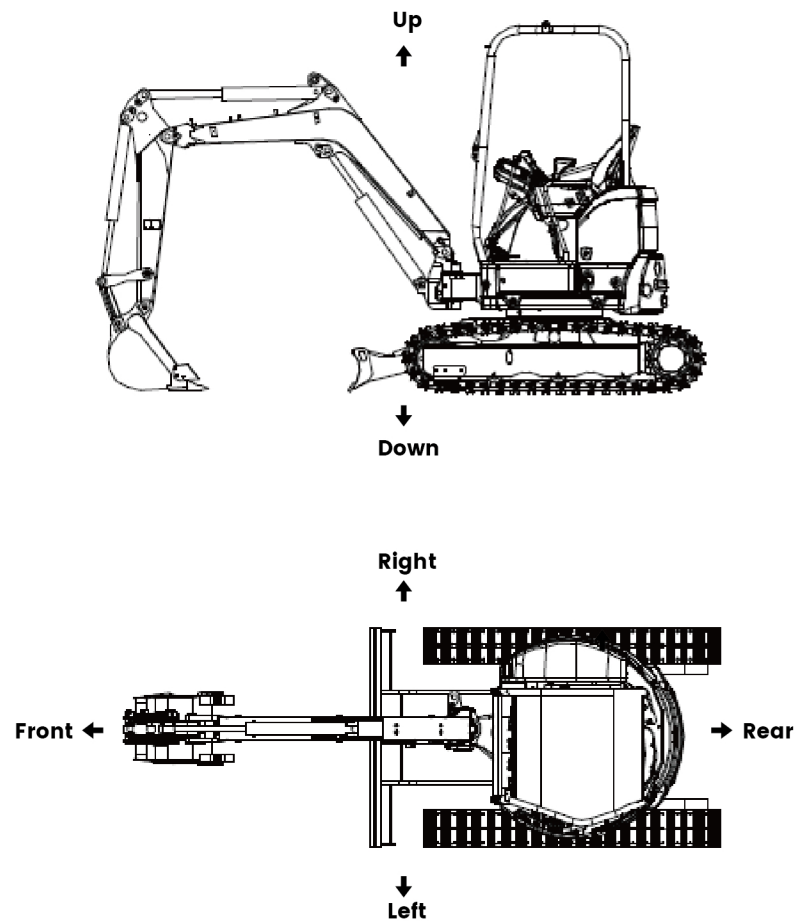

- | | |
|------------------------|-------------------------|
| 1. Bucket cylinder | 12. Track |
| 2. Bucket | 13. Walking reducer |
| 3. Stick | 14. Drive wheel |
| 4. Stick cylinder | 15. Thrust wheel |
| 5. Boom | 16. Supporting wheel |
| 6. Boom cylinder | 17. Rotary support |
| 7. Cab shed | 18. Frame |
| 8. Instrument | 19. Steering head |
| 9. Seat frame assembly | 20. Tensioner |
| 10. Covering part | 21. Bulldozing cylinder |
| 11. Platform | 22. Bulldozer shovel |

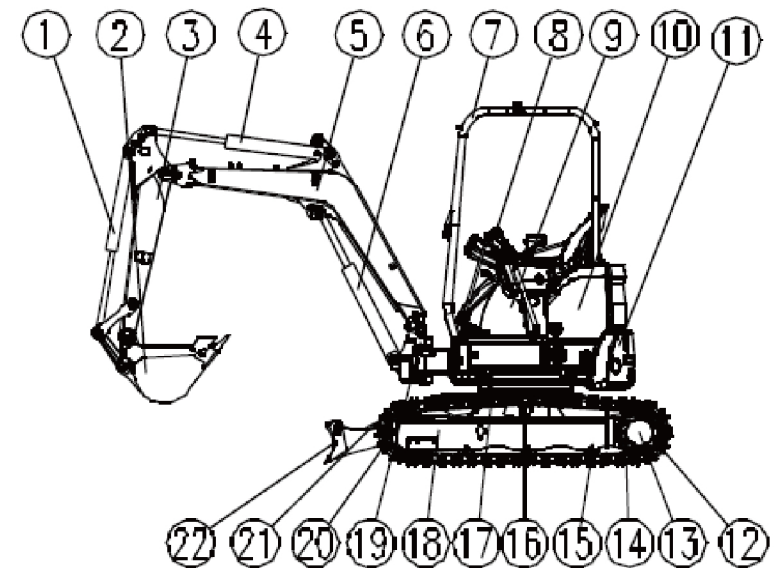

Assigned operation

This machine is mainly used for the following operations:

- Excavation operation
- Trenching operation
- Loading operation
- Leveling operation

Please refer to the contents of operation guide and annex guide for detailed operation essentials.

Run-in

The machine has been fully adjusted and checked before delivery. It will accelerate the performance degradation and shorten the service life of the machine if the forced operation is carried out at the beginning. Therefore, please control the load at 80% of the full load for running-in during the first 100 hours (the display time of the instrument).

01 | Preface | Safety related information

Most accidents related to operation, inspection, maintenance and repair operations are caused by negligence of basic precautions and hazard prediction in safety.

The accidents can be prevented by predicting possible dangerous situations. Therefore, attention must be paid to the location and type of hazards. (In order to carry out such operations correctly, the operator must have the specified training, technology and tools.)

Please carefully read this manual and all safety precautions, warnings and accident prevention methods recorded on the machine, and understand their contents until you fully understand them. Otherwise, you must not operate, inspect and maintain the machine. The personal injury or death may occur if you ignore these warnings. Please pay attention to them.

For the safety tips listed in this manual and the safety signs used on this machine, the possible danger level can be distinguished through the following warning words. It also includes the preventive measures to avoid risks.



DANGER

It means that if it is not avoided, the consequences of the danger will result in death or serious injury. It is only applicable to the few occasions where the most danger exists.



WARNING

Indicates that if it is not avoided, the potentially dangerous consequences may result in death or serious injury.



CAUTION

Indicates that if it is not avoided, the potentially dangerous consequences may result in low or moderate injuries, and can also be used to remind unsafe operations that may cause personal injury.


Our company cannot predict all hazards of operation, inspection, maintenance and repair in all environments. Therefore, the warnings in this manual and on the machine do not cover all situations. Users shall consider the necessary safety precautions by themselves if they perform the operation, inspection, maintenance and repair which are not covered in this manual. Users are responsible for taking the necessary safety measures by themselves.

1. Structural dimension parameters

Code	Item	Unit	ZEWEIT 3 (2.7T)
	Working weight	kg	2600 (rubber track, four-post shed)
	Standard bucket capacity	m³	0.09
	Engine model		Yanmar 3TNV80F EPA T4F/Euro V
	Engine power	KW/rpm	15.2/2500
A	Total length (during transportation)	mm	4110
B	Total ground length	mm	2800
C	Total height (to boom top)	mm	1640
D	Total width	mm	1500
E	Total height (during transportation)	mm	2490
F	Counterweight ground clearance	mm	525
G	Minimum ground clearance	mm	320
H	Tail turning radius	mm	750
I	Track ground length	mm	1590
J	Track length	mm	2040
K	Track distance	mm	1250
L	Full width of track	mm	1500
M	Track width	mm	250
O	Hood height	mm	1380
P	Distance from turning center to rear end	mm	750
	Highest rotation speed	rpm	10-12
	Walking speed	Km/h	2.3/4.2


NOTE

The above structural parameters are nominal values, and no prior notice will be given if they are changed by the manufacturer.

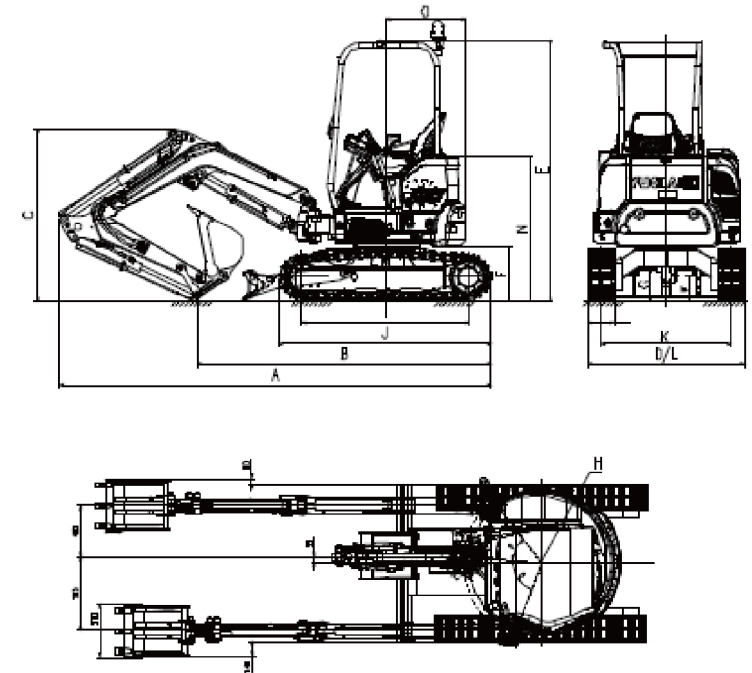

2. Work parameters

Code	Item	Unit	ZEWEIT 3 (2.7T)
AA	Maximum digging height	mm	4170
BB	Maximum unloading height	mm	2780
CC	Maximum digging depth	mm	2540
DD	Maximum vertical digging depth	mm	2240
EE	Minimum turning radius of the working device	mm	1950
FF	Maximum ground digging radius	mm	4400
GG	Maximum digging radius	mm	4520
HH	Maximum pushing height of bulldozer shovel	mm	340
JJ	Maximum pushing depth of bulldozer shovel	mm	255
	Maximum digging force of bucket	kN	23.1
	Maximum digging force of stick	kN	14.4
	Maximum left deflection angle of boom	°	47
	Maximum right rotation angle of boom	°	74

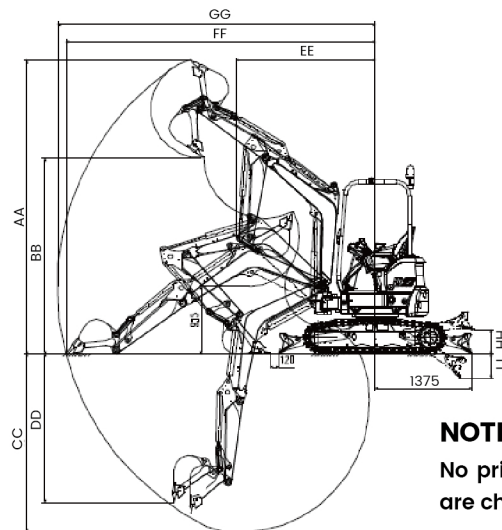

NOTE

No prior notice will be given if they are changed by the manufacturer.

3. Walking mechanism

Independently driven by a hydraulic motor through a multi-stage planetary gearbox.

	Travel speed (km/h)	Gradeability
High speed	4.2	58% (30°)
Low speed	2.3	

4. Hydraulic system

Load sensitive system

Maximum system flow:	61.6 L/min (at 2200 rpm)
System rated pressure:	24 MPa
Rotary pressure:	17.5 MPa
Auxiliary 1/Auxiliary 2 pressure	21 MPa
Pilot pressure:	3.5 MPa
Oil return 10 μm filter element Oil suction filter:	metal filter element

5. Electrical system

Voltage	12V
Battery	45AH

6. Service environment

Ambient temperature:	-15~40 °C
Ambient humidity:	< 85%
Altitude:	≤ 1500m
Ambient temperature at transportation and storage:	-15~40 °C

7. Interference on machine body

The working devices of various series of hydraulic excavators may interfere with the boom oil cylinder or the boom lower cover plate when they are non-standard working devices. Therefore, the attention should be paid to the angle between the stick and the boom when retracting the stick if the machine uses non-standard working devices to prevent interference with the boom oil cylinder and damage to the machine body.

The following are all non-standard auxiliary working devices provided by our company:

Buckets	Bucket accessories directly mounted on the stick
	Bucket accessories for use with quick change couplings
	Bucket accessories for use with quick change devices
Breaker hammer	Breaker hammer directly mounted on the stick
	Breaker hammer for use with quick change devices
Drilling tools	Drill device directly mounted on the stick
	Drill tool for use with quick change devices
Grab bucket	Grab bucket directly mounted on the stick

You should pay attention to the problems mentioned above if the model you purchased has any of the above configurations.

02 Safety regulations

- 2-2 Safety general principles
- 2-4 Safety tips
- 2-5 Safety equipment
- 2-6 Safety signs
- 2-12 Safety in the workplace
- 2-14 Safe operation
- 2-24 Machine transportation and handling
- 2-25 Downtime for maintenance
- 2-27 Fire, explosion and poisoning prevention
- 2-28 Battery
- 2-30 Hydraulic system

Following the relevant safety regulations in this manual can avoid most accidents that endanger the operation and maintenance of the machine. Before you operate or overhaul the machine, you should read and understand all the safety information in this manual and the safety diagrams of the machine.

The safety-related content in this manual points out the situations that may occur during the normal operation and maintenance of the machine, and gives possible solutions to these situations.

The content of the relevant safety aspects can be found in the chapters of this manual and that together with the content of this chapter constitutes a comprehensive guide on safety in this manual.

The safety information in this manual and on the machine will not include all potential hazards and all possible countermeasures. If you use the methods or actions that are not recommended or permitted in this manual or on the machine, you are responsible for taking necessary measures to ensure safety.

Under no circumstances shall it engage in the use or operation prohibited by the instruction.

This excavator should be operated and maintained by trained and qualified personnel.

Before starting, all functions of the machine shall be checked. If you find the machine is abnormal, stop it immediately to find out the cause, and work after troubleshooting.

The inspection and maintenance should be carried out in strict accordance with the provisions of this manual, and the operator should work and operate in accordance with the operating methods, safety regulations and the working range of the machine specified in this manual.

If you are under the influence of alcohol or drugs, please do not operate or maintain the machine, it will make you and the people around you very dangerous.

You must understand the content expressed by relevant signals and gestures.

When driving on the road, you must be familiar with the relevant laws and regulations of the country or region and strictly abide by it.

Please make sure there is no other person in the working area before operating the machine.

This machine is only used for normal excavation conditions on the ground, please do not use it under dangerous conditions such as underwater, culverts, explosive places and toxic environments.

1. Warning signs



In this manual, this warning sign points out important information about safety. When you see this sign, you should carefully read the information and advice behind the sign to avoid possible casualties.

2. Safety reminders

- This instruction provides precautions, signs and descriptions of potential hazards for the safe use of the machine. Before operating, maintaining or repairing the machine, please read this manual and the safety signs affixed carefully, and work in accordance with the relevant procedures.
- The safety reminders of this machine are indicated with words such as "**Danger**", "**Warning**" or "**Caution**". The following are their corresponding explanations:



DANGER

It means that if it is not avoided, the consequences of the danger will result in death or serious injury. It is only applicable to the few occasions where the most serious danger exists.



WARNING

Indicates that if it is not avoided, the potentially dangerous consequences may result in death or serious injury.




CAUTION

Indicates that if it is not avoided, the potentially dangerous consequences may result in low or moderate injuries, and can also be used to remind unsafe operations that may cause personal injury.

1. Protective equipment for operators

- 1) The operator must wear tight-fitting and suitable work clothes, safety helmets, working leather shoes and other related safety protection equipment (such as: protective earplugs, gloves, protective glasses, seat belts, etc.) before operation or maintenance.
- 2) If the operator's hair is too long, please tie it up and cover it with a safety cap to prevent it from being entangled by the machine.
- 3) The user must provide emergency medicines in the machine, conduct regular inspections, and add medicines when necessary, so that they can be used when they are urgently needed.
- 4) Before operation or overhauling, please be sure to check whether all protective equipment functions normally.

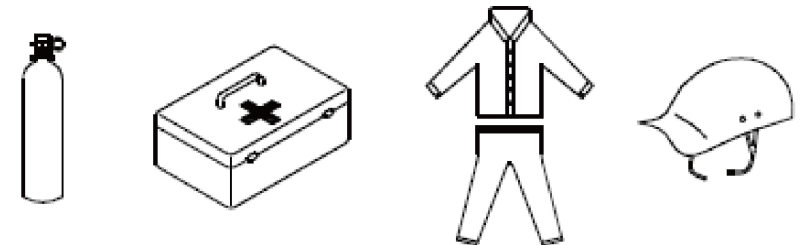

**WARNING**

Failure to understand the safety signs or loss of safety signs may result in injury or death. Please replace the missing or damaged signs in time, and keep the surfaces of all safety signs clean and easy to distinguish.

Before operating, maintaining and repairing the machine, you must carefully read the instruction manual and the warning signs affixed to the machine to ensure that you fully understand its contents and follow the relevant procedures.

Check the signs before starting the machine every day. If you can't see clearly, please clean it.

Please use cotton cloth, water and soap when cleaning the signs. Do not use organic solvents, gasoline, etc., as that will easily cause the signs to fall off.

If the signs are damaged, lost or illegible, please replace them. If the label is on the part that needs to be replaced, make sure that the new part is equipped with a sign.

Please contact our agent to obtain a new safety sign.

1. Classification of safety signs


The safety signs in this manual and on the machine adopt "image-text safety sign" and "graphical safety sign".

A. Graphic safety signs


This kind of safety sign uses graphics to show safety warning information, which is easy to understand and clear at a glance.

**B. Image-text safety signs**

This kind of safety sign is illustrated with images and corresponding text instructions, which are used for those places where the graphics cannot fully express the safety information and need to be explained in combination with words.

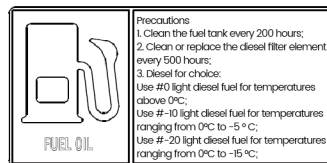**2. Safety sign pasting location**

The sign shown in the graphics is only the "safety sign" part of all signs, and the rest of the function signs will be introduced in the following chapters.

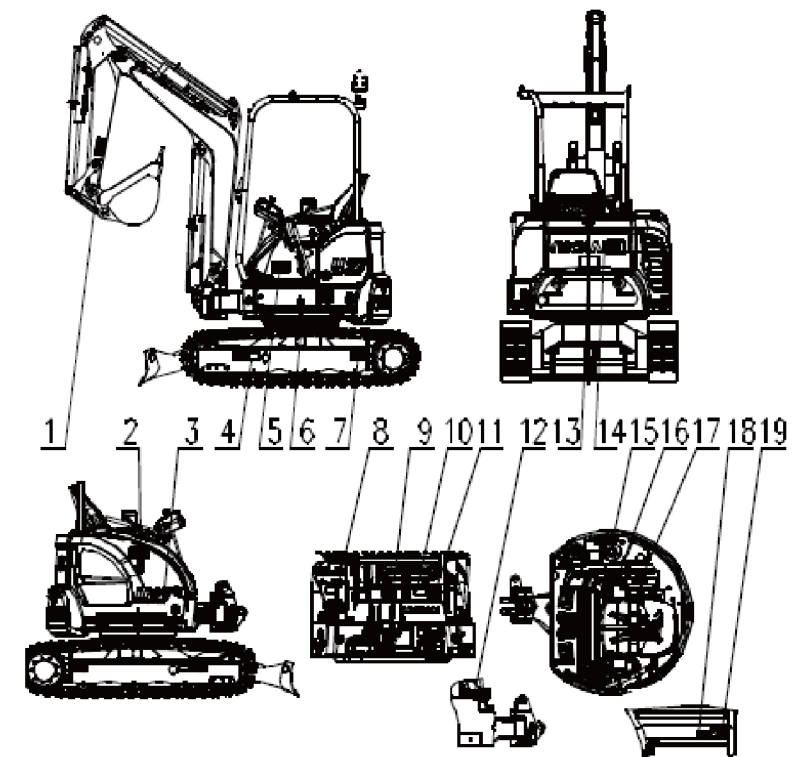


3. Safety labels and other signs

1) Pay attention to and stay away from the working devices

Movement of the working devices can cause personal injury. A safe distance must be kept from the working area of the working device.



2) Hydraulic oil refueling sign

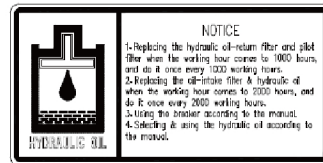

3) Right sign




4) Warning sign




5) Rotation center sign




6) Warning sign

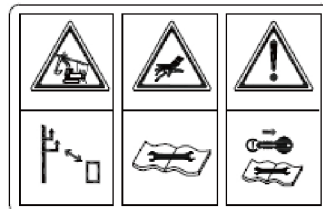

7) Lifting combination sign

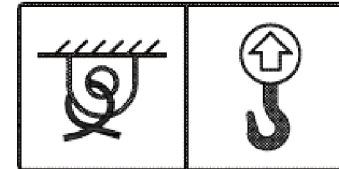

8) Warning sign

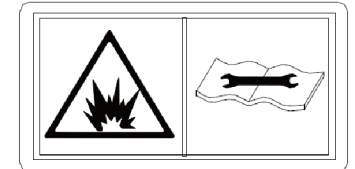


9) Warning sign




10) Read the instructions sign



11) Lubrication sign

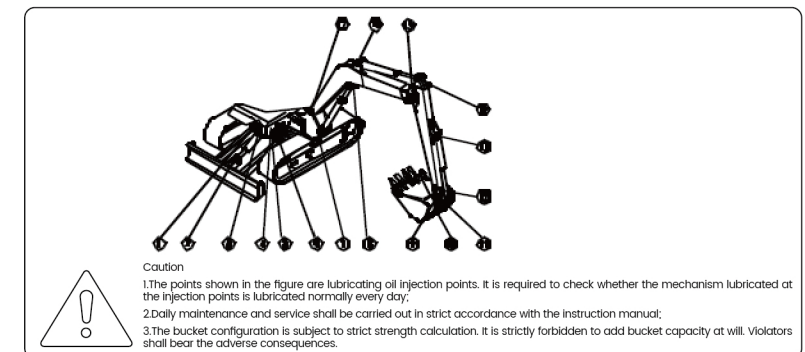

12) Fuel filling sign

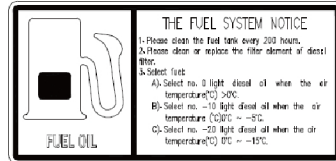

14) Tail trademark




16) Throttle sign



18) Manipulation sign




13) Safety sign

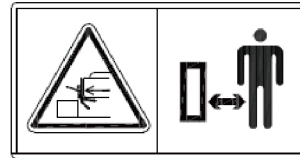


15) Warning sign



17) Bulldozing operation

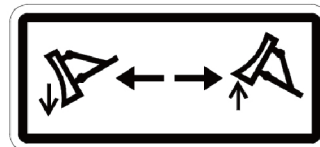

19) Lifting sign of whole machine

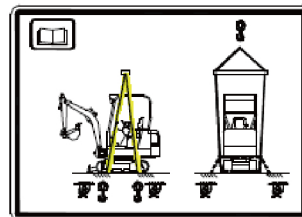

20) Please keep safe when getting on or off the machine



When getting on and off the car, move slowly, grab the handrails on both sides, face the machine, and use the steps and track shoes on the machine.

21) Stop the engine sign



22) Motor warning sign



23) Fire sign




24) Maintenance warning board



Know the area where you will work as much as possible in advance. Please check:

1. The location of the slope.
2. Open ditch.
3. Falling objects or hanging objects.
3. Soil condition (soft or hard).
4. Standing water and swamp area.
5. Rocks and stumps.
6. Boundary of buried foundations, pillars or walls.
7. Boundary of buried garbage or filling soil.
8. Holes, obstacles, mud or ice.
9. Traffic volume.
10. Dense dust, dense smoke, dense fog.
11. The exact location of buried or suspended pipelines for electricity, gas, telephone, water, sewage or other public pipelines. If necessary, ask the utility company to mark, close or move these facilities before you start work.

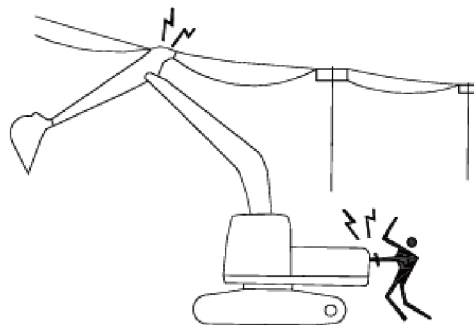

WARNING

Before starting the excavation project, please contact the local utility service system and department.

12. When constructing in a building, figure out the headroom for the head, the porch and the aisle, etc., and the load-bearing capacity of the floor and ramp. Ensure adequate ventilation during indoor operation. What you are unclear about will hurt you.

13. Understand the precise distances between wires, telephone lines and machines, and distances between machines and the ground. If possible, it is best to cut off the power supply. If you can't cut off the power, ask the signal-man for guidance.



WARNING

Touching or approaching the power supply or the machine connected to the power supply can cause electric shock. Do not let any part of the machine get close to the power cord in the air. Unless necessary safety precautions have been taken. Please be very cautious.

14. Know the depth of underground gas pipes, cables, telephone lines and water pipes, and avoid these areas during operation, so as not to damage these public facilities.



WARNING

If you look in from the damaged cable end, the cut optical fiber will seriously hurt your eyes.

15. It is forbidden to use this machine in culverts.

16. It is prohibited to operate in mud, mire and marsh.

17. It is forbidden to operate in places where there are chemical hazardous substances.

18. It is forbidden to use in explosive situations.




WARNING

It is strictly forbidden to carry or lift people with excavators.



WARNING

Before operating the machine, you must wear a seat belt, honking the horn, and confirm that there is no one around the working area before starting work.

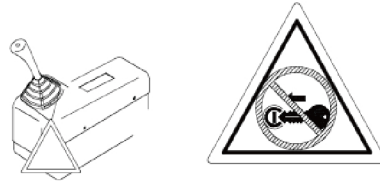

1. Start the engine

A. Safety rules for starting the engine

- 1) Before starting the engine, you must sound the horn to warn.
- 2) Except for the operator, no other people are allowed.
- 3) Only allow to sit on the seat to operate the machine.
- 4) It is not allowed to start the engine by short-circuiting the starter motor.
- 5) The machine must be preheated in cold weather.



WARNING


When a warning sign prohibiting engine starting is hung on the control handle, it is not allowed to start the engine.

B. After starting the engine

The following must be checked after starting the engine:

- 1) Whether the seat belt is fastened
- 2) Whether the moving parts such as working device, bulldozing device, walking, turning, and working device deflection are normal
- 3) Whether the sound, vibration, smell or instrument of the machine is abnormal
- 4) Whether there is leakage of oil and fuel.



2. Walking and turning

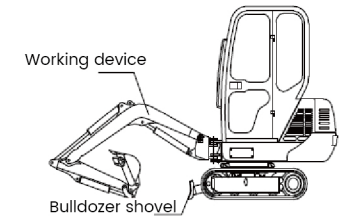

- 1) Please turn the upper part of the machine platform to a proper position before walking. The working device and the bulldozer shovel are in the same direction. If the working device and the bulldozer shovel are in the opposite direction, the operation is reversed.
- 2) Honk the horn before walking and turning to warn people in the working area.
- 3) The excavator must walk and work on a solid ground that is 1.5 times larger than its width.
- 4) If there is an invisible area at the rear of the machine before the machine is backed up or rotated, a signal commander shall be arranged.
- 5) Close and lock the cab door before walking. The cab windows, flip windows and sunroof are allowed to be opened, but they must be locked.

Safety rules when walking

- 1) When the machine is walking on a flat road, you must lower the boom, retract the stick, and maintain the best position of the center of gravity. Keep the bottom of the bucket at a distance of 40-50 cm from the ground.
- 2) When the machine is walking on rough and uneven roads, you should walk at a low speed and do not turn suddenly, otherwise it may cause the machine to overturn and endanger your personal safety.
- 3) The machine cannot walk on the obstacles leaning to one side, which may cause the machine to tip over.

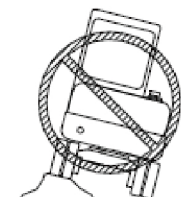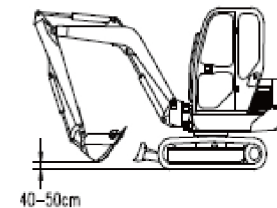


- 4) When the machine is walking or in operation, be sure to keep a safe distance from people, buildings or other machines to avoid contact with them.
- 5) When walking through underground passages, under bridges, or under power lines and other places with limited heights, be sure to have gesture commands. And pay attention to keeping a safe distance from the commanding personnel.
- 6) The platform must be locked when going uphill or downhill.
- 7) When passing over bridges, buildings or supports, first confirm whether they are sufficient to support the weight of the machine.
- 8) When walking on the highway is needed, consult the local traffic management department first, and get their permission before driving on the highway.


3. Walking or working on a slope

Excavator walking and working on slopes are extremely dangerous, so be careful.


- 1) It is recommended not to go up and down on long slopes greater than 20 degrees.
- 2) When the machine is working, especially when moving uphill and downhill and working on dangerous areas, the safety belt must be fastened.
- 3) When the excavator is moving uphill, the drive wheel should be in the downhill direction, the boom and stick are fully extended parallel to the slope, the bucket teeth are 20-30 cm away from the ground, the platform is locked, then it goes uphill at a low speed.
- 4) When the excavator is moving downhill, the platform should be locked, the drive wheel should be in the uphill direction, the boom and stick are fully extended, the bucket teeth are 20-30 cm away from the ground. Go downhill at low speed.

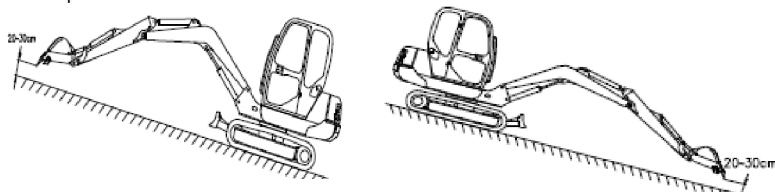

- 5) Do not make a turn on the slope or cross the slope. Be sure to go down to a flat place to change the position of the machine, and then go up the slope.

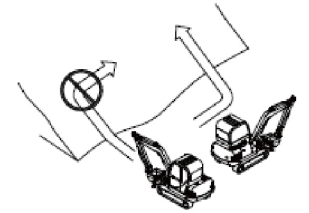

- 6) When working on a slope, you must start from a high place and gradually dig down the slope, with the bulldozing board at the back and pressing the ground, and the unloading position should be in the uphill direction.

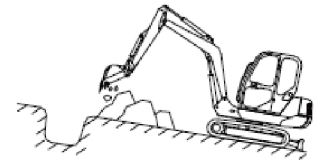


- 7) Walk on grass, fallen leaves or wet steel plates at a low speed, because even in the case of a very small slope, the machine is in danger of slipping.
- 8) It is strictly forbidden to turn sharply when going uphill or downhill, otherwise the machine will tip over.
- 9) When stopping on a slope, the front bulldozer shovel must be inserted into the soil, and the bucket must be lowered and inserted into the soil at the same time. After the machine stops stably, the engine is allowed to stop and the driver can get off.




DANGER


Stopping on a slope is very dangerous! If it is unavoidable, the following must be followed: if the engine stalls on a slope, immediately lower the bucket to the ground, and place all handles in the neutral position, and then restart the engine. Even if the machine stops for a short time on the slope, lower the bucket to the ground, pull all the handles in the neutral position, and place enough fixed obstacles at the lower end of the crawler track.

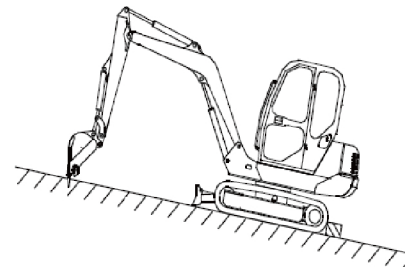

10) It is strictly forbidden to drive or work on a slope with a longitudinal gradient greater than 25 degrees.

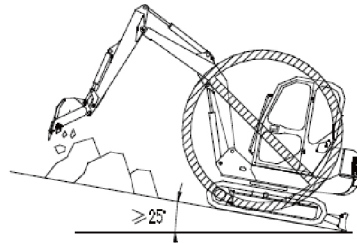

11) It is strictly forbidden to drive or work on slopes with a lateral gradient greater than 15 degrees.

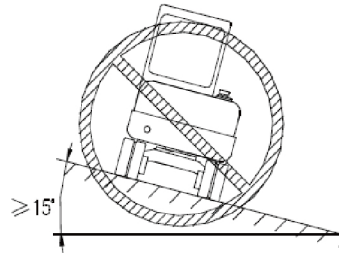


12) Keep the balance of the machine as much as possible, and it is strictly forbidden to walk on rocks or cross obstacles.


13) No direction change is allowed on slopes.

14) When going uphill, make sure that the engine and hydraulic oil have been properly preheated, otherwise it will cause an accident.

15) When the excavator is on a slope with two tracks in a 90-degree direction, the rotation is very dangerous and should be avoided. When turning is necessary, make the bucket close to the ground and close to the machine at the same time, and turn it slowly with the track towards the top of the slope.

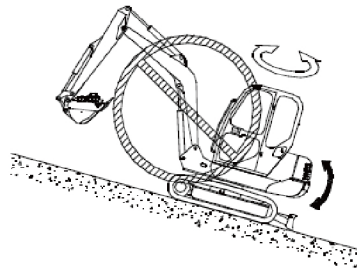

16) When working on a slope, the machine may lose its balance and tip over when operating the swing or the working device. This can cause serious injury or equipment damage. Therefore, when performing these operations, use soil to build a strong platform that can keep the machine level.

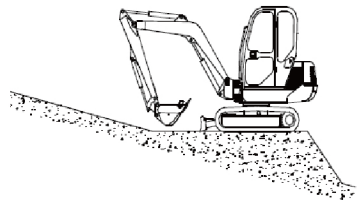

4. Safe excavation



WARNING


The operator must memorize the functions of each joystick to avoid wrong operation.




WARNING

Improper use of the excavator can cause tipping over and skidding. Memorizing this section is a correct guide to ensure your personal safety.

- 1) Irrelevant people in the excavation site should be cleared out before work.
- 2) Confirm that the worksite can fully support the machine before driving in.
- 3) Keep the two tracks of the excavator on the same plane as much as possible before operation.
- 4) Before digging, make sure that there are no cables, air pipes or water pipes under the worksite, or the specific location has been clarified.
- 5) When the machine is moving backward (such as digging a trench, etc.), it should be observed whether the displacement route is smooth and whether there are obstacles. It can be moved only when safety is ensured, otherwise, it will cause the machine to tip over.

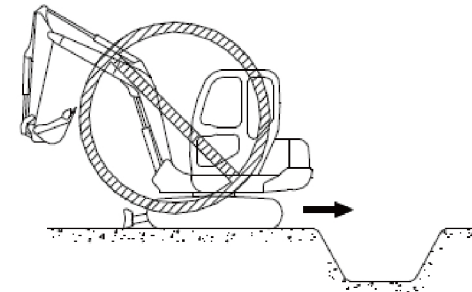

- 6) When the bucket is subjected to special resistance on the ground, do not walk or rotate, otherwise, the machine will be damaged.

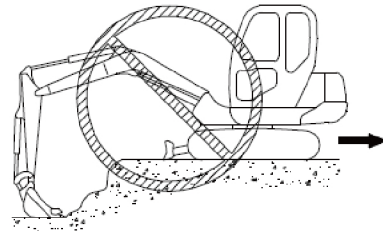

- 7) During operation, if the hydraulic cylinder is operated to the end of the stroke, the force will act on the limit ring inside the cylinder, thereby reducing the service life of the machine. To prevent this from happening, a small margin should always be kept when operating the hydraulic cylinder.


- 8) When digging deeply, avoid the bottom of the boom or the hose of the bucket cylinder from touching the ground.

- 9) When operating the machine, avoid foreign objects touching the boom, stick, bucket and cab.


- 10) When the machine is rotating, avoid touching the engine hood and rear counterweight.

- 11) When lowering the boom, try not to stop suddenly to avoid machine operation damage and improve work safety.


- 12) Do not dig into the machine body.

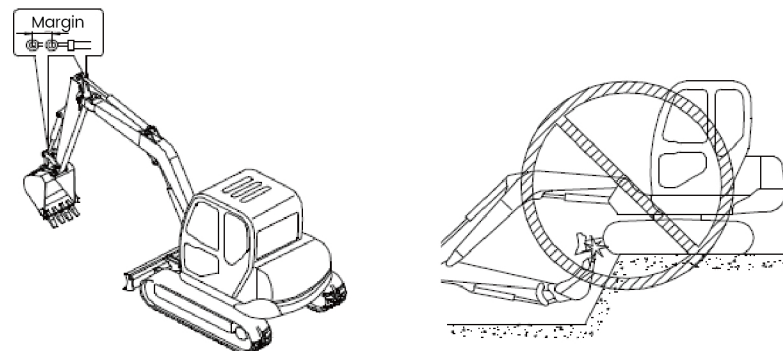


- 13) Do not excavate when the track is off the ground, otherwise, the machine and structure will be damaged.

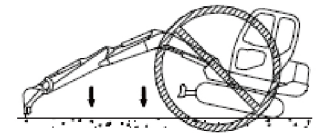


- 14) Do not use the weight of the machine to increase the digging force of the machine.

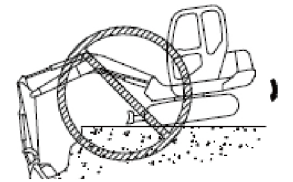



- 15) Do not use the falling force of the bucket as a pick, breaker or pile driver, as this will cause excessive force on the rear of the machine. This will not only damage the machine but also be very dangerous.

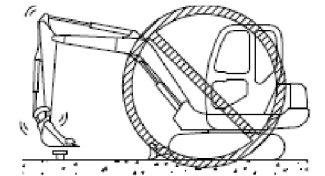


- 16) Do not use the bucket too much to level the road, otherwise, the components will damage the machine due to overload operation.

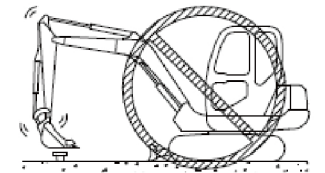


- 17) Do not use the falling force of the machine to excavate, otherwise, the machine will be damaged.

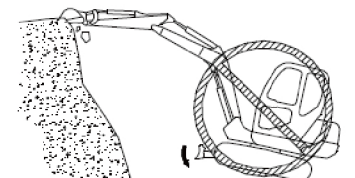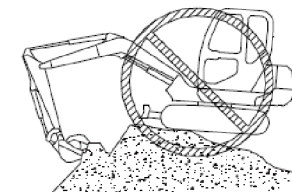


18) Do not use turning force to compact the soil or damage mounds and walls. When turning, do not insert the bucket teeth into the soil, as these actions will damage the working device.

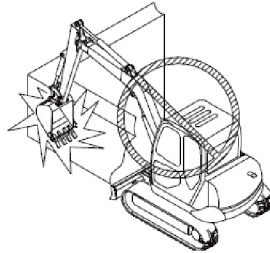

19) Do not dig the bucket into the ground and use walking force to dig, which will make the rear of the machine bear excessive force.

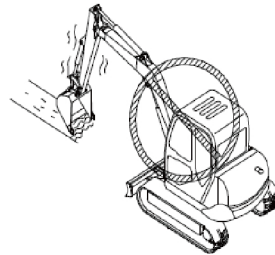

20) Do not dig the working surface under the suspended part, otherwise, there will be the danger of falling rocks or the suspended part collapsing and hitting the machine.

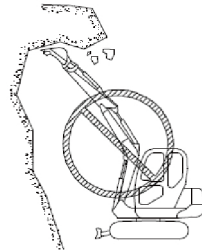

5. Anti-dumping, anti-skidding and disposal during operation




WARNING

- ▲ 1) When you have to turn on a ramp, you can only turn in a large arc. When the machine is about to turn to the right, extend the boom and stick to the left, the bucket is about 30 cm away from the ground, and lock the platform. Vice versa.
- ▲ 2) When skidding, immediately press the bulldozer shovel and bucket to the ground.
- ▲ 3) When the machine is overturned, the driver must not jump off the car, but should firmly grasp the handrail in the cab or the column of the cab. Jumping from a car can easily cause casualties.


The machine is extremely easy to tip over in the following situations and must be avoided:

- 1) The machine shifts on uneven ground, with two tracks high on one side and low on the other, or more than half of one track is suspended in the air.
- 2) When one track contacts loose soil and the other track contacts solid soil.
- 3) When there is a cave or mud pit in the ground on one side of the machine.
- 4) When walking on a slope with a longitudinal gradient greater than 25°, and unloading heavy objects in the downhill direction.
- 5) When walking on a slope with a lateral gradient greater than 15°, and unloading heavy objects in the downhill direction.
- 6) On the slope, the two tracks and the slope are in a direction of 90°, and the platform rotation is greater than 90°.
- 7) When working on a slope, the machine turns sharply, the platform turns quickly or stops suddenly.
- 8) When the machine swings down 180° on a slope.
- 9) When the road surface where the machine moves on is uneven during the backward operation (trenching, etc.).
- 10) When the machine is digging deep to the bottom of the machine body.
- 11) Walking on the frozen ground.
- 12) When the two tracks are stuck with oil or lubricating oil, the machine is easy to slip.

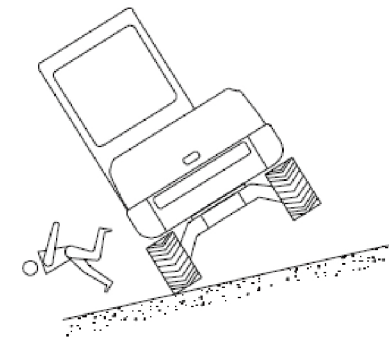

The transportation (loading and unloading) of excavators must strictly comply with the safety principle.

- The national and local industry related rules for safe transportation (loading and unloading) or good habits must be observed when transporting excavators.
- When transporting the excavators, it is strictly prohibited to carry any personnel and other objects in the cab of the excavator, and it is strictly prohibited to mix loading and transportation of man and machine.
- When loading and unloading the excavator, it is strictly prohibited to have any person and objects that may hinder the loading and unloading within the moving radius of the crane boom (including the lifted objects)
- When loading and unloading the excavator, it is strictly prohibited to have any person and objects that may hinder the loading and unloading within the traveling range of the loaded and unloaded excavator (including the turning range of the excavator).
- In addition to using the hoisting method or driving directly from the wharf, the excavator can also drive on the transport vehicle by using two approach slabs with sufficient strength. The inclined angle of the approach slab shall be less than 15°, the slope length shall be more than 3.5 times of the height, and the width of the approach slab shall be equal to 1.2-1.5 times of the track width.
- Before going up and down the ramp, be sure to put down the positioning handle of the rotary platform to prevent the platform from rotation.
- It is not allowed to pull any other handle except the walking handle when going up and down the slide way.

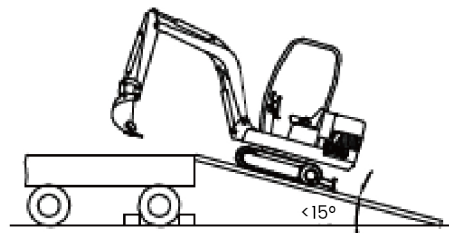

- The machine must be loaded or unloaded on solid and flat ground.
- When driving the machine on the road, make sure that clearance flags, lights and warning signs are ready and that others can see these signs; Ensure that the "Slow Moving Vehicle" sign can be seen by the vehicles behind.
- Crawler type machines may damage the road surface and may be subject to some restrictions when driving on the road surface, so please use trucks to transport the machines when driving on these roads.

02 | Safety regulations | Downtime for maintenance



WARNING

When carrying out any maintenance work on the machine, the warning sign "No Operation" must be hung on the joystick.

- The excavator must be parked on solid and flat ground.
- After the excavator is stopped stably, you must lower the bucket to the ground, run the engine at idle speed for three minutes, stop it and pull out the switch key.
- Release the pressure from all hydraulic systems.
- When the machine is forced to stop on a slope, the sufficient obstacles should be set up in the downward direction of the crawler tracks on both sides.
- Be sure to keep a certain distance from other machines when parking.
- When repairing the electrical system or performing electric welding operations, it is necessary to remove the negative cable of the battery to prevent the flow of current.
- Before servicing the machine, if you need to support the machine or accessories to work, support the machine or accessories firmly, and do not work with only one jack supporting the machine.

02 | Safety regulations | Downtime for maintenance

- After the machine is started, do not lubricate or repair, and do not let your hands, feet or clothing contact the power rotating parts.
- To carry out maintenance work while the engine is running, the machine must be supervised by someone.
- Do not put the loose items in your pocket to prevent them from falling into the moving parts.
- The high pressure liquid will splash the eyes or skin, so it should be avoided during maintenance.
- Clean up all the sundries inside the machine to prevent possible wrong operation, causing injury to personnel or damage to the machine.
- Properly dispose of waste liquids, do not pour oil into the ground, drains, streams, ponds, or lakes, and comply with environmental protection regulations when draining engine oil, fuel, antifreeze, plastics, battery solution and other hazardous wastes.

02 | Safety regulations | Fire, explosion and poisoning prevention

- Avoid contact with wires when the excavator is transported, walked, or excavated, otherwise it will cause serious casualties.
- Excavator electrical appliances and wiring should be checked frequently. If they are found to be damaged, or aging, they must be replaced in time to prevent a short circuit of electrical wiring and causing fire.
- Keep the wire connectors clean and securely fixed. Check whether the wires are loose or damaged every day, tighten loose joints or wire clamps, and repair the damaged wires.




02 | Safety regulations | Fire, explosion and poisoning prevention

- Do not place flammable and explosive materials inside the excavator to prevent fires.
- When refueling, the engine must be stopped. Refueling at a place far away from the fire and does not leave the machine.
- When refueling, do not allow the fuel to spill onto overheated surfaces or parts of the electrical system.
- After refueling, wipe off the spilled fuel or engine oil, and tighten the fuel and engine oil tank caps.
- Remove the leaves, wood chips, paper chips, and other flammable materials accumulated or stuck to the engine, exhaust pipe, muffler, and engine compartment in time.
- Do not place oil-soaked rags in the machine to avoid spontaneous fire and burning.
- The user should configure a fire extinguisher in the machine and put it in a place where it is easily accessible.
- When welding the machine, it is strictly forbidden to do without isolating the hydraulic oil pipeline and the fuel pipeline.
- To prevent fires caused by hydraulic pipelines: check whether the clamps, guards, and cushions of all hoses and pipes are firmly fixed in place. If it is loose, it will vibrate and rub against other parts during operation, causing hose damage, high pressure oil spraying, and fire hazards or serious injuries.
- Keep the battery away from fire and avoid high temperature, otherwise, it will cause an explosion.
- For excavators with a sealed cab, check the tightness of the intermediate partition to prevent engine exhaust gas from entering the cab and causing driver poisoning.
- It is strictly forbidden to work in poorly ventilated areas to prevent the driver from suffocating.
- In the event of a fire, do not use water to extinguish the fire. Use a powder fire extinguisher or sand to extinguish the fire. You can also use a cover or tarp to extinguish the fire.

Safety rules for batteries

The battery electrolyte contains sulfuric acid, which generates flammable and explosive hydrogen gas. Wrong operation can cause serious injury or fire. Therefore, the following precautions must be observed:

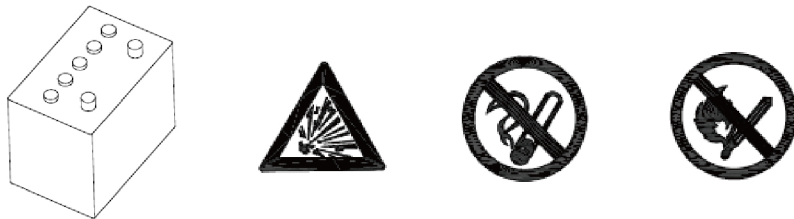

- The battery cover is equipped with an indicator to display the battery charge state. When the indicator displays in green, the battery can be used normally. The battery shall be charged in time when the indicator displays in black, and the battery shall be replaced immediately when the indicator displays in white.
- When operating the battery, wear safety glasses and rubber gloves.
- Do not smoke or use open fire near the battery.
- If the eyes, clothes or skin are splashed with sulfuric acid, rinse them with plenty of water and seek medical attention immediately.
- Before operating the battery, turn the key switch to the OFF position.
- Check the electrolyte level with a flashlight, and turn off the engine when checking.
- The swelling at the end of the closed battery indicates that the battery has frozen. When the battery is frozen, do not charge the battery or jump-start the engine.
- Do not heat the frozen battery over 15°C, otherwise, the battery may explode.

Anti-explosion of battery



WARNING

Electric sparks or flames will cause the hydrogen in the battery to explode. To prevent explosions, please note:

- ▲ 1) When disconnecting the battery cable, first disconnect its cathode (-) cable;
- ▲ 2) When connecting the battery cable, the cathode (-) cable should be connected last;
- ▲ 3) Metal components cannot be used to short-circuit the terminals of the battery;
- ▲ 4) Do not weld, grind or smoke near the battery.

Due to the risk of sparks, follow the below steps.

- Install the battery firmly to the determined position.
- Do not let tools or other metal objects touch between the battery terminals. Do not drop tools or other metal objects near the battery.
- Connect or disconnect the positive and negative poles of the battery in the correct order. The battery terminals should be firmly fixed.
- When charging the battery, flammable hydrogen will be generated. Therefore, before charging, remove the battery from the machine, put it in a well-ventilated place, and remove the battery cover.
- Tighten the battery cover firmly.

NOTE

When repairing the electrical system or performing electric welding operations, remove the negative terminal of the battery to prevent the flow of current.

1. Safety rules for high pressure oil

There is always pressure inside the hydraulic system. When inspecting or replacing pipes or hoses, be sure to check whether the pressure in the hydraulic oil circuit has been released. If the oil circuit is still under pressure, serious injury or damage will be caused, so follow these regulations:



- 1) Do not check or replace when there is pressure in the hydraulic system.
- 2) The surrounding area is wet if there is any leakage in the pipe or hose. So check if the pipe or hose is broken, and the hose is swollen. Wear goggles and leather gloves when performing an inspection.
- 3) The high pressure oil leaking from the small holes will penetrate into the skin, and there will be a risk of blindness if it directly touches the eyes. If you are injured by high pressure oil hitting your skin or eyes, rinse with clean water and contact your doctor for treatment immediately.

2. Safe operation of high pressure hoses

If the high pressure hose leaks oil or fuel, it may cause a fire or operation failure, resulting in serious injury or damage. If the bolts are found to be loose, stop the work and tighten the bolts to the specified torque. When welding the machine, it is strictly forbidden to do it without isolating the hydraulic oil pipeline (hose). If any damage to the hose is found, stop the operation immediately and get in touch with the Boleo agent.

If the following problems are found, replace the hose:

- 1) Damaged or leaking hydraulic pipe joints;
- 2) The cladding is worn or broken, or the steel wire of the reinforcing layer is exposed;
- 3) The cladding swells in some places;
- 4) The movable part is twisted or crushed;
- 5) There are impurities in the cladding.


3. Safety rules for high pressure oil

The hydraulic oil that is not cooled during or after work is at high temperature and high pressure. To prevent scalding caused by sprayed oil or contacting hot parts when checking or draining oil, wait until the oil cools to the temperature that can touch the cover or plug before starting operation. Even if the oil has cooled, slowly loosen the cover or plug before removing the cover or plug to drain the internal pressure.

4. Release the internal pressure of the hydraulic system

The hydraulic oil in the hydraulic pipeline is at high temperature and high pressure when the machine is working intermittently. The oil may spray out when removing the oil port, so turn the oil filler cap before removing the cap to relieve internal pressure.

- 1) If the working device is not in the state shown in the figure, start the engine at a low speed, extend the bucket cylinder, and retract the stick cylinder. Then land the bucket and turn off the engine.
- 2) Within 15 seconds after turning off the engine, turn the start switch to the ON position, and operate the joystick (working device, walking) in each direction to release the internal pressure.

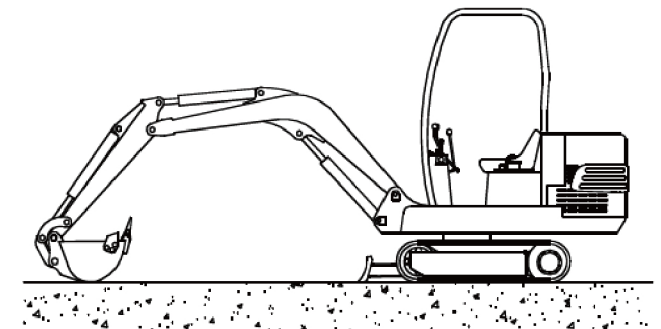

5. Safe operation of accumulator




WARNING

The accumulator is a component filled with high pressure nitrogen, which may cause explosion and other hazards if used incorrectly. The accumulator cannot be disassembled, and the operation such as drilling and welding also cannot be carried out on it. Avoid the accumulator from being close to the fire source, and avoid collision and impact on the accumulator. Professional personnel shall be invited to dispose the accumulator.

The machine is equipped with accumulators in the control pipeline. The accumulators in the control pipeline are the pressure storage devices. When these devices are installed, the control pipeline can be operated for a short time even after the engine stops.

The working device can be lowered under its own weight by operating the joystick.

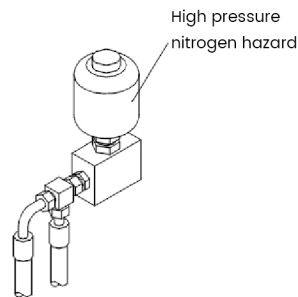


Pressure relief method for the control pipeline of the machine equipped with accumulators

- 1) Lower the working device to the ground, and then close the hydraulic breaker hammer or other accessories.
- 2) Turn off the engine.
- 3) Turn the key of the start switch to the ON position again to make the current flow in the circuit.
- 4) Adjust the safety lock control lever to the free position, and then operate the joystick of the working device and the accessory control pedal (if equipped) in the front, rear, left and right directions to release the pressure in the control line.
- 5) Adjust the safety lock control lever to the LOCK position in order to lock the control lever and the accessory control pedal.

03 Parts introduction

- 3-2 Overview of controls
- 3-3 Security lock part
- 3-4 Switch assembly
- 3-5 Electrical control panel
- 3-6 Panel meter
- 3-7 Operation of working device and rotation mechanism
- 3-9 Walking manipulation
- 3-9 Throttle handle and shutdown handle
- 3-10 Driver's seat
- 3-10 Seat belt

1. Main manual power switch (inner)
2. Left (auxiliary) pedal
3. Left walking joystick
4. Right walking joystick
5. Right (auxiliary) pedal
6. Instrument
7. Right pilot joystick
8. Manual throttle
9. Bulldozing pilot handle
10. Left pilot handle
11. Seat
12. Hydraulic pilot safety handle
13. Auxiliary oil return switch handle

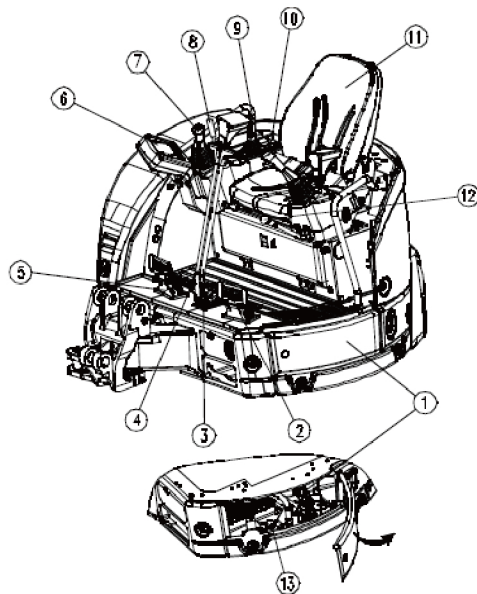

1. Safety lock

WARNING


The security locking system of the working device is an important part of the machine safety system. When the driver leaves the cab, it must be locked safely. If the safety lock handle is not in the locked position, the handle may move, causing the working device or platform to move, which may result in an accident.

Pilot lock and unlock


Pull the pilot safety lock handle lever to the end position and lift the left control box to start the ignition; The general control of the pilot system does not supply oil, and the machine working device and platform rotation cannot work (except for left and right walking control), which plays a role in safety protection.

Push the pilot safety lock handle forward and press it to the bottom. After the left control box is lowered, the pilot system is connected to the oil pressure source, and the machine can work normally.

Pilot safety lock handle

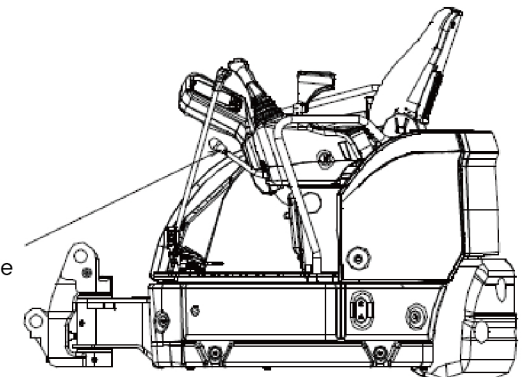

Switch assembly 1 for left and right control box

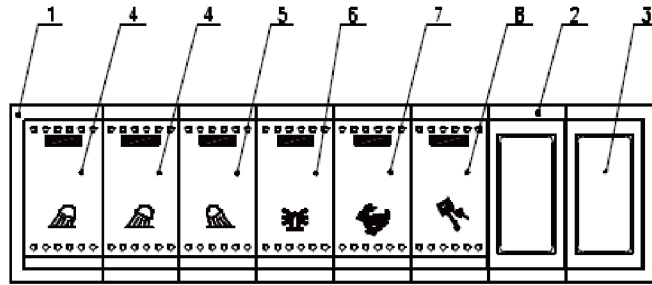

1. Side single frame

2. Middle single frame

3. Cover plat

4. Front work lamp switch for boom and cab shed

Press the rocker switch, it is ON on the sign side, and OFF on the opposite side.

5. Rear work lamp switch for cab shed

Press the rocker switch, it is ON on the sign side, and OFF on the opposite side.

6. Warning light switch

Press the rocker switch, it is ON on the sign side, and OFF on the opposite side.


7. Fast walk switch

Press the rocker switch, and the walking motor is for walking in the high speed with small torque.

8. Deflection switch (or on the pilot handle)

Press the rocker switch and operate the left pilot handle to make the deflection head to move left or right;

Press the rocker switch again, and the platform be switched to rotate left or right by default by using the deflection head.

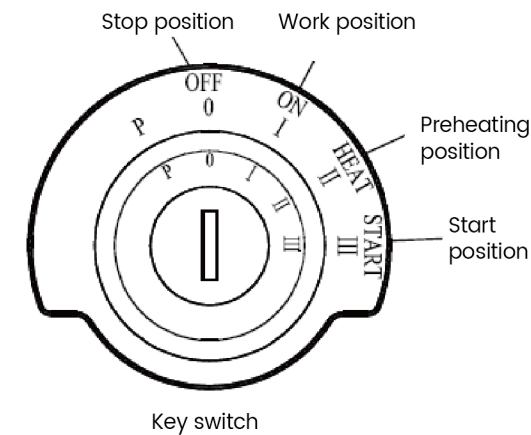

1. Key (start) switch operation

Stop position:

The electrical system of the whole machine stops.

Work position:

The electrical appliances of the whole machine work normally.


Start position:

Turn the key clockwise from the starting position to the start position, and the engine start motor begins to run.

Preheating position:

Turn the key to the preheating position, and the engine begins to preheat the intake air; the preheating indicator is on at this time. It shall be noted that the preheating time shall not exceed 30 seconds. Automatic reset can be performed in this position.

2. Cigarette lighter

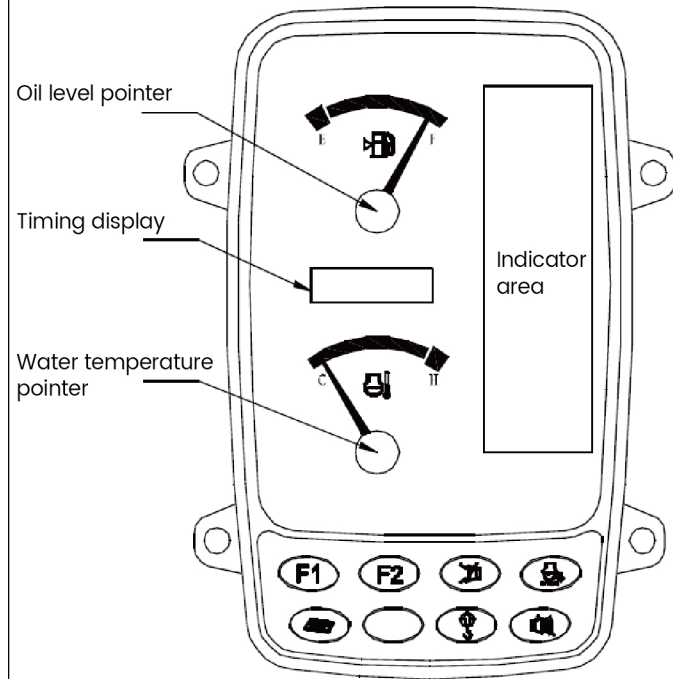

Operation of excavation equipment and platform rotation mechanism

A. Left pilot valve handle

Stick control:

The stick extends when pushing upward, and retracts when pulling backward.

Platform rotation:

The platform turns right when swinging to the right, and it turns left when swinging to the left.

Boom rotation:

The boom turns right when swinging to the right, and it turns left when swinging to the left.


B. Right pilot valve handle

Boom control:

Lower the boom when pushing forward, and lift when pulling back.

Bucket control:

The bucket turns outwards when swinging to the right, and turning inwards when swinging to the left.

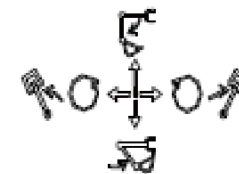

Left working device joystick



Right working device joystick


03 | Parts introduction | Operation of working device and rotation mechanism

Selection and control of rotation and deflection (this hand button switch handle mode can be selected)

Rotation and deflection are controlled by the right pilot handle. It is rotation action by default.

Press key 1 to execute deflection action.

Press key 2 to reset and execute the default rotation action.

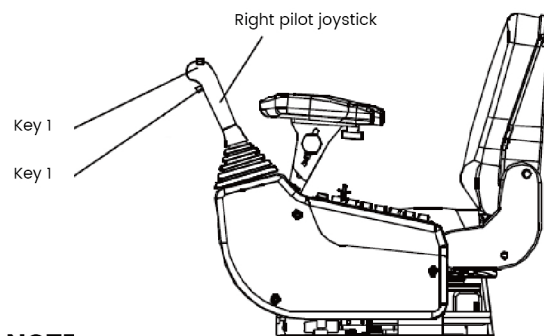

NOTE

If the right control box is equipped with a deflection switch, there is no such setting here.

Operation of the bulldozer shovel

Push the joystick down, and the bulldozer shovel cuts down. When pulling up, the bulldozer shovel is lifted.



Operation of auxiliary working devices


When the machine is equipped with auxiliary working devices, the auxiliary oil source can be connected by stepping on the foot pedal of the auxiliary working device.

03 | Parts introduction | Walking manipulation

Direction control

Operate the left and right walking joysticks to control the tracks walking on the left and right sides of the machine.

The unilateral control lever can realize the unilateral steering of the machine.

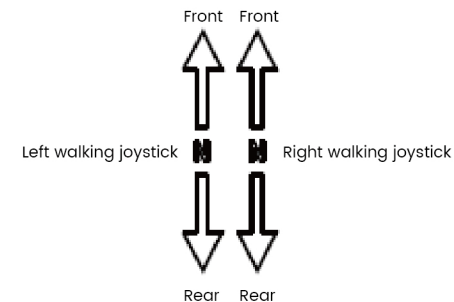

03 | Parts introduction | Throttle handle and shutdown handle


1. Throttle handle

Push the engine throttle handle forward to increase the throttle. Before stopping the engine, pull the throttle handle back to the end.

2. Shutdown handle


Before stopping the engine, pull the shutdown handle back to the end.

After stopping the engine, push the shutdown handle forward to the end.

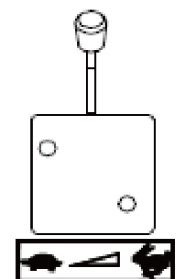

**WARNING**

Accidental tipping or sudden movement of the machine may cause injury or even death. Therefore, for safety reasons, remember to fasten the seat belt and adjust the seat before starting the machine.

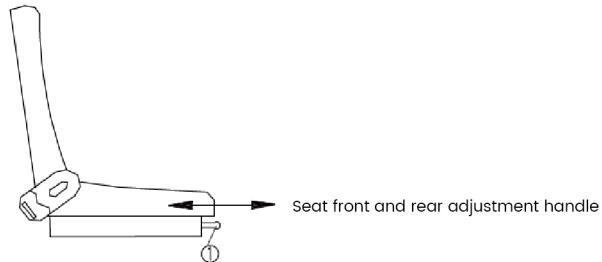**Seat front and rear adjustment:**

Pull the seat front and rear adjustment handles to allow the forward and backward movement. Loosen the handle and the seat will be locked.

NOTE

Stop the machine when adjusting the seat. After adjustment, gently shake the seat to ensure reliable locking.

**WARNING**

The seat belt is an important part of the machine safety system. Before operation, you must wear a seat belt. If you do not wear a seat belt, the cab shed or the machine may press on your body and cause injury when the machine tipped over.

**WARNING**

Before using the seat belt, check the installation of the seat belt for abnormalities. If the seat belt is worn or damaged, replace it.


- ▲ Even if you do not see any abnormality in the seat belt, you must replace the seat belt every 3 years. The production date of the seat belt is displayed on the manufacture date label of the seat belt.
- ▲ During operation, be sure to wear a seat belt.
- ▲ When wearing a seat belt, do not twist the seat belt.

1. Secure the seat belt

Hold the seat belt clip, check whether it is twisted, adjust the length of the seat belt, and then insert the tongue firmly into the buckle. Pull the seat belt slightly to check whether the seat belt is properly locked.

2. Remove the seat belt

Press the red button on the buckle and remove the tongue from the buckle to remove the seat belt.

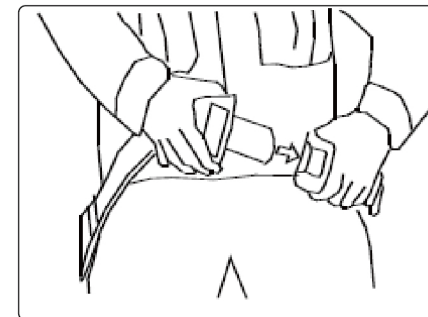

04 Operation guide

- 4-2 Preparation before operating the machine
- 4-3 Engine operation
- 4-9 In and out of the machine
- 4-10 Movement of the machine
- 4-12 Steering of the machine
- 4-13 Rotation of the machine
- 4-14 Operation of working device
- 4-16 Work on slopes or water
- 4-17 Get out of the muddy environment
- 4-18 Construction work guide
- 4-21 Removal and installation of bucket
- 4-22 Park the machine
- 4-23 After operation
- 4-24 Loading, unloading and transportation of machines
- 4-29 Working in cold/hot climates
- 4-31 Storage of the machine
- 4-33 Causes of technical failures and solutions

04 | Operation guide | Preparation before operating the machine

- 1) Excavators should be operated by trained drivers and meet the specific requirements for drivers in each region before they can be operated independently.
- 2) Drivers are strictly forbidden to manipulate before reading the user guide.
- 3) Drivers must wear tight-fitting and suitable clothing and relevant safety protection equipment adapted to the work before operation, such as safety helmets, leather shoes, gloves, protective glasses, seat belts, etc.
- 4) Check the machine carefully according to the usage requirements before starting every day.
- 5) Check whether the working device, oil cylinder, and hose are damaged.
- 6) Remove dust and dirt around the engine, radiator and battery.
- 7) Check the hydraulic device, fuel tank, hose, and joints for oil leakage (you can check whether there are obvious oil traces on the parking floor).
- 8) Check all parts of the lower frame (tracks, drive wheels, guide wheels, etc.) for damage and whether the bolts are loose. There is no looseness in the bolt connection between the frame and the platform.
- 9) Check that all meters and monitors are not damaged.
- 10) Clean the rearview mirror, check for damage, and adjust the angle so that you can see the correct field of view.
- 11) Check that the seat belt is not damaged.
- 12) Make sure that the correct maintenance has been carried out in accordance with the specified requirements.



WARNING

Before operating the machine, you should ensure that you have understood and memorized the contents of the safe operation of the machine in the "Safety Regulations" of this manual.

**WARNING**

Before starting the engine, please refer to the safety details in this manual. Read all safety signs on the machine. There must be no other people in the workplace. Before operation, learn and practice safe operation. When operating the machine, you must be clear about and follow the relevant operation and maintenance sections of the manual, and comply with the corresponding laws and regulations.

1. Check before starting the engine

- 1) Check whether the seat belt is fastened, honking the horn, and confirm whether there are people around the working area and on or under the machine.
- 2) Check whether each window glass and rearview mirror can provide a good field of vision.
- 3) Check whether there is dust or dirt around the engine, battery and radiator, and remove if there is any.
- 4) Check that there are no cracks, excessive wear or play in the working devices, cylinders, connecting rods and hydraulic hoses. If an abnormality is found, it must be replaced and repaired.
- 5) Check the hydraulic device, hydraulic oil tank, hoses, and joints for oil leakage.
- 6) Check the lower body (track, sprocket, guide wheel, etc.) for damage, wear, loose bolts, or oil leakage.
- 7) Check whether the display of the meter is normal, whether the working lights can work normally, and whether there is an open circuit in the electrical circuit.
- 8) Check whether the coolant level, fuel level, hydraulic oil level, and engine oil level are between the upper and lower limits.
- 9) In cold weather, it is necessary to check whether the coolant, fuel, hydraulic oil, battery electrolyte, engine oil, and lubricating oil are frozen. If it is frozen, the engine must be defrosted before starting the engine.
- 10) Check whether the hydraulic safety lock is in the locked state.
- 11) Check the working condition, direction, and position of the machine in order to provide relevant information for the operation.

2. Start the engine**WARNING**

When a warning sign prohibiting engine starting is hung on the control handle, it is not allowed to start the engine.

**WARNING**

Before starting the engine, you must confirm that the safety lock handle is in the locked position to prevent accidental contact with the joystick during starting, which may cause sudden movements of the working device and cause an accident.

**WARNING**

You should preheat the machine when starting the engine in cold weather. If the machine is not thoroughly preheated before operating the joystick, it will be slow to respond, which will lead to accidents.

**WARNING**

If the battery electrolyte freezes, do not charge the battery and do not start the engine by using a different power source. Doing so will cause the battery to catch fire. Before the battery is charged or the engine is started by using a different power source, the battery electrolyte must be dissolved. Before starting, check whether the battery electrolyte is frozen or leaking.

Before starting the engine, insert the key into the start switch and when it is turned to the ON position, check the display status of all the indicator and alarm lights on the digital combination instrument. If there is an alarm, please perform related troubleshooting first before starting the engine.

A. Start the engine at normal temperature

Turn the key clockwise to the ON position when the ambient temperature is above 5 degrees. The alarm indicator goes out to indicate that the machine can start normally. Continue to turn to the START position and keep it at this position for no more than 15 seconds. After the engine starts, release the key to make it automatically return to the ON position. If the engine fails to start, it will restart after 30 seconds.

B. Start the engine in cold temperature

Turn the key counterclockwise to the HEAT position for preheating when the ambient temperature is below 5 °C. The preheating is completed after about 6 seconds, the preheating indicator is off, and then turn the key clockwise to the START position to start the engine.

NOTE

The preheating time shall not exceed 30 seconds.

NOTE

The continuous starting time should not exceed 15 seconds; the interval between two starts should not be less than 30 seconds; if the engine cannot be started three times in a row, check whether the engine systems are normal.

**WARNING**

- ▲ 1) Do not turn the key while the engine is running. Because it will damage the engine at this time.
- ▲ 2) When dragging the excavator, do not start the engine.
- ▲ 3) Do not start the engine by short-circuiting the starter motor circuit.

Start the engine with the auxiliary cable**WARNING**

When the battery electrolyte freezes, if (1) you try to charge, or (2) jump-start the engine, the battery will explode. To prevent the battery electrolyte from freezing, keep it fully charged. If you do not follow these instructions, you or others will be harmed.


**WARNING**

The battery generates explosive gas. Keep away from sparks, flames and fireworks. Pay attention to ventilation when charging or using the battery in a confined area, and wear eye shields when working near the battery.

If the method of connecting the auxiliary cable is wrong, the battery may explode. So do it in accordance with the following regulations.


- 1) When using the auxiliary cable to start, two people should perform the starting operation (one sitting on the operator's seat and the other operating the battery).
- 2) When starting with another machine, do not let the two machines touch.
- 3) When connecting the auxiliary cable, turn the key switches of the normal machine and the malfunctioning machine to the OFF position.

Otherwise, when the power is turned on, the machine may move.

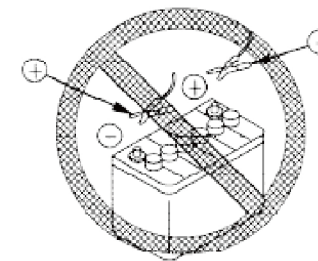

- 4) When installing the auxiliary cables, the positive pole (+) must be connected first; When removing the auxiliary cables, first disconnect the grounding or negative (-) cable (grounding side).
- 5) When disassembling the auxiliary cable, be careful not to let the auxiliary cable clamps contact each other or the cable clamps to contact the machine.
- 6) When starting the engine with auxiliary cables, be sure to wear goggles and rubber gloves.

7) When connecting a normal machine with a faulty machine with an auxiliary cable, use a normal machine with the same battery voltage as the faulty machine.

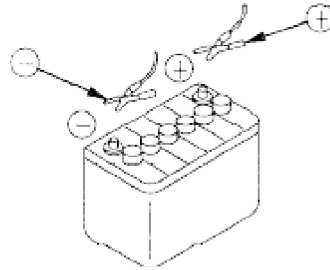

3. After starting the engine

A. Engine warm-up and machine warm-up

The normal working temperature of hydraulic oil is 50°C~80°C. Operating the hydraulic oil below 20°C will damage the hydraulic components. Therefore, if the oil temperature is lower than 20°C before starting work, the following preheating process must be followed.

- 1) The engine runs at a speed greater than 200 rpm for 5 minutes.
- 2) Put the engine throttle in the middle position and run for 5-10 minutes.
- 3) At this speed, extend and retract each cylinder several times, and gently operate the rotation and travel motors to preheat them. It can only work when the oil temperature reaches above 20°C. When necessary, the bucket cylinder can be extended or retracted to the end of the stroke, and the hydraulic oil can be preheated at full load, but it does not exceed 30 seconds each time. It can be repeated until the oil temperature requirement is reached.

B. Inspection after starting the engine

- 1) Check whether the indicator lights are off.
- 2) Check for oil leakage (lubricating oil, fuel) and water leakage.
- 3) Check if there is any abnormality in the sound, vibration, heating, smell, and instrument of the machine. If any abnormality is found, repair it immediately.

4. Turn off the engine

NOTE

If the engine is suddenly turned off before it cools down, it will greatly shorten the service life of the engine. Therefore, except in emergency situations, do not turn off the engine suddenly.



If the engine is overheated, don't shut it down suddenly, but run at a medium speed to gradually cool the engine, and then shut down the engine.

- 1) Run the engine at low idle speed for about 5 minutes to allow it to gradually cool down.
- 2) Push the throttle forward to the end, and pull the shutdown handle back to the end.
- 3) Turn the key switch to the OFF position and turn off the engine. Each indicator light goes out.
- 4) Remove the start switch key.
- 5) After stopping the engine, push the shutdown handle forward to the end.

5. Inspection after turning off the engine

- 1) Patrol and inspect the working device, the outside of the machine, and the chassis and check for water or oil leakage. If an abnormality is found, repair it.
- 2) Fill the fuel tank with fuel.
- 3) Check whether there are paper scraps and debris in the engine room. Remove paper scraps and debris to avoid fire.
- 4) Remove the mud attached to the chassis.

- 1) Make sure to hold the handrail at the cab door and the columns of four-post shed by hands, as shown in the figure.
- 2) Ensure that the foot is stepped on the track steadily.
- 3) When getting on and off the machine, do not use the joystick as a handrail to hold it tightly.
- 4) Before getting on and off the machine, you must confirm whether there are any substances such as mud and grease on the surface of the handrails and tracks that can cause slippage. If there are, please clean them up.
- 5) Don't jump on or off the machine, and don't go up and down the machine when the machine is in motion.
- 6) The working device must be completely lowered to the ground and the engine must be shut down before leaving the machine. Then use the pilot valve safety handle to pull up the left control box to make the whole machine in the locked state. Keep this state until the machine is operated next time.

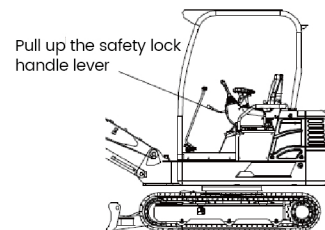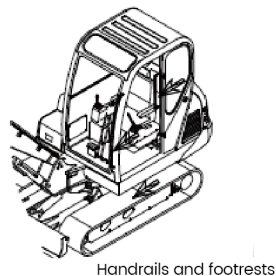

NOTE

Please take out the key and lock all doors and windows when leaving.

It is not allowed to climb to the oil tank, engine hood and the cab top.

No one is allowed on the working devices (such as bucket, stick, boom and accessories) under any state.

1. Safety rules for moving the machine

- 1) Before starting the excavator, you should be familiar with the surrounding environment of the site, whether there are pedestrians, obstacles, and ground-bearing capacity.
- 2) Sound the horn before starting the excavator to warn others to pay attention.
- 3) Drivers are strictly prohibited from standing on the ground to start and operate the machine.
- 4) The excavator must walk and work on solid ground with a width greater than 1.5 times.
- 5) When walking through underground passages, bridges, or under high-voltage power lines, be sure to have gesture commands.
- 6) When walking, the boom and stick must be lowered to maintain the best position of the center of gravity.
- 7) When walking, only the driver is allowed to drive on the machine and no others are allowed.
- 8) Before operating the steering joystick, check the direction of the crawler frame.
- 9) If the bulldozer shovel is behind, the operation of the walking joystick is reversed.
- 10) Don't let anyone in the area around the machine.
- 11) Remove all obstacles on the walking route of the machine.
- 12) The rear of the machine is a blind zone, so pay special attention when reversing.




WARNING

It is dangerous to change the joystick suddenly when walking at high speed.

- ▲ 1) Don't change the joystick suddenly, otherwise, it will cause a sudden start.
- ▲ 2) Avoid suddenly changing the joystick from forward to backward (or from backward to forward).
- ▲ 3) Avoid sudden changing of the joystick, such as a sudden stop from high speed (release the joystick).

2. Preparation for moving the machine

- 1) Put down the platform lock pin to lock the platform rotation.
- 2) Turn the throttle handle to the high-speed position to increase the engine speed.

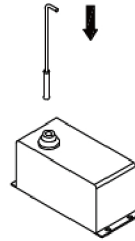


3. Move the machine forward

- 1) Put down the left control box, raise the working device and lift it 40 to 50 cm off the ground.
- 2) Operate the left and right walking joysticks according to the following steps.

When the bulldozer shovel is in front: Slowly push the front of the joystick forward to make the machine walk forwards.

When the bulldozer shovel is at the rear of the machine: Slowly pull the joystick backward in order to move the machine.

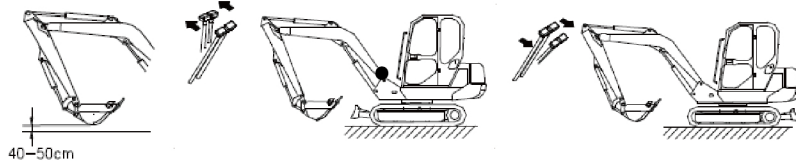


NOTE

When the machine is at a low temperature, if the walking speed of the machine is not normal, the machine must be warmed up thoroughly. In addition, if the lower car body is blocked by mud and the machine travels at an abnormal speed, the dirt and mud on the lower car body must be removed.

4. Move the machine backward

- 1) Put down the left control box, raise the working device and lift it 40 to 50 cm off the ground.
- 2) The operation is the reverse of the forward operation.

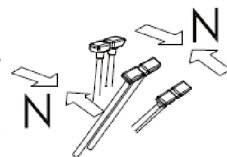

5. Stop the machine

Put the left and right joysticks in the middle position to stop the machine

NOTE

Avoid sudden stops when the machine is walking, and there must be enough space when parking.

NOTE

Before operating the walking joystick, check the position of the bulldozer shovel. If the bulldozer shovel is behind, the operation of the walking joystick is reversed.

Use the left and right walking joysticks to change the driving direction.

Avoid sudden changes in direction as much as possible. Especially when turning in the opposite direction (turning in place), stop the machine before turning.

1. Turn when the machine stops

When turning left:


When walking forward, push the right walking joystick forward and the machine will turn left. When walking backward, pull the right walking joystick back to turn the machine to the left.

When turning to the right, operate the left walking joystick in the same way.

Turn in place


When making a left turn on the spot, pull the left walking joystick back and push the right walking joystick forward.

When making a right turn on the spot, pull the right walking joystick back and push the left walking joystick forward.

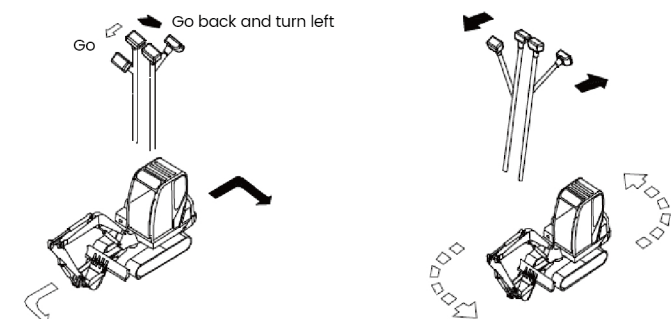

- Before turning the upper structure, check whether the surrounding area is safe.
- Confirm that the platform lock pin has been lifted and the platform and chassis have been unlocked.
- The machine platform will rotate quickly if you operate the left pilot valve handle quickly; The machine platform will rotate slowly if you operate the left pilot valve handle slowly. Pay attention to the operating speed of the pilot valve handle.


- 1) Before starting the rotation, the platform lock pin has been lifted and the platform and chassis have been unlocked.
- 2) Disconnect the deflection switch, and the machine is in the platform rotation state.
- 3) Operate the left pilot valve handle to rotate. The platform will turn left when it is tilted to the left, and the platform will turn right when it is tilted to the right.
- 4) When the rotation operation is not carried out, the platform location pin shall be inserted to lock the platform rotation.

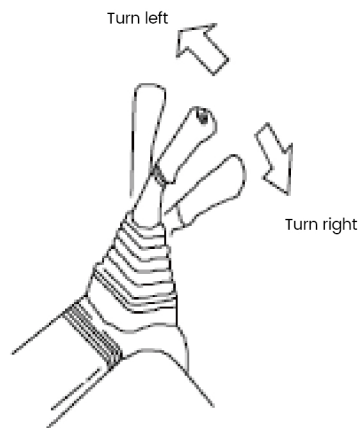

- The working device will move quickly if you operate the working device joystick quickly; the working device will move slowly if you operate the working device joystick slowly.
- The working device is operated by the left and right pilot valves. The left control pilot valve operates the stick and rotation (if a steering head is equipped, the left control pilot valve can also control the steering head to swing). The right working device joystick operates the boom and bucket.
- When the pilot valve handle or the bulldozing joystick is released, they will automatically return to the neutral position and the working device or the bulldozer will stop.
- If the pilot valve is operated within 15 seconds after turning off the engine, the working device can also be dropped to the ground.
- In addition, you can also operate the pilot valve to release the remaining pressure in the hydraulic oil circuit and lower the boom after the machine is mounted on the trailer.

1. Stick control

Operate the left pilot valve, the stick extends when pushing the pilot valve forward, and the stick retracts when pulling the pilot valve backward.

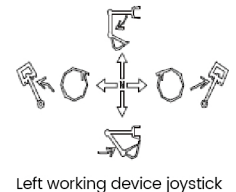


2. Rotation control

Operate the left pilot valve, the platform will turn left when it is tilted to the left, and the platform will turn right when it is tilted to the right.

It is necessary to make sure that the machine is in the rotating state before rotating.


3. Boom control

Operate the right pilot valve, lower the boom when pushing the pilot valve forward, and raise it when pulling the pilot valve backward.

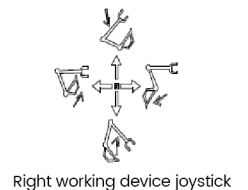

4. Bucket control

Operate the right pilot valve, the bucket will turn outward when it is tilted to the right, and retract when it is tilted to the left.

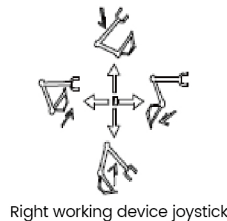

Right working device joystick

5. Boom deflection (steering head) control

Operate the left pilot valve, the steering head will turn left when it is tilted to the left, and the steering head will turn right when it is tilted to the right.

Make sure that the machine is in the boom deflection mode before the boom deflection.

6. Operation of the bulldozer shovel

Push the bulldozing lever down, and the bulldozer shovel cuts down.

When pulling up, the bulldozer shovel is lifted.



NOTE

There may be a pause during the operation of the stick. This phenomenon is not a mechanical failure but a normal phenomenon of the excavator. During the stick operation, the self-weight speeds up the action of the stick, which may cause insufficient fuel supply.



WARNING


Construction near the slopes of the foothills is extremely dangerous. Rain, muddy ground, snow-covered ground, icy ground, loose sand, and soft ground, and other different working conditions bring potential dangers to operational safety. Therefore, when constructing in dangerous areas such as the foothills or slopes, you should correctly judge whether it is safe to operate in order to make a decision.

- When walking, raise the bucket about 20-30 cm from the ground.
- Do not walk backwards and downhill.
- When walking on bumps or other obstacles, keep the working device close to the ground and walk slowly.
- Do not turn on slopes or cross slopes. You can go to a flat place in advance to get better.
- When working on a slope, turning or operating working devices will cause the machine to lose balance and tip over, so avoid this kind of operation. When the bucket is loaded, it is very dangerous to turn downhill.
- If this operation is necessary, a platform must be piled up on the slope with soil so that the machine can be balanced during operation.
- Do not go up or down steep slopes, otherwise, the machine may tip over.
- When walking uphill, if the track shoe slips or cannot go uphill only by the force of the track, do not use the pulling force of the stick to help the machine go uphill. This will cause the machine to tip over.
- When going uphill, ensure that the engine and hydraulic oil have been properly preheated, otherwise it will cause an accident.

Allowed water depth

Do not drive the machine in water that is deeper than the center line of the supporting rail plate.

Add butter to parts that have been immersed in water for a long time until the used butter is completely squeezed out.

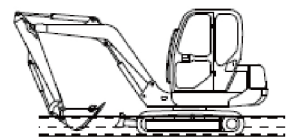


Always be careful to avoid getting into the mud. If the machine is stuck in the mud, follow the below steps to drive the machine out.

A. Track on one side is trapped

NOTE


When lifting the machine with a boom or stick, make sure that the bottom of the bucket is in contact with the ground. (Do not use bucket teeth to push). The angle between the boom and the stick should be 90 degrees to 110 degrees.

When only one track is stuck in the mud, use a bucket to lift the track, and then pad wooden boards or logs to drive the machine out. If necessary, put planks under the bucket.

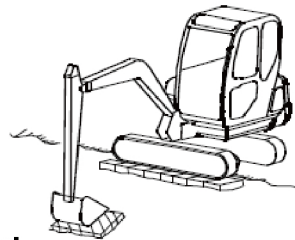



B. Tracks on both sides are trapped

If the tracks on both sides are stuck in the mud, and can't move if it slips. Use the method provided above to pad wooden boards or logs. Dig the bucket into the ground in front, operate the stick in the same way as digging, and adjust the walking lever to the forward position to pull out the machine.

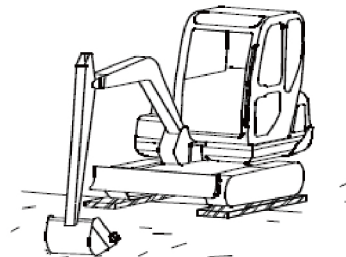


1. Backhoe operation

- The backhoe is suitable for digging below the machine.
- When the machine is in the state shown in the figure on the right, that is, when the bucket cylinder and the connecting rod, and the stick cylinder and the stick are at 90°, the maximum pushing force of the bucket can be obtained.
- Effective use of this angle when digging can optimize work efficiency.
- The digging range of the stick is from a 45° angle away from the machine to a 30° angle toward the machine.
- There may be some differences depending on the digging depth, but try to operate within the above range instead of operating the cylinder to the end of its stroke.

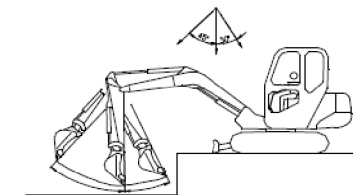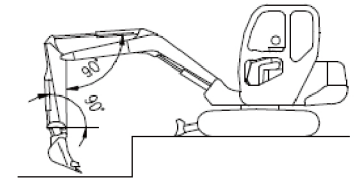

NOTE

It is best to dig hard rocky ground after breaking it by other methods. This will not only reduce the damage to the machine but also be more economical.

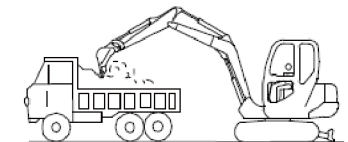

2. Loading operation

In places where the rotation angle is small, the dump truck can be parked in a place where the operator can easily see it so that the operation can be carried out more effectively.

If loading from the rear of the dump truck is more convenient than loading from the side of the dump truck, the loading capacity is larger.

3. Trenching operation

- Make the bulldozer shovel behind and anchor into the soil.
- Extend the boom and stick, and insert the bucket teeth into the soil.
- Use the stick cylinder to excavate. During the excavation process, adjust the cutting angle and loading angle of the bucket in a timely manner, or use the bucket cylinder to excavate. Do not insert the bucket teeth too deep into the soil when digging, so as not to dig the soil due to overload of the hydraulic system. In the case of unmovable soil excavation, the boom can be raised appropriately, and the situation will change. After digging a full bucket, raise the boom and stick to make the bucket higher than the ground, and turn the platform to a proper position to unload the soil.

NOTE

- 1) Do not touch the aerial wires.
- 2) After clarifying the conditions of the underground pipelines and cables, start excavating to avoid damage to the pipelines and electric shock accidents.
- 3) In the event of an electric shock, the driver should not leave the seat and warn others not to approach. Drive the machine to a safe area, cut off the power, and then leave.

4. Backfilling or leveling

In order to fill the ditch, the direction of excavator travel is perpendicular to the ditch. After cutting the bulldozing board into the soil to a certain depth, loosen the bulldozing lever, start the machine to walk, and use the bulldozing board to push the soil in the ditch.

5. Shake off the sand and soil in the bucket

Keep the stick in an approximately horizontal state and the bucket in the unloading position. If the sand and soil still cannot fall, manipulate the bucket joystick left and right for several times to shake out the bucket. Avoid using the bucket cylinder stroke to shake off the sand and soil by impact vibration at the end.


6. Precautions for the use of related parts

A. Precautions for the use of tracks

- 1) Excessive debris entering the tracks will increase the working strength of the tracks and cause damage.
- 2) Avoid making a sudden turn on a road with a strong friction.
- 3) Try to avoid getting saltwater or salty gas, as salt will corrode the track.
- 4) If the track will not be used for a long time, keep it in a cool and dry place.
- 5) When one track and the front device are jacked up, the other track cannot be used for walking, which will cause wear.
- 6) When walking, the track cannot be slack, otherwise, the track may fall off or be damaged.

B. Precautions when using the bulldozer shovel

- 1) The bulldozer shovel can only be used to move soil, do not use it for digging, otherwise, it will damage the bulldozer shovel or crawler system. (See the picture on the right)
- 2) The bulldozer shovel can't bear huge or unstable weight, otherwise, it will damage the bulldozer shovel or crawler system.
- 3) When walking, the bulldozer shovel should not hook any objects, otherwise, the bulldozer shovel or crawler system will be damaged.
- 4) When jacking up the machine with a bulldozer shovel, make sure that the road is smooth and the bulldozer shovel touches the ground steadily.

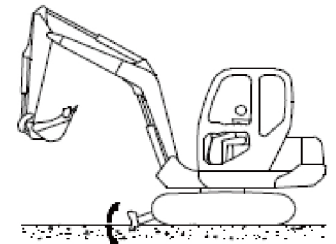


04 | Operation guide | Removal and installation of bucket

Safety principle

- When hitting the pin with a hammer, metal shavings may fly into the eyes and cause serious injury. When performing this operation, always wear goggles, helmets, gloves, and other protective equipment.
- When unloading the bucket, place the bucket steadily.
- If you hit the pin hard, the pin may fly out and injure people in the surrounding area. Therefore, before hitting the pin, make sure that the surrounding area is safe.
- When disassembling the pin, pay special attention not to stand under the bucket, and do not put your feet or any part of your body under the bucket.
- When removing or installing the pin, be careful not to hurt your hands.
- When aligning the hole, do not put your fingers in the pin.

Installation

- Park the machine on a solid, level ground. When making connections, for safety's sake, clarify the signals with each other and work carefully.
- Put the excavator in working condition, manipulate the stick while facing the bucket, until the holes of the stick and the bucket are aligned, and insert a Φ 30mm steel rod ① into the hole.
- Lift the boom and stick to make the bucket hang vertically on the stick.
- Operate the stick cylinder to align the hole of the connecting rod with the connecting hole of the bucket. Install the shaft ②, take out the steel rod ① and install the shaft ③.

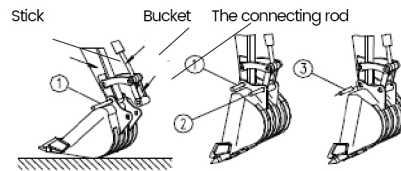


Disassemble

- Park the machine on a solid, level ground. The bucket is required to be placed just in contact with the ground. It will increase the resistance if you drop the bucket heavily on the ground, and it will be difficult to remove the pin.
- Remove the double nuts from the locking bolts of each pin of the stick and connecting rod, remove the bolts, then remove the stick pin ③ and the connecting rod pin ② and remove the bucket.

04 | Operation guide | Park the machine


Safety rules

- 1) Avoid sudden parking. When parking the machine, leave as much space as possible.
- 2) Park the machine on a solid and level ground. Avoid parking the machine on slopes. If it is necessary to park the machine on a slope, put a block under the track and insert the working device into the ground to prevent the machine from moving.
- 3) If you accidentally touch the left and right pilot valve handles or left and right walking joysticks, the working device or machine will suddenly move, causing serious personal injury or accident. Therefore, before you stand up from the seat, you must lift the left control box to keep the machine locked.

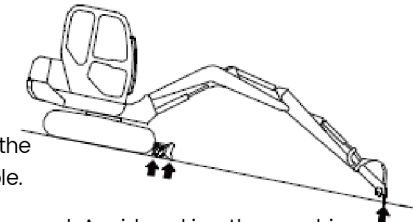

Park the machine

- 1) Put the left and right walking joysticks in the middle position. Stop the machine.
- 2) When the engine is working under heavy load, don't stop it immediately, let it run at low speed for 1-2 minutes, and stop it after removing the overheating.
- 3) The bucket and bulldozing board drop to the ground.
- 4) Push the throttle to the end, and pull the parking handle back to the end (if fitted).
- 5) Turn the start key to the "OFF" position (all indicators are off).
- 6) Reset the parking handle after the engine stops.
- 7) Lock the platform.
- 8) Pull up the left control box by using the pilot valve safety handle, so that the machine is locked.

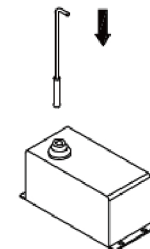

1. Check

Check the engine water temperature, hydraulic oil temperature, oil pressure, fuel level, etc. on the machine's digital monitor.

2. Locking

The following parts must be locked.

- 1) Fuel tank filler port
 - 2) Engine hood
-

NOTE

When opening the engine hood, no one can stand behind the engine hood, be careful of hurting the human body when the engine hood pops up.

1. Safety rules for the shipment of the machine

- 1) Run the engine at a low speed, and operate the machine slowly when loading/unloading.
- 2) Do not load/unload the machine during automatic warm-up operation.
- 3) If the automatic warm-up operation is cancelled during the loading/unloading operation, the speed will suddenly change.
- 4) When loading/unloading the machine, choose a solid and level ground. Keep a safe distance from the edge of the road.
- 5) To use a ramp with sufficient width, length, thickness and strength, the width of the slab is 1.2 to 1.5 times of the track width. In order to avoid any accidents, it is recommended that the loading/unloading slope should be less than 15°, or the length of the slope should be greater than 3.5 times of the height. When using a mound slope, the mound shall be completely compacted and measures shall be taken to prevent the slope from collapsing.
- 6) In order to prevent the machine from slipping on the ramp, remove all the mud and dirt on the track before starting. Make sure that the surface of the ramp is clean and free of water, snow, ice, grease or oil.
- 7) Do not correct the steering on the ramp, otherwise, the machine may tip over. If you must turn, you should drive off the ramp, correct the direction, and then enter the ramp.
- 8) Do not use working devices for loading and unloading operations, this is dangerous.
- 9) When on a ramp, do not operate any joysticks other than the walking joystick.
- 10) At the junction between the ramp and the transport vehicle, the center of gravity of the machine will suddenly change, and there is a danger of the machine losing its balance. Therefore, walk slowly when crossing this area.
- 11) When turning the upper structure on a transport vehicle, the transport vehicle is unstable. Therefore, retract the working device and rotate slowly.
- 12) No matter whether the machine is getting on or off, the wheels of the transport vehicle should be wedged.

13) Use wooden wedges to keep the excavator in a fixed position on the transport vehicle during transportation. Tie the excavator to the transport vehicle with a rope.

14) Before the driver leaves his seat after completing the work or ending the maneuvering. Raise the left control box first, so that the pilot control oil circuit is disconnected, in order to prevent the machine from malfunctioning due to mistakes or accidental hitting of the joystick.

15) Before going up and down the ramp, be sure to put down the positioning handle of the rotation platform to prevent the platform from slewing.

2. Loading


1) The machine can only be loaded on solid and level ground, and a certain safe distance should be kept from the edge of the road.

2) Appropriately apply brakes to the transport vehicle, and put a pad under the tire to ensure that the transport vehicle does not move.

3) Install a ramp between the transport vehicle and the machine, and ensure that the ramps on both sides are on the same level. The slope of the ramp does not exceed 15 degrees at most. Adjust the distance between the ramps to match the center of the track.

4) Lock the rotation platform.

5) Align the excavator with the slab ramp, with the bulldozer shovel at the rear. For safety, after the excavator is close to the ramp, slowly climb up the slope until the end of the ramp.

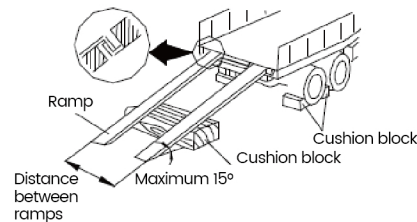


NOTE

When on a ramp, you can only operate the walking joystick, do not operate any other joysticks or pedals.

6) Stop driving and extend the stick (position B in the figure), so that the front part of the excavator track is tilted down to the bottom plate of the transport vehicle. Be careful not to let the working device touch the body of the transport vehicle when the machine is tilted down. Continue to drive the machine to the location specified by the transport vehicle.

7) Put down the stick, drop the bucket on the floor, put down the bulldozer shovel, and park the machine at the specified position on the transport vehicle.

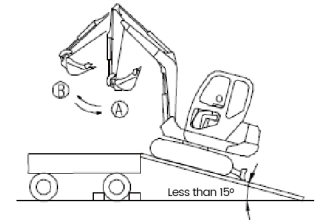

WARNING

After finishing the work or finishing the operation, before leaving the seat, the driver must first pull up the safety lock handle to lift the left control box, so that the pilot control oil circuit is cut off, in order to avoid the machine error due to mistakes or accidental hitting of the joysticks.

NOTE

Please select a transport vehicle that matches the weight and size provided in this manual.

3. Fix the machine on the transport vehicle


1) Set up the working device.

2) Turn off the engine and remove the key from the start switch.

3) Lock the platform.

4) Lock the cab and engine hood.

5) Put cushion blocks under the two ends of the tracks to prevent the machine from moving during transportation, and tie the machine firmly with a steel wire rope. Pay special attention to fixing the machine firmly so that it cannot slide to one side.

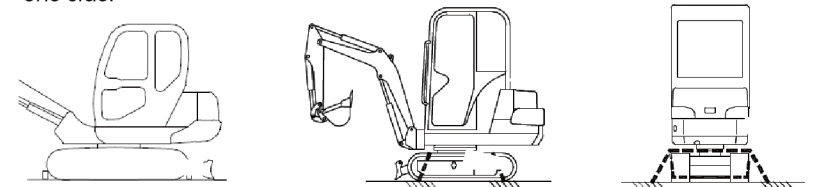

4. Unload the machine from the transport vehicle

- 1) It can be loaded and unloaded on solid and level ground, and keep a safe distance from the edge of the road.
- 2) The transport vehicle is braked, and a pad is placed under the tire to ensure that the vehicle does not move.
- 3) Install a ramp between the transport vehicle and the machine. Make sure that the ramps on both sides are on the same level. Make the slope of the ramp is no more than 15 degrees. Adjust the distance between the ramps to match the center of the track.
- 4) Remove the wire rope that secures the machine.
- 5) Start the engine. In winter, the warm-up operation should be carried out thoroughly.
- 6) Put down the left control box.
- 7) Lift the stick and bucket, and raise the bulldozer shovel.
- 8) Check that there are no obstacles in the excavator's range of activity.
- 9) Pull up the platform lock pin, make the platform rotate 180 degrees, the excavator faces the slope, and the excavator is in the forward direction.
- 10) The excavator advances slowly until the top of the slab, and the stick is extended to make the excavator track tilt down onto the ramp, and then slowly advance to the ground.

5. Hoisting the machine

A. Safety precautions

- 1) Do not hoist the machine when there are people on the machine.
- 2) Ensure that the steel wire rope used for hoisting the machine has sufficient strength to bear the weight of the machine.
- 3) Except for the postures provided in the following procedures, do not hoist the machine in any posture, otherwise, the machine will lose its balance.

- 4) Do not lift the machine when the upper structure is turned to the side. Turn the platform before hoisting so that the working device is in the same direction as the bulldozer shovel and the lower track is parallel to the upper structure.
- 5) When raising, keep the machine level.
- 6) When hoisting the machine, it is dangerous to walk under the machine. Do not walk around under the machine.

B. Hoisting procedures - for machines with standard technical specifications

NOTE

The hoisting procedure is applicable to machines with standard technical specifications. The spreader should be a special spreader with a lifting capacity that meets the weight of the machine.


Follow the below steps to lift the machine for those with lifting holes. (As shown on the right):

- 1) Turn the platform so that the working device and the bulldozer shovel are in the same direction. Start the engine, adjust the working device to the posture shown in the right figure, fully raise the boom, and fully retract the stick and bucket.
- 2) Turn off the engine and lift the left control box to lock the machine.
- 3) Check whether the area around the machine is safe, and then get off the machine. Close the cab doors, windows and engine hood.
- 4) Stably hook the lifting hole of the boom (the lifting hole is marked with a lifting hook sign) by using a hook, and then use a wire rope to pass between the drive wheel and the first thrust wheel.
- 5) Select the lifting position of the wire rope so that it is directly at the center of gravity of the machine (the center of gravity of this model is above the center of rotation), as shown in the right figure.

04 | Operation guide | Loading, unloading and transportation of machines

© Boleo Corporation

- 6) Check whether it will cause a change in posture if the hydraulic oil circuit at the top of the boom cylinder leaks oil when lifting.
- 7) Stop the lifting operation when the machine leaves the ground and check whether the machine is balanced. Continue the lifting operation when the machine is stable.

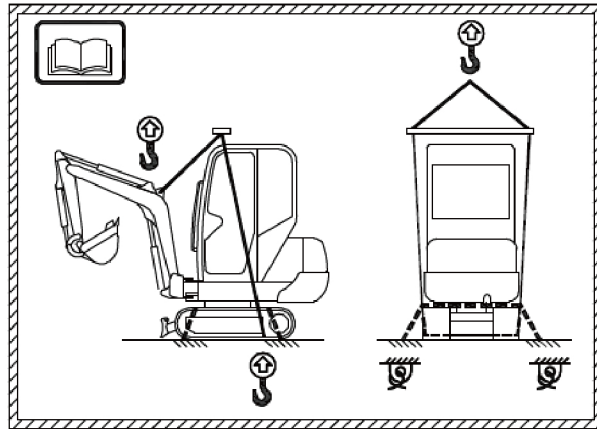

04 | Operation guide | Working in cold/hot climates

1. Work in a cold climate

Cold weather will cause special problems. At this time, you must pay special attention to protection to prevent serious damage to the machine. Maintenance in cold weather will extend the life of the machine.

- 1) Electrical system: Keep the battery clean and fully charged. Check the battery cables and connectors, clean the connectors, and apply a layer of grease to prevent corrosion.
- 2) Lubricant: Use lubricating oil of appropriate viscosity at each joint. Please use the oil recommended for this machine.
- 3) Fuel system: Whether the fuel supply is compatible with the cold climate at that time. Use the low-viscosity fuel.

Check the moisture in the fuel system. Cold weather will concentrate water in the fuel tank. Check the water in the fuel filter every 50 hours of operation. If no moisture appears, the inspection period can be extended. If there is moisture, check the fuel tank.

- 4) Cooling system: Before operating the machine in a cold climate, check the coolant and adjust the appropriate mixing ratio. Use antifreeze suitable for ambient temperature conditions.
- 5) Working device: Before operating the machine, put on a low gear, start the machine slowly, then stop the machine and operate the working device for about 10 minutes, or do not operate until all hydraulic cylinders are considered to be working properly.

2. Work in a hot climate


To prevent damage to the machine, please do as follows:

- 1) Ensure that the amount of coolant in the radiator is normal.
- 2) Before the hot season begins, check the radiator and replace the coolant if necessary.
- 3) Remove all dirt and scale on the surface of the radiator and engine.
- 4) Check the fan rotation belt.
- 5) Use lubricating oil with suitable viscosity.
- 6) Use proper proportion of coolant in the cooling system.
- 7) When working in an extremely poor environment such as large dust, always check the air filter.

1. Preparation before storage

When storing the machine for a long time, follow the below steps.

- 1) Clean and rinse all parts, and then put the machine in the room. If you have to store the machine outdoors, choose a flat ground and cover the machine with a cover cloth.
- 2) Apply a thin layer of grease to the metal surface of the piston rod. Lubricate all lubrication points.
- 3) Remove the battery, and then store it in a dry and non-freezing place after adding the liquid and charging it.
- 4) The engine oil is discharged in a hot state and the engine is filled with anti-corrosion engine oil. The anti-corrosion engine oil used is MIL-L-21260 for piston engines. Use grade 1 or 2 SAE10W for winter storage and grade SAE30 for summer storage.
- 5) Add 4 to 6% of the same type of anti-corrosion engine oil in the fuel, and mix the two together well. In order to prevent the generation of condensed water, the fuel tank must be refilled with this mixed fuel.
- 6) Check the antifreeze performance of the coolant, and use the method of adding antifreeze to make its antifreeze power at least -20°C. If the coolant does not contain an anti-corrosion agent due to the weather, you should add an anti-corrosion agent (for example, according to MIL-G4339C, it should contain a 5% anti-corrosion agent).
- 7) Start the engine and let it rotate for more than 15 minutes. Different speeds can be used but no load. It should also run when draining lubricating oil from hydraulic components and reducer, and then replaced with new oil for storage.
- 8) Close the air inlet of the air filter and the outlet of the exhaust pipe. For this, it is recommended to use plastic thick paper and adhesive tape.
- 9) Lock the platform, raise the left control box, so that the joysticks and pedals are in a locked state.
- 10) Put the shut-off valve used to install accessories on the machine to the locked position. Install a plug on the elbow.
- 11) Keep the machine clean and store it in a dry place.

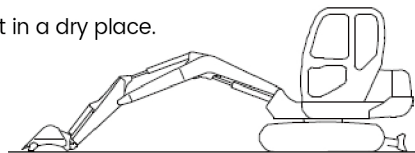

NOTE

When storing the machine, adjust the machine to the posture shown in the figure on the right to protect the piston rod of the cylinder and prevent the piston rod from rusting.

2. During storage

- 1) During storage, operate the machine once a month so that a new oil film is attached to the surface of the moving parts. At the same time, the battery must be charged.
- 2) For machines equipped with air-conditioning, the air-conditioning must be operated.
- 3) Rotate the track.



WARNING

When the machine is indoors, if it is necessary to perform anti-rust operations, open doors and windows to promote air circulation to prevent gas poisoning.

3. Return to use after storage

When using the machine after long-term storage, follow the below steps before using it.

- 1) Wipe off the grease coated on the surface of the piston rod of the cylinder.
- 2) Fill all parts with engine oil and grease.
- 3) When the machine is stored for a long time, the moisture in the atmosphere will enter the oil. Before or after starting the engine, check the oil in all parts. If there is water in the oil, replace all the oil.

NOTE

- ▲ 1) Under normal climatic conditions, the storage method described above can store the excavator for one year. However, after 6 months of storage, the parts should be rotated for 15 minutes without loading. At the same time, add lubricating oil to each part.
- ▲ 2) Before the excavator that has been stored for a long time is put into use again, the necessary work and various inspections should be done. After the excavator has been stored for one year, the oil in the reducer and hydraulic circuit must be drained and renewed.

Fault	Reason	Solution
1. The engine cannot start or is difficult to start	There is a problem with the starter motor	Replace or overhaul the starter motor
	Insufficient battery charge	Charge or replace with a new battery
	Improper use of preheating circuit or glow plug	Repair or replace the glow plug
	Incorrect injection timing	Check the injection timing
	Oil pipeline is blocked	Clean oil circuit
	The fuel filter is blocked	Clean or replace the fuel filter
	The fuel system has water, dust or air	Discharge air and clean oil circuit
	Dirty nozzle or low injection pressure	Go to the local repair point for repairs
	Failure of fuel injection pump	Consult the company's agent
	Insufficient fuel	Refill the fuel
	The intake and exhaust systems are blocked	Unblocked intake and exhaust systems
2. The engine knocks, runs irregularly or shuts down	Large blow-by gas	Consult the company's agent
	The fuel filter is blocked	Clean the filter
	There is dirt or air in the fuel system	Discharge air and clean oil circuit
	Oil filter is blocked, nozzle is dirty or faulty	Go to the local repair point for repairs
	Damaged high pressure oil pipe	Replace the high pressure oil pipe
	Insufficient fuel	Refill the fuel
	The governor connection cannot be adjusted	Consult the company's agent
	Failure of fuel injection pump	Consult the company's agent
	Incorrect fuel injection timing or fuel injection nozzle stuck	Check fuel injection timing and fuel nozzle

Fault	Reason	Solution
3. Engine power drops	The fuel is mixed with air	Discharge air
	The oil supply is not smooth	Check and clean
	Injection timing changes	Adjust according to the specified value
	The injector is not working well	Check the working pressure and atomization of fuel
	Air filter is blocked	Clean the filter element.
	Wrong intake and exhaust valve clearance or valve	Adjust valve clearance
	Cylinder gasket is broken and leaking	Replace the cylinder gasket
	Poor operation of fuel injection pump	Consult the company's agent
	The engine is overheated	Check whether the coolant used is correct. Whether the water pump and belt are too loose, repair or replace if there are any, and remove the obstruction of the water channel
	The coolant level is too low	Add coolant
4. The engine is overheated	Temperature sensor failure	Replace the sensor
	Air filter is blocked	Clean the air filter
	The fan belt is loose or out of order	Re-tighten or replace
	There is dirt in the cooling system channel	Cleaning channel
	Inferior oil or too much oil	Replace the oil
	The oil level is too low	Refill the fuel
5. The oil pressure is too low	The fuel filter is blocked	Clean oil filter
	Pipeline leakage	Tighten or replace
	The engine cooling water temperature is too high	Prepare the mixing ratio of the coolant correctly or consult the local company's agent

Fault	Reason	Solution
6. The engine emits gray and black smoke	Poor fuel quality	Use the correct fuel
	Air filter is blocked	Replace the filter element
	Incorrect injection timing	Adjust according to the specified value
	Poor nozzle atomization	Inspect and replace parts
7. The engine emits white smoke	Poor fuel quality	Use the correct fuel
	Excessive engine oil	Restore to the recommended oil level
	Incorrect injection timing	Adjust according to the specified value
	There is water in the cylinder and fuel	Check and change fuel
8. The battery cannot be charged	The connection is loose or rusty	Clean or tighten
	The generator belt is loose or faulty	Tighten or replace
	The generator does not charge	Consult the company's agent
	Battery electrolyte failure	Replace battery
	Battery electrode plate failure	Replace battery
9. The starter does not work or rotates slowly	The connection is loose or rusty	Clean or tighten
	Insufficient battery charge	Replace
	The line is damaged	Consult the company's agent
10. The engine is running and the generator warning light is on	Generator failure	Consult the company's agent
	Electronic regulator failure	Replace
	The line is faulty	Overhaul
11. The hydraulic system components move too slowly	Hydraulic oil cooling	Manipulation action heats up
	The pilot system pressure is too low	Consult the company's agent
	Wrong use of hydraulic oil	Use the correct hydraulic oil
	The engine speed is too slow	Consult the company's agent

Fault	Reason	Solution
12. Hydraulic oil temperature is high	Wrong use of hydraulic oil	Use the correct hydraulic oil
	Oil path blocked	Consult the company's agent
	Hydraulic oil filter is blocked	Clean or replace
	Oil pump wear	Consult the company's agent
	Oil cooler blocked	Clean oil cooler
	Oil cooler failure	Consult the company's agent
	The pressure for the main safety valve or the relief valve of rotary system is too high	Consult the company's agent
	The oil is too dirty	Oil change
13. The hydraulic oil is emulsified or has foam	Sensor failure	Replace
	The pipeline leaks from the fuel tank to the fuel pump	Overhaul and tighten
	Wrong use of hydraulic oil	Use the correct hydraulic oil
	Hydraulic oil contains water	Oil change
14. The oil pressure is too low or there is no pressure	The oil level is too low	Calibration of oil level
	The hydraulic pump is damaged	Consult the company's agent
	Insufficient oil in the system	Refill the fuel
15. All parts can't work	Safety valve failure	Consult the company's agent
	The hydraulic pump is damaged	Consult the company's agent
	Lack of hydraulic oil	Refill the fuel
A. The oil pump makes noise	Air leakage in the suction pipe	Repair or replace
	The auxiliary pump is damaged	Replace
B. The noise of the oil pump remains unchanged	The hydraulic safety control device does not work	Inspection and repair

Fault	Reason	Solution
16. The cylinders or motors are weak or not working	The hydraulic pump is damaged	Consult the company's agent
	Main safety valve pressure becomes lower	Re-adjust the pressure
	Low oil pressure and oil level	Refill the fuel
	Oil suction filter is blocked	Clean the oil filter
	Oil seal is damaged	Repair or replace
	Damaged piston rod causes oil leakage	Repair or replace
	Pilot valve failure	Replace
	The pilot pipe is broken or leaking oil	Repair or replace
17. Two walking devices do	Central rotary joint oil flushing	Consult the company's agent
18. A walking device does not work	The walking device is damaged	Consult the company's agent
	The control mechanism is damaged	Overhaul
19. Abnormal walking	The track is too tight or too loose	Re-adjust
	Oil pump performance is reduced	Consult the company's agent
	Crawler frame deformation	Repair or replace
	There are gravel or rocks in the track chain	Removal and repair
	Control valve leakage	Consult the company's agent
	Motor performance is reduced	Consult the company's agent
20. Abnormal rotation	Oil pump performance is reduced	Consult the company's agent
	Rotary motor is damaged	Consult the company's agent
	The pilot valve does not work	Consult the company's agent

Fault	Reason	Solution
21. Rotation is not continuous	Rotary gear wear	Consult the company's agent
	Rotary support or ball is damaged	Consult the company's agent
	Lack of grease	Consult the company's agent
	Control valve leakage	Consult the company's agent
22. Air conditioning system noise	The electrical connector is loose, causing abnormal noise of the clutch	Insert the connector tightly or repair it accordingly
	Belt loose	Tighten appropriately, replace if damaged
	Blower blades are loose	Reassemble tightly
	The blower is not working properly	Repair or replace
	The electronic fan is not working properly	Repair or replace
	The compressor bearing is damaged	Replace
	The tensioner bearing is damaged	Replace
23. The air conditioner is not cooling	Electrical circuit failure	Repair or replace
	Air conditioner switch failure	Repair or replace
	No refrigerant	Leak detection, repair, and refrigerant charge
	System blockage	Clean or replace
	Belt loose or broken	Adjust or replace
	Expansion valve failure	Clean or replace
	The compressor operates abnormally	Repair or replace
	Pressure switch failure	Replace
24. Sometimes there is no cold air	Poor line contact	Overhaul
	Belt loose	Adjust the belt appropriately
	Improper adjustment of air conditioner switch cooling	Re-adjust
	The system contains too much water and the internal ice is blocked	Replace the drying bottle
	The electronic fan or its relay is damaged	Repair or replace

05 Maintenance

5-2	Common sense for maintenance
5-5	Maintenance summary
5-8	Consumable parts
5-8	Mandatory replaceable parts
5-9	Oil selection table
5-10	Tightening torque
5-13	Regular Inspection and Maintenance Table
5-14	Regular Inspection and Maintenance Table (continued)
5-15	Routine inspection
5-16	Engine fuel system
5-19	Engine cooling system
5-23	Engine lubrication system
5-25	Engine air intake system
5-27	Other maintenance for engine
5-28	Hydraulic system
5-37	Battery
5-40	Reducer
5-42	Track
5-43	Thrust wheels, supporting wheels and guide wheels
5-44	Lubrication
5-46	Bucket teeth replacement
5-47	Washing of floor mats

05 | Maintenance | Common sense for maintenance

New machine running in

- The first 100 hours of the machine is the running-in period. Be careful to use during this period, and do not allow the machine to do some work that is overloaded or work-intensive. And only 80% of the work load shall be allowed for 50 hours before the running-in period. The quality of use during the running-in period affects the service life of the machine.
- After the first 50 hours of work, the machine shall be inspected and maintained for the first time in accordance with the inspection and maintenance table. At the same time, the pollution degree of the hydraulic oil shall be checked, and its value cannot be greater than NAS9. Otherwise, replace with new hydraulic oil.
- If the hydraulic system does not work, the engine cannot be operated at high speed. Only if the temperature of the hydraulic oil exceeds 20 degrees Celsius, the working device can be operated.

Construction in a dusty site

During working in a dusty workplace, follow the below steps:

- Clean the radiator core frequently to avoid clogging.
- Frequently clean and replace the fuel filter element.
- Clean the electrical components, especially the starter motor and alternator to avoid accumulation of dust.
- During checking or replacing the oil, move the machine to a dust-free place to prevent dust from entering the oil.

Oil and filter element

- Please use clean engine oil and grease, and prevent impurities from entering the engine oil container.
- After replacing the oil or the filter element, check the waste oil and filter element for metal chips or impurities. If a large amount of metal chips or impurities are found, report it to the person in charge of the machine and take appropriate measures.
- Do not mix oils of different grades. If oil of a different grade is required to be filled, drain the old oil and replace it with oil of a new grade.

Timer reading

Check the timer on the dashboard every day to check if it is time for maintenance according to the number of working hours.

Use original accessories

The use of original Boleo accessories is an important factor in ensuring the normal operation of the machine and prolonging the service life of the machine.

Hazardous waste disposal

Promote environmental protection and pay special attention to methods of waste disposal:

- Put the oil discharged from the machine into a container. Do not discharge the oil directly onto the ground, or pour it into sewers, drains, rivers, oceans or lakes.
 - During handling of hazardous materials, such as oil, fuel, coolant, antifreeze, plastic accessories, solvents, filter elements, batteries and other hazardous materials, the relevant environmental protection laws and regulations shall be followed.
-

Prevent articles from falling into the machine

- During inspection when opening the fuel tank nozzle, be careful not to drop bolts, nuts, washers or tools inside the machine. If these articles fall into the machine, this will cause damage and malfunction of the machine, and may lead to accidents. If something falls into the machine, take it out immediately.
- Before and after the inspection, check the tools and parts you carried to make sure that nothing has fallen into the machine.

Regular inspection and maintenance

Regular inspection and maintenance shall be carried out in accordance with the items listed in the "Regular Inspection and Maintenance Table", which is an important prerequisite for ensuring the normal operation of the machine and prolonging its service life. Be sure to observe the inspection and maintenance cycle.

Recheck after inspection and maintenance

If recheck is not carried out after each inspection and maintenance, unexpected failures may occur, resulting in serious injury or damage. Pay attention to check the following:

- Are there any other parts that shall be inspected and maintained?
- Whether all inspection and maintenance items have been carried out correctly.
- Check whether any tools or parts have fallen into the machine. It is very dangerous if any parts fall into the machine and jam into the linkage mechanism.
- Check around the machine to check if there is water or oil leakage and all bolts have been tightened.

Lubricating oil

- Use oil that meets the grade and temperature given in the "Oil Selection Table" in this manual. In due time, the oil shall be replaced even if the oil is not dirty.
 - Take care to prevent impurities (water, metal particles, dust, etc.) from entering the lubricating oil. Most of the problems of the machine are caused by the ingress of impurities.
 - Do not mix lubricating oils of different grades.
 - Fill the oil according to the specified amount. Too much oil or too little oil can cause malfunctions.
 - During replacing the oil, be sure to replace the relevant filter element, especially during replacing the oil filter element, charge fresh and clean engine oil that meets the requirements into the new filter element before installation.
-

Fuel oil

- During storing or filling fuel, take special care not to let impurities enter.
- Be sure to use the fuel specified in the "Fuel Selection Table" in this manual. The fuel shall be selected according to the ambient temperature, otherwise it will easily solidify at low temperatures (especially below -15°C (5°F)). Therefore, it shall be replaced with the fuel applicable to the ambient temperature.
- In order to prevent moisture in the air from condensing and forming water in the fuel tank, fill the fuel tank up after the daily work.
- Before starting the engine, or 10 minutes after refueling, drain the sediment and water in the fuel tank.
- If the fuel of the engine is used up, or if the filter element is replaced, the air in the oil circuit shall be discharged.

Lubrication grease

- Grease is used to prevent distortion and noise at the connection.
 - If any part appears inflexible or produces noise after long-term use, greasing shall be carried out.
 - Wipe off the old grease squeezed out during greasing.
 - Be careful to wipe off the old grease anywhere. Sand or dust sticking to the grease will cause wear of the rotating parts.
-

Coolant

- Antifreeze shall be used in any climate.
 - Check the coolant level according to regulations, and add it in time if it is found to be insufficient. Insufficient coolant will cause the engine to overheat.
 - According to the ambient temperature, select a suitable mixing ratio of coolant and antifreeze.
 - Do not add coolant if the engine is overheated or not yet cooled.
-

Filter element

- All filter elements shall be replaced regularly. But during working in harsh conditions, the filter element shall be replaced in a short term according to the lubricating oil and fuel (sulfur content) used.
- Do not reuse the cleaned filter element (filter element type). Replace it with a new one.
- During replacing the filter element, check whether there are metal particles adsorbed on the old filter element. If so, please contact your Boleo dealer.
- Before use, do not open the package of the back-up filter element.

Hydraulic system

- During and after work, the hydraulic system is under high temperature. And it is still under high pressure during operation. Therefore, pay special attention to waiting for the temperature to drop and release the pressure in the hydraulic cylinder pipeline when checking and maintaining the hydraulic system.
- During loosening plugs, screws or hose joints, do not stand in front of the parts. Before disassembling, loosen them gradually to release the internal pressure.
- During inspecting or maintaining the hydraulic oil circuit, be sure to discharge the air to release the internal pressure.
- The inspection or maintenance of the hydraulic system includes: checking the hydraulic oil level, replacing the filter element and filling hydraulic oil.
- During removing the high-pressure hose, check whether the O-ring is damaged. If so, replace it.
- During disassembling parts at the position sealed by O-rings or gaskets, clean the installation surface and replace with new parts.
- During installing the hose, it is not allowed to twist or bend the hose into a small diameter circle. This will damage the hose and significantly shorten the service life of the hose.

Electrical system

- It is very dangerous if the electrical equipment gets damp or the insulation layer of wires is damaged. This will cause electric leakage and machine failure. Do not flush the cab interior with water. During flushing the machine, prevent the water from flowing into the electrical parts.
- Electrical system maintenance: check and maintain the battery electrolyte level; Replace various bulbs; Replace fuses, relays, etc.
- Do not install any electronic components other than those specified by Boleo Heavy Industry.
- During working on the beach, clean the electrical system carefully to prevent corrosion.
- When installing the cab air cooler or other electrical equipment, it shall be connected to a special power connector. The optional power source shall not be connected to a fuse, start switch or battery relay.

Check and maintain the consumable parts such as sealing ring, filter element, bucket teeth and knife plate regularly, or replace them when the wear limit is reached, so as not to affect the performance of the machine.

You can order the original parts from Boleo Heavy Industry dealer according to the part number in the table or the part number in the part illustration book.

Item	Part number	Part name	Quantity	Model
		Rubber O-ring	2	15x2.65 GB/T3452.1
		Rubber O-ring	2	18x3.55 GB/T3452.1
		Rubber O-ring	1	22.4x2.65 GB/T3452.1
		Rubber O-ring	4	6.5x1.5 ISO
		Rubber O-ring	4	8x1.5 ISO
		Rubber O-ring	2	11x2 ISO
		Rubber O-ring	3	10x1.9 GB/T3452.1
		Rubber O-ring	3	14x1.9 GB/T3452.1
		Rubber O-ring	3	11.8x2.4 GB/T1235
		Rubber O-ring	1	13.8x2.4GB/T1235
		Combination sealing	3	18 BS/A 18.7x27x2 ISO
		Combination sealing	2	22 BS/A 22.7x30x2 ISO
		Straight-through	5	M10x1 JB/T7940.1
		Fuse spare parts	1	

05 | Maintenance | Mandatory replacement parts

Some parts, mainly some oil hoses play an important role in safety, and their materials are easy to age, wear or deteriorate with the working time of machine, affecting their normal functions, and becoming safe potential hazards at the same time. These problems are not easy to check. Therefore, these parts shall be replaced compulsorily after the specified time limit.

If these parts are abnormal before the specified time limit, they shall be repaired or replaced immediately. During replacing the hose, the corresponding seal shall also be replaced.

05 | Maintenance | Oil selection table

Choose suitable oil according to factors such as ambient temperature and operating conditions, etc. It is necessary to use oil that meets the following specifications.

	Lubricating oil or fuel	Operating temperature	Viscosity	Recommended alternative oil
Engine lubricating oil	CH4 15W/40 CH4 5W-30	-15 °C ~+40 °C -25 °C~+30 °C		
Hydraulic oil	Low temperature areas: HS46+ General area: HMP46+	Above -35 °C Above -25 °C	@ 40 °C 46±4.5 (m ² /s)	The hydraulic oil meeting the requirements of Technical Specification for Hydraulic Oil of Construction Machinery in the enterprise standard of Boleo Heavy Industry
Lubricating oil for the walking reducer	Gear oil (GL-5) for heavy-duty vehicles	Universal in winter and summer		SAE80W/90
Lubricating oil for the rotary reducer	Gear oil (GL-5) for heavy-duty vehicles	Universal in winter and summer		
Lubricating oil for the guide wheel and the supporting	Axle oil Hz-23 grease	Various temperature	At 50°C 20 ~25 (mm ² /s)	
Lubrication grease	Molybdenum Disulfide Lithium Grease (No. 3)	-20 °C~160 °C		
Fuel oil	In summer: No. 0 light diesel In winter: - No. 10 light diesel - No. 20 light diesel - No. 35 light diesel	>0 °C 0 °C ~ -5 °C -5 °C ~ -15 °C -15 °C ~-28 °C		
Coolant (antifreeze) (glycol type engine)	JT 225-1996 - No. 25 - No. 35 - No. 45	>- 15 ° C >- 25 ° C >- 35°C		

Oil volume data

Category	Unit	Value
Fuel tank	L	23
Engine oil	L	3.4
Hydraulic oil tank	L	20

05 | Maintenance | Tightening torque

Refer to the values in the below table for the tightening torque of each mounting bolt and nut on the machine. If the bolts or nuts are not tightened to the specified torque, the tightened or connected parts will loosen or even be damaged, causing machine failure or abnormal operation.

Tightening torque of general parts

Bolt strength grade	Yield strength N/mm ²	Bolt nominal diameter mm							
		6	8	10	12	14	16	18	20
		Tightening torque Nm							
8.8	640	9-12	22-30	45-59	78-104	124-165	193-257	264-354	376-502
10.9	900	13-16	30-36	65-78	110-130	180-210	280-330	380-450	540-650
12.9	1080	16-21	38-51	75-100	131-175	209-278	326-434	448-597	635-847

Bolt strength grade	Yield strength N/mm ²	Bolt nominal diameter mm							
		22	24	27	30	33	36	39	
		Tightening torque Nm							
8.8	640	512-683	651-868	952-1269	1293-1723	1759-2345	2259-3012	2923-3898	
10.9	900	740-880	940-1120	1400-1650	1700-2000	2473-3298	2800-3350	4111-5481	
12.9	1080	864-1152	1098-1461	1606-2142	2181-2908	2968-3958	3812-5082	4933-6577	

Tightening torque of hydraulic hose

Metric threaded rotary nut			
Metric thread	Outer diameter of steel pipe	N.m	
		Nominal moment	min./max
M12X1.5	6	20	15 - 25
M14X1.5	8	38	30 - 45
M16X1.5	8	45	38 - 52
	10		
M18X1.5	10	51	43 - 85
	12		
M20X1.5	12	58	50 - 65
M22X1.5	14	74	60 - 88
	15		
M24X1.5	16	74	60 - 88
M26X1.5	18	105	85 - 25
M30x2	20	135	115 - 155
	22		
M36x2	25	166	140 - 192
	28		
M42x2	30	240	210 - 270
M45x2	35	290	255 - 325
M52x2	38	330	280 - 380
	42		

Tightening torque of hydraulic hose

BSP thread and swivel nut		
N.m		
BSP thread	Metric torque	min./ max
G1/4	20	15 - 25
G3/8	34	27 - 41
G1/2	60	42 - 76
G5/8	69	44 - 94
G3/4	115	95 - 135
G1	140	115 - 165
G1.1/4	210	140 - 280
G1.1/2	290	215 - 365
G2	400	300 - 500

ORFS rotary nut			
N.m			
z thread	Marking specifications	min	max
9/16~18	-4	14	16
11/16~16	-6	24	27
13/16~16	-8	43	47
1~14	-10	60	68
1.3/16 ~12	-12	90	95
1.3/16 ~12	-14	90	95
1.7/16 ~12	-16	125	135
1.11/16 ~12	-20	170	190
2~12	-24	200	225

05 | Maintenance | Regular Inspection and Maintenance Table

Regular inspections and maintenance shall be performed on the machine according to the following table, with consideration of the working hours of the machine marked by the engine timer. If the working condition of the machine is very bad or the working intensity is high, or it is equipped with accessories such as hydraulic breaker hammer, etc., the inspection and maintenance period of some parts shall be reduced.

NO.	Page	Inspection and maintenance details	Maintenance period (total working hours)					
			10	50	100	250	500	1000
1		Routine inspection						
		Whether there is leakage of oil, water or fuel	▲					
		Appearance of mechanical parts and hoses	▲					
		Fixing situation of bolts and hydraulic joints	▲					
		Work condition for the working components, working lights and indicators	▲					
		Work condition for the diesel engine	▲					
2		Engine fuel system						
		Check the fuel level and refill	▲					
		Eliminate the condensate and impurities			▲			
		Clean the fuel tank				▲		
		Check the oil injection pressure					▲	
		Replace the filter element		☆		▲		
3		Engine cooling system						
		Check the condition of rubber hoses and clamps	▲					
		Check the cooling water level	▲					
		Clean the radiator fins					▲	
		Replace coolant		☆				■
		Check the coolant concentration	▲					
4		Engine lubricating system and others						
		Check the oil level of the engine oil (refill if necessary)	▲					
		Replace the oil		☆			▲	
		Replace the oil filter element		☆			▲	
		Check the tension of the fan belt		☆	▲			
		Check the valve clearance					☆	▲
		Check the tightness of the cylinder head					☆	▲
		Check the tightness of the engine support		☆			▲	

05 | Maintenance | Regular Inspection and Maintenance Table (continued)

NO.	Page	Inspection and maintenance details	Maintenance period (total working hours)						
			10	50	100	250	500	1000	2000
5		Engine air intake system							
		Empty the dust accumulation tank	▲						
		Clean the air filter element			▲				
		Replace the air filter element					▲		
6		Hydraulic system							
		Check the hydraulic oil level (refill if necessary)	▲						
		Remove water and dirt from the oil tank				▲			
		Change the hydraulic oil and clean the oil inlet filter screen							☆▲
		Replace the hydraulic oil return and pilot oil line filter element				☆	▲		
		Check the system pressure					▲		
7		Battery							
		Check the electrolyte level		▲					
		Check acidity and charging status					▲		
8		Travel reducer							
		Check the oil level and refuel				▲			
		Replace the oil						☆▲	
		Check the tightening torque of the reducer connecting bolts		☆			▲		
9		Track							
		Check and adjust the track tension	▲						
10		Thrust wheel, supporting wheels and guide wheels							
		Check the tightening torque for the mounting bolts of thrust wheels		☆		▲			
		Check the oil level of the guide wheel and the supporting wheel					▲		
11		Lubrication							
		Add lubricating oil to each lubrication point		▲					

▲ Perform at normal cycle ☆ Perform during the first maintenance ■ Perform once every spring and autumn

05 | Maintenance | Routine inspection

The general routine inspection shall be carried out for the machine every day or every 10 hours.

- 1) Leak inspection, check whether there are oil, water and fuel leaks in various parts of the machine.
- 2) Check whether there are scratches, breaks or deformations on the elastic connectors and accessories.
- 3) Check the fixing and connection of the hydraulic device.
- 4) Check the appearance of mechanical parts.
- 5) Check the working conditions of operating devices, control indicator lights and various indicators.
- 6) Check the working condition of the engine. Whether there is any problem with the exhaust color and abnormal sound, and determine the position of the abnormal sound.

05 | Maintenance | Engine fuel system


Maintenance instructions

Tank capacity	30 liters
Check oil level	10 hours
Drain water and impurities from oil tank	100 hours
Clean the oil tank	250 hours
Check the injection pressure for	500 hours
Replace the fuel filter element	250 hours

05 | Maintenance | Engine fuel system

1. Oil level inspection and refueling

The oil level can be checked through the oil level indicator on the instrument on the right control box panel or through the oil gauge tube. Check every day or every 10 hours. In order to avoid the formation of condensate, the fuel tank shall be filled after daily work. The fuel filler is located on the left side of the seat.

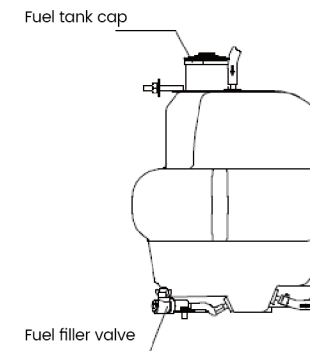

2. Drain water and impurities from the fuel tank

The condensate and sediment shall be removed every 100 hours.

Loosen the fuel drain plug to allow the condensate and sediment to flow out. Once the fuel flows out, reinstall the fuel drain plug. According to the quality of fuel used, the user can re-determine the cycle of draining condensate;

3. Clean the fuel tank

Clean every 250 hours.

- 1) Prepare a container to receive the discharged fuel
- 2) Remove the fuel drain plug and take out the filter screen located in the filler port. Fill up half of the fuel tank and empty it again.
- 3) Clean the refueling filter screen and install it in place.
- 4) Reinstall the fuel drain plug and fill up the fuel through the filter screen in the fuel filling hole.
- 5) Discharge the air in the oil circuit.

NOTE

During flushing the inside of the fuel tank, only diesel shall be used instead of trichloroethylene.

4. Check the oil injection pressure

Check every 500 hours.

The injection pressure should be checked regularly at the intervals shown in the maintenance table. Adjust if necessary. This inspection shall be carried out by our agency!

The working efficiency of the engine basically depends on the working condition of the fuel injection nozzle, so it must be maintained regularly to ensure its normal operation.

In order to better use the engine, the excavator driver should pay attention to the signs indicating that the fuel injection nozzle does not work well:

A. Impact sound coming from single cylinder or multicylinder; B. Engine overheating; C. Reduced efficiency; D. Black exhaust; E. Increased fuel consumption.


These signs may also be caused by the following reasons, so the following inspections should be carried out first:

A. The air inlet and exhaust valves are not well sealed; B. The fuel injection nozzle is not adjusted correctly; C. The fuel filter is dirty or damaged; D. Poor fuel quality; E. There is water in the fuel; F. The air filter is dirty or blocked.

5. Discharge the fuel circuit

During the replacement of fuel filter element, disconnecting of the fuel line, cleaning the fuel filter, or the fuel tank is unintentionally emptied, if air flows into the fuel circuit, it shall be exhausted before restarting the engine.

- 1) Open the exhaust screw on the fuel filter seat;
- 2) Operate the filler plug of the filling pump until there is no air in the fuel flowing out from the exhaust screw;
- 3) Close the exhaust screw on the fuel filter seat;

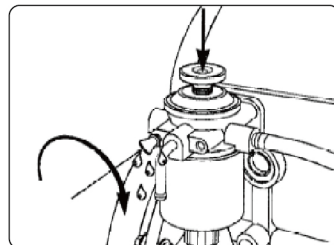

WARNING


The fuel pressure in the high pressure fuel pipe is sufficient to penetrate the skin and may cause serious personal injury. Wear gloves and protective clothing before operation.

6. Replace the fuel filter element or the fuel filter

The first replacement shall be carried out after working for 50 hours, and thereafter the filter element shall be replaced every 250 hours or every 3 months. Be sure to use the original filter element.


A. Replace the fuel filter element

- 1) Remove the fuel filter;
- 2) Clean the gasket surface of the filter seat with a lint free cloth;
- 3) Discard the O-ring;
- 4) Install a new O-ring;
- 5) Fill up the new filter with the new fuel, and lubricate the O-ring with clean engine oil;
- 6) Install the fuel filter as specified by the filter manufacturer.
- 7) After replacing the filter element, start the engine and check the sealing surface of the filter element for oil leakage.

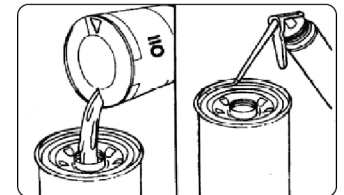

7. Replace the fuel filter

- 1) Remove the fuel filter from the bracket, and remove the clamp and rubber hose;
- 2) Install a new filter;
- 3) Fill up the new filter with clean fuel, and lubricate the O-ring with clean engine oil;
- 4) Finally, exhaust the air.

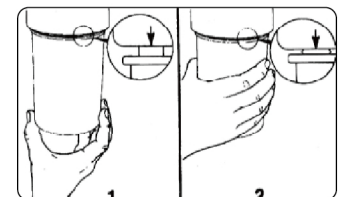

NOTE


In order to reduce the possibility of fuel leakage, ensure that the fuel filter is installed tightly but not too tightly. Excessive mechanical tightening will damage the fuel filter.

Maintenance instruction

Check the coolant level	every day or every 10 hours of operation
Check the status of rubber hoses and clamps	every day or every 10 hours of operation
Clean radiator fins	every 500 hours of operation
Replace the coolant	once each in spring and autumn
Check the coolant concentration	every day or every 10 hours of operation

1. Check the coolant level

- Check the liquid level position of the coolant in the radiator before starting the new machine, and check it every day or every 10 hours there after.
- Remove the radiator (water tank) cap and check the level of the coolant.
- If the engine is cold, the coolant level shall be between the highest and lowest water levels of balance tank.
- Observe the position of the coolant level in the balance tank.
- If the engine is cold, the coolant level shall be between the highest and lowest water levels.

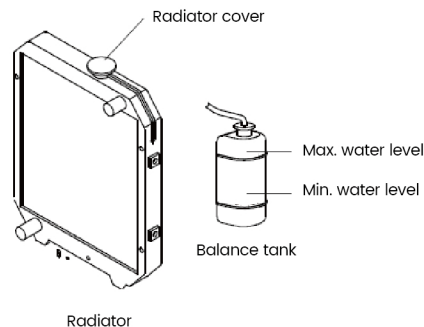


WARNING

The hot coolant will spray out when the radiator cover is unscrewed. How to unscrew the cover: After the system cools down, loosen the cover slightly and wait for the pressure to be completely released. If you unscrew the cover very quickly, the coolant will spray out, possibly causing personal injury.

2. Check the status of rubber hoses and clamps

- Check every 10 hours or every day.
- Check the rubber hose. If it is cracked or hardened due to aging, replace it with a new hose.
- Check whether the hose clamp is locked tightly. If it is loose or damaged, replace it in time.

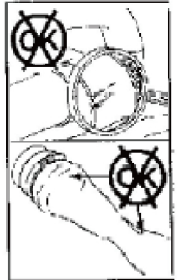

3. Clean and inspect the radiator fins

- Clean every 500 hours.
- Dust on the outer surface of the radiator (water tank) will affect the cooling effect and shall be cleaned in time.
- Open the engine hood and blow away the dust or leaves and other debris that block the oil cooler fins of the radiator fins with high-pressure water or compressed air. Clean the protective net in front of the oil cooler at the same time. For machines equipped with air-conditioning, the condenser fins shall also be cleaned.



WARNING

If compressed air, high-pressure water and steam hit the body directly, or use them to blow away dust or dirt, there is a danger of serious injury. Goggles, dust masks and other protective masks shall be used.


NOTE

In order to prevent damage to the radiator fins, the distance between the nozzle of high-pressure water or compressed air and the surface of the radiator (water tank) shall be greater than 500 mm.

A damaged radiator fins may cause water leakage or overheating. In dusty sites, check the radiator fins every day regardless of the maintenance cycle.

4. Change the coolant

Perform the first replacement after 50 hours of operation. Change it every 1000 hours there after.

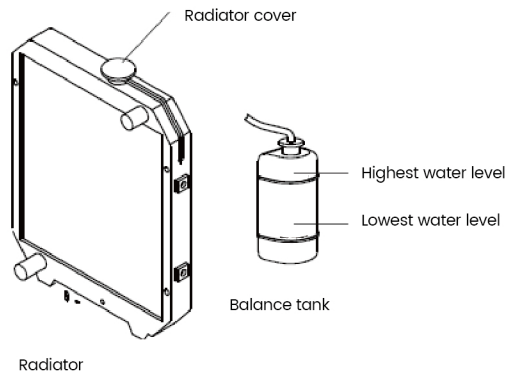

- 1) Remove the radiator (water tank) cover, unscrew the water drain valve, and drain the coolant;
- 2) Clean the cooling circuit, close the water drain valve, fill up the special cleaning fluid, then start the engine, operate the engine at low speed for 10 minutes, and then stop the engine to discharge the cleaning fluid;
- 3) Close the water drain valve again;
- 4) Fill up the coolant, make the engine idle for a few minutes, so that the coolant fills the entire cooling circuit;
- 5) Check the coolant level and replenish the coolant.



WARNING

Do not open the radiator (water tank) cover from a hot engine. The radiator cover shall not be opened until the temperature of the coolant drops below 50°C. Otherwise, the hot coolant or steam may cause personal injury.

5. Check the coolant concentration

Before the cold season begins, check the concentration of the coolant. The coolant shall be able to work at an ambient temperature of minus 20 degrees Celsius. If the ambient temperature is lower, the specific gravity of the antifreeze shall be increased.



WARNING

Coolant is toxic. Keep children and pets away from the coolant. If it is no longer used, it shall be disposed in accordance with local environmental regulations.



WARNING

- ▲ Antifreeze shall be used in any climate.
- ▲ Don't just use water as a coolant. Otherwise, the machine may be damaged due to corrosion.
- ▲ The river water contains a lot of calcium and other impurities. If river water is used, scale will be formed and adhere to the engine cooling water channel and radiator, causing heat exchange failure and overheating.
- ▲ Antifreeze is flammable, so take special care not to approach open flames.
- ▲ If the antifreeze splashes into the eyes, wash eyes immediately with water and go to the hospital for treatment in time.


Maintenance instructions

Oil volume	3.4 liters
Check oil level	Every 10 hours of operation or every day
Change the oil or replace the oil filter element	Every 250 hours of operation

1. Check the oil level

Check the oil level once before the new machine is put into use, and check it every 10 hours there after.

- 1) Park the excavator on a level ground and stop the engine.
- 2) Open the engine hood, take out the oil dipstick, and observe the oil sticky part on the oil dipstick. The oil level should be located between the minimum (L) and maximum (H) marks.
- 3). If necessary, you can fill oil from the oil port to make the oil level reach the specified value.

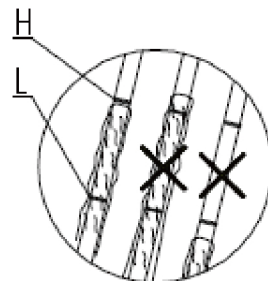

WARNING

After the engine is turned off, the parts and oil are still at high temperature, which may cause serious burns. Before starting maintenance, wait for the temperature to drop.

2. Change the engine oil

It shall be replaced after 50 hours of the working of new machine, and then it will be replaced every 250 hours.

- 1) Park the excavator on a level ground and stop the engine, and drain the oil while it is hot.

- 2) Remove the oil drain plug to make the oil flow out completely.



Avoid inhaling engine oil vapor, swallowing, and contacting with used engine oil for a long time.


- 3) Clean the drain plug and reinstall it. If the seal ring is damaged, replace it.

- 4) Open the oil filler port.

- 5) Refill with new oil until the oil reaches the "Maximum" mark H on the oil dipstick.

- 6) Cover the oil filler cap and allow the engine to idle for 5 minutes.

- 7) Check the oil level 10-20 minutes after the engine is stopped. Add oil if necessary.

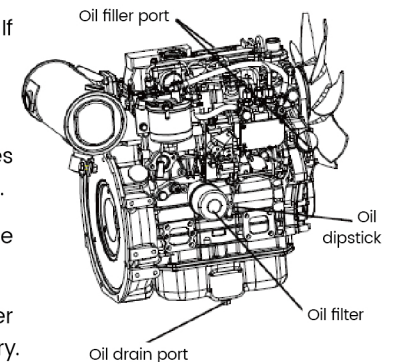

Yanmar 3TNV76-PYU

3. Replace the engine oil filter element

It shall be cleaned after 50 hours of the working of new machine, and it will be cleaned and replaced every 250 hours there after.

Replace the oil filter

- 1) Loosen and remove the oil filter element.
- 2) The gasket of the new filter element shall be oiled and placed in the ring groove on the end face of the filter housing.
- 3) Start the engine and check the tightness of the oil filter after installation.
- 4) Stop the engine and check the oil level. Add oil if necessary.


Maintenance instructions

Cleaning cycle of dust tank	Every 10 hours or every day
Cleaning cycle of air filter element	Every 100 hours of operation
Replacement cycle of air filter element	Every 500 hours of operation

1. Clean the dust tank

Clean the dust tank every 10 hours or every day.

- 1) Take out the dust tank and empty it regularly (once a day for dusty environment);
- 2) Clean the dust tank;
- 3) Check the fastening of filter element by hand;
- 4) Check the inner shell of the filter, and no foreign matters are allowed to enter the filter.
- 5) Reinstall the dust tank.

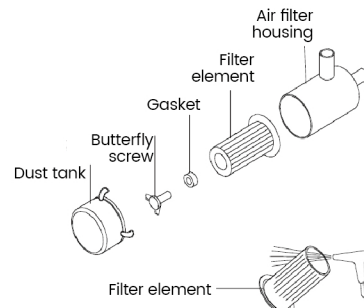

WARNING

If it is checked, cleaned or replaced while the engine is running, dust will enter the engine and cause engine damage. Shut down the engine before performing these operations. There is a danger of dirt flying out and causing injury when using the compressed air. Wear protective glasses, dust mask or other protective devices.

2. Clean the air filter element

The filter element of the air filter shall be cleaned every 100 hours.

- 1) Remove and empty the dust tank, loosen the butterfly screw and take out the sealing washer;

2) Take out the filter element of the air filter and blow the filter element with compressed air. The maximum pressure of the compressed air is 6 Pa. The compressed air pipeline is arranged from high to low, at 3 cm away from the filter wall. Use the compressed air to blow from the inside to the outside of the filter element when cleaning.

3) After drying the filter element (no more than 50 °C), reinstall the filter element. (Never clean the filter element by tapping it on a hard surface.)


NOTE

Before installing the cleaned filter element or replacing it with a new one, check whether the filter element is damaged. Method: Place a light source inside the filter element to check whether there are holes in the filter element. The filter element cannot be used if holes are found.

3. Replace the air filter element

Replace the filter element that has been repeatedly cleaned for 6 times or used for 500 hours.


- 1) Follow the same procedure as described in the cleaning instructions;
- 2) Inspect the quality of the new filter element with the light irradiation method;
- 3) Install a new filter element;
- 4) Install the butterfly screws and the dust tank.

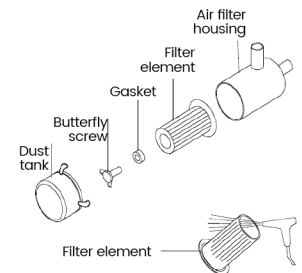

4. Intake pipeline inspection

Check the intake pipe every day for signs of damage to the engine, such as worn points, damaged pipes, loose clamps or broken pipes, etc.

If necessary, replace damaged pipes and tighten loose clamps to ensure that the air intake system does not leak.

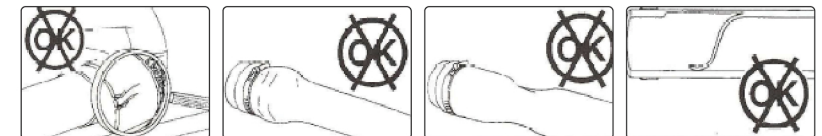

**WARNING**


- ▲ To prevent injury, do not maintain the engine while the engine is running. If maintenance must be performed while the engine is running, the operation shall be performed with at least two people and the following regulations shall be followed:
- ▲ One person shall sit in the operator's seat and ready to shut down the engine at any time. All personnel shall keep in touch with each other.
- ▲ During operating close to the fan, fan belt or other rotating parts, there is a danger of being caught by the parts, so pay special attention.
- ▲ Do not drop or insert tools or other objects into the fan or fan belt. Otherwise, the parts may break or fly out.

**WARNING**

If the noise of the machine is too loud, it will cause temporary or permanent hearing problems. During performing engine maintenance and prolonged exposure to noise, wear earmuffs or earplugs.

Check the tension of the fan belt

- Perform the first inspection after new machine works for 50 hours. Check every 100 hours thereafter.
- In order to ensure the normal operation of the generator and the service life of the belt, the fan belt shall be properly tensioned.
- For a correctly tensioned belt, apply 10 kg perpendicular to the belt between the fan pulley and the generator pulley, and the sinking amount for the belt is about 10 mm.
- If the belt is found to be damaged, it shall be replaced.

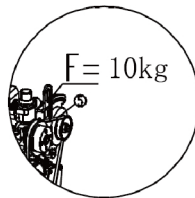

For the maintenance cycle and specific methods of other components of the engine, please refer to the "Diesel Engine Operation Manual" attached to this machine.

Maintenance instructions

Hydraulic oil tank capacity	25 liters
Check the oil level	Every 10hours
Change filter element	Every 2000 hours
Change the hydraulic oil	Every 2000 hours
Check the system pressure	Every 400 hours

**WARNING**

If hydraulic oil or grease is injected into the skin, which may cause serious injury and death. To prevent your hands or body from approaching the pressure oil leakage area. Cardboard or paper shall be used to check for leaks. If hydraulic oil is accidentally injected into the skin, go to the hospital for treatment immediately.


**WARNING**

- ▲ To avoid scalding, maintenance shall only be carried out after the hydraulic oil has cooled down or the oil is cold before daily work.
- ▲ During removing the oil filler flange cover, in order to prevent the oil from spraying out, slowly turn the cover to release the internal pressure.

1. Check the oil level in the hydraulic oil tank


Check the oil level of the hydraulic oil tank every 10 hours.

- 1) Park the machine on a level surface.
- 2) Start the engine to make each cylinder reciprocate.
- 3) Retract the stick cylinder, extend the bucket cylinder, and then the bucket falls to the ground, the bulldozer shovel shall be placed on the ground and shut down. As the figure shows.
- 4) Observe the hydraulic oil level through the oil gauge tube on the hydraulic oil tank.

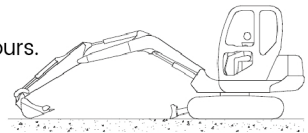

The level of the hydraulic oil shall be observed through the oil gauge hole.

The hydraulic oil level shall be clearly seen on the oil gauge, and the oil shall not be filled over much, otherwise the level can not be seen the oil gauge tube. Since this may cause damage to the hydraulic oil circuit or injection of oil. If the refueling is too full, stop the engine and drain the excess oil from the oil drain plug after the oil cools. If the oil gauge shows that the liquid level is too low or the liquid level is not visible, oil shall be refilled in time through the oil filler port on the top of the hydraulic oil tank.

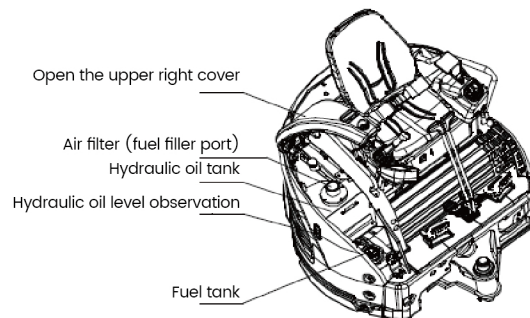

NOTE

The hydraulic oil level will change with the increase of oil temperature during operation. Before operation, the oil level shall be in the middle of the oil gauge tube. During normal operation, the oil temperature will rise, and the oil level will be closer to the upper end of the oil gauge tube.

2. Remove the water and dirt from the hydraulic oil tank

Drain the water and dirt from the hydraulic oil tank every 250 hours.

- 1) After stopping the machine until the oil temperature drops or before starting work every day, discharge the air from the oil tank.
- 2) Slowly loosen the drain valve or the drain plug at the bottom of the fuel tank (as shown in the figure).
- 3) Drain water or dirt until the clear and clear hydraulic oil is discharged. Close the drain valve again or tighten the screw plug.
- 4) Fill oil if the oil in the oil tank is insufficient.

3. Change the hydraulic oil and clean the oil suction screen

See Fig. 5-31 for changing the hydraulic oil.




WARNING

- ▲ 1) In order to avoid burns, drain the oil only after the hydraulic oil has cooled down or the oil is cold before daily work.
- ▲ 2) During removing the oil filler flange cover, in order to prevent the oil from spraying out, slowly turn the cover to release the internal pressure.
- ▲ 3) During replacing the oil, be careful not to let water, dirt, sand, etc. enter the oil tank.

Clean the oil tank

- 1) Drain the hydraulic oil when the hydraulic oil is hot.
- 2) Fully extend the piston rod of the hydraulic cylinder.
- 3) Stop the engine.
- 4) Remove bolts 1, cover 3, and washer 4.
- 5) Remove the screen 5 when the hydraulic oil tank is drained.
- 6) Carefully clean the filter screen and reinstall it.
- 7) Reinstall the drain plug.
- 8) Fill the hydraulic oil to the maximum level.
- 9) Operate the engine.
- 10) Extend and retract each cylinder of the excavating device.
- 11) Extend the piston rod of the hydraulic cylinder.
- 12) Fill the oil tank to the highest oil level.
- 13) Close the oil tank again to make the engine work.
- 14) In order to pressurize the hydraulic oil tank to retract the piston rod of the hydraulic cylinder.

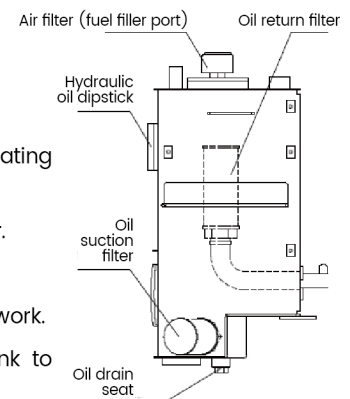

NOTE

The oil level in the hydraulic oil tank will be slightly increased after this last operation.

Replace the hydraulic oil return filter element

The first replacement shall be carried out after working for 2000 hours, and thereafter it shall be done every 2000 hours.

- 1) Fully extend the piston rod of each hydraulic cylinder, and then stop the engine.
- 2) It shall be replaced or cleaned every 2000 hours thereafter. 2) Remove the oil tank plug to depressurize it.
- 3) Screw out the filter element 6 and replace it with a new one (grease the sealing washer before installation).
- 4) Start the engine and operate the excavating mechanism.
- 5) Check the hydraulic oil level and replenish it if necessary.
- 6) Retighten the screw plug and close the sight glass cover.
- 7) In order to pressurize the hydraulic oil tank to retract the piston rod of the hydraulic cylinder.

4. Discharge the air in the hydraulic system

A. Discharge the air in the pump

- 1) Loosen the exhaust screw plug in the exhaust port, and check whether there is oil flowing out. The exhaust is completed.
- 2) Tighten the screw plug after the exhaust is completed.

NOTE

If the pump is operated if the pump is not full of oil, it will be abnormally heated and cause premature damage to the pump.

B. Discharge the air between the pump and the hydraulic oil tank

- 1) Start the engine and keep it running at medium and low speeds.
- 2) Operate the working device slowly for about 5 minutes to discharge the air.

NOTE

If the air between the pump and the fuel tank is not discharged to allow the engine to run at a high speed, it will also cause the pump to be heated and damage the pump.

C. Discharge the air in the oil cylinder

- 1) At low engine speed, extend and retract the oil cylinder to the position where is about 100 mm away from the stroke end for 4-5 times. (Be careful not to extend or retract to the stroke end).
- 2) Then, operate each cylinder to the stroke end for 3 to 4 times.
- 3) Finally, operate each cylinder to the stroke end for 4-5 times to completely discharge the air.

NOTE

If the engine is operated at high speed or the oil cylinder is operated to the stroke end immediately after starting the machine, the air in the oil cylinder will damage the piston seal and damage the oil cylinder.

D. Discharge the air in the rotary motor (when the oil in the housing of the rotary motor is discharged)

NOTE

During the exhaust, the machine cannot be rotated under any circumstances.

- 1) Run the engine at idle speed, loosen the exhaust plug, and check whether the oil flows out from the exhaust plug.
- 2) If there is no oil flowing out, remove the exhaust plug and fill the motor housing with hydraulic oil.
- 3) After the exhaust is completed, tighten the exhaust plug.


4) Finally, run the engine at a low idle speed and slowly turn the upper part of the car body left and right at least twice. So that the air is completely discharged.

NOTE

If the air in the motor is not discharged, the bearings of the rotary motor may be damaged.

E. Discharge the air in the walking motor (when the oil in the casing of the walking motor is discharged)

- 1) Run the engine at idle speed and loosen the exhaust plug. If oil comes out, tighten the screw plug.
- 2) Run the engine at idling speed and rotate the working device in 90 degree so that it is located on the side of the track. (As shown on the right)
- 3) Jack up the machine with the working device, keep the track on one side slightly away from the ground, and rotate the track for 2 minutes under no load. Repeat this action on the left and right tracks and rotate the tracks forward and backward equally.

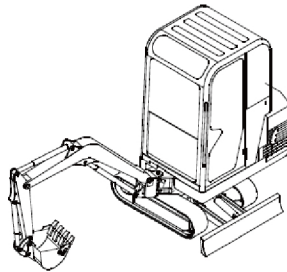

F. Discharge the air in the accessories

If the accessory is installed, run the engine at idle speed and operate the accessory pedal several times (about 10 times) until the air is discharged from the accessory oil circuit.


NOTE

- ▲ 1. If the manufacturer specifies a specific exhaust method, which shall be followed strictly.
- ▲ 2. After the exhaust operation is completed, turn off the engine and let the machine stand for at least 5 minutes before starting operation to eliminate air bubbles in the oil in the hydraulic cylinder.
- ▲ 3. There shall be no leakage during the inspection. Wipe the spilled oil if any.
- ▲ 4. After the exhaust operation is completed, check the oil level, and fill it if the oil level is low.

5. Replace the oil return filter element

The first replacement shall be carried out after working for 2000 hours, and thereafter it shall be done every 2000 hours. The oil return filter is in the hydraulic oil tank, so:

- 1) Fully extend the piston rod of each hydraulic cylinder, and then stop the engine.
- 2) Remove the oil tank bolt 1.
- 3) Screw out the filter element 6 and replace it with a new oil return filter element (grease the sealing washer before installation).
- 4) Start the engine and operate the excavating mechanism.
- 5) Check the hydraulic oil level and replenish it if necessary.
- 6) Retighten the screw plug and close the sight glass cover.
- 7) In order to pressurize the hydraulic oil tank to retract the piston rod of the hydraulic cylinder.

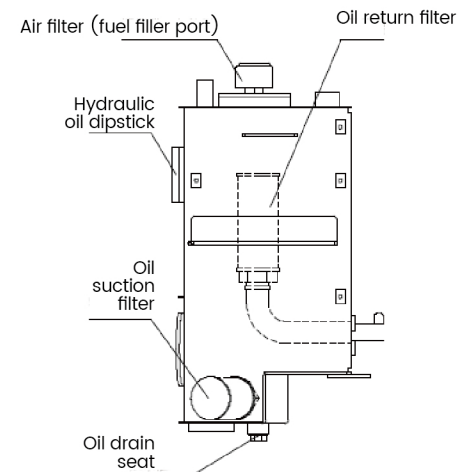


6. Replace the fuel filter element of pilot oil circuit

The first replacement shall be carried out after 1000 hours working for a new machine, and thereafter it shall be done every 1000 hours.

Note

Be sure to discharge the air pressure in the hydraulic oil tank before removing the filter element.

- 1) Unscrew oil filter housing.
- 2) Remove the filter element.
- 3) Install the new O-ring in the filter head groove.
- 4) Before assembling the new filter element, apply a layer of hydraulic oil on the sealing surface of the filter element and install the filter element into the filter head.
- 5) Clean the oil filter housing and soft magnet, and be careful not to allow dirt, dust or water to enter the oil filter housing.
- 6) Tighten the oil filter housing and filter head with a torque of 25~35N.m.
- 7) Connect the pipeline and start the engine slowly. Operate continuously for 3-5 minutes to discharge the air in the system.
- 8) Park the machine on the level ground, stop the machine to check the oil level, and add oil if necessary. Pay attention that the oil filling shall not exceed the required maximum oil level limit.

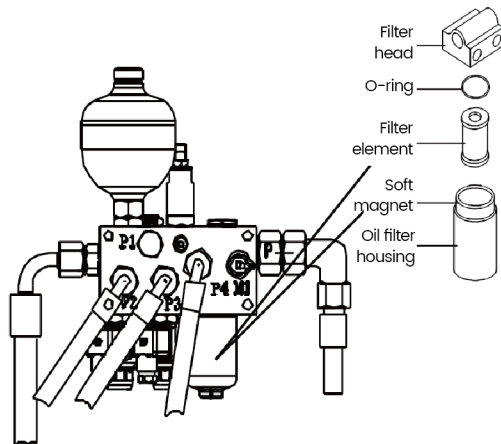

The replacement cycle of hydraulic oil and filter elements during using accessories (such as breaker hammer)

Since if the hydraulic hammer is used, the pollution of the hydraulic system is increased and corrosion is accelerated. Compared with excavating devices, the replacement cycle of hydraulic oil and filter elements shall be shortened accordingly, so as not to damage the hydraulic pump and other hydraulic components. The recommended replacement cycle is as follows: (unit: hour)

Hydraulic hammer operating rate	Hydraulic oil changing cycle	Replacement cycle
50%	500	500
100%	250	250

The above table is suitable for the 100% operation of bucket and hydraulic hammer. The replacement cycle shall be adjusted according to the use time of hydraulic hammer or bucket when the hydraulic hammer or bucket is operated intermittently.

NOTE

If a hydraulic hammer is used, the system pressure shall be adjusted appropriately according to the requirements of the hydraulic hammer.

**WARNING**

- ▲ 1) The battery contains sulfuric acid liquid, which is highly corrosive. Please keep it away from children. Users should wear protective glasses and rubber gloves when operating the battery. Once the eyes, skin and clothes are splashed with sulfuric acid, wash them with plenty of water immediately, and go to the hospital for treatment in serious cases.
- ▲ 2) The battery will generate hydrogen and oxygen during charging. Once it catches an open flame or the exhaust port is blocked, it will cause explosion. Therefore, the battery should be far away from the open flame to avoid short circuit.
- ▲ 3) The battery case is made of polypropylene by injection molding, which is flammable and should be kept away from open fire.

1. Battery storage

- 1) This series of products are lead-acid batteries with charged fluid. They should be stored in a dry, clean and well ventilated environment at 5-25 °C. They should be free from direct sunlight and at least 2 m away from the heat source. If the ambient temperature is too high, the performance of the battery will be greatly affected.
- 2) The battery shall not be placed upside down and horizontally, and shall not be subjected to any mechanical impact and heavy pressure.
- 3) The storage period of this series of batteries at room temperature is 6 months, and the batteries can be used without recharging within 6 months. If the storage period of the battery exceeds 6 months, it can still be used after recharging.

2. Charge the battery

Hydrogen and oxygen are produced by electrolyzing water in the later stage of battery charging, which causes water loss. The higher the charging voltage, the more water loss. This series of batteries do not need to be filled with water during use, so the constant voltage charging method is highly recommended and the constant current charging method is avoided as far as possible.

2.1 Recharge the battery**2.1.1) Constant current charging method**

Charge the battery for 2-4 hours at the current (A) that is one tenth of the battery rated capacity at the rate of 20 hours.

2.1.2) Constant voltage charging method

Charge the battery at a constant voltage of 16V for 16h (the maximum current shall not exceed 25A).

2.2 Normal battery charging

2.2.1) Charge the battery at the current {A} that is one twentieth of the battery rated capacity at the rate of 20 hours until the battery voltage reaches 14.4V, and continue charging for 2-3 hours.

2.2.2) Charge the battery at a constant voltage of 16.0V for 24h (the maximum current shall not exceed 25A).

**WARNING**

- ▲ 1) The battery will produce gas during charging, and the vent hole on the battery should be checked regularly to avoid being blocked, so as to avoid battery explosion.
- ▲ 2) When charging the battery, connect the positive pole of the charger with the positive pole of the battery, and connect the negative pole of the charger with the negative pole of the battery. Reverse charging is strictly prohibited.
- ▲ 3) During the charging process, if the temperature of battery electrolyte exceeds 45 °C, the charging voltage or charging current should be reduced as appropriate to prevent electrolyte splashing due to excessive temperature.

3. Install the battery

- 1) Before installing the battery, please pay attention to the safety signs on the battery label to prevent unnecessary accidents.

2) A small amount of Vaseline oil shall be coated on the end post of the battery before installation to prevent corrosion. The wiring shall be firm and reliable. It is strictly prohibited to knock the end post to prevent the battery from leaking acid due to the loosening of the end post.

3) When installing the battery, first connect the positive pole of the battery with the positive pole of the automobile generator, and then connect the negative pole of the battery with the negative pole of the generator.

4) The battery shall be firmly installed on the battery rack by upper fixing or lower fixing to avoid battery damage caused by looseness.

4. Battery maintenance

1) The battery cover is equipped with an indicator to display the battery charge state. When the indicator displays in green, the battery can be used normally. The battery shall be charged in time when the indicator displays in black, and the battery shall be replaced immediately when the indicator displays in white.

2) The battery with power loss caused by various reasons during use shall be charged in time to prevent performance degradation caused by the sulphating battery.

3) The battery shall be strictly prevented from overcharging during use and charging to avoid premature failure due to excessive water loss, longer grid and lead paste falling off.

4) The battery that has been installed and used in the machine shall be removed from the machine and stored in a ventilated and dry place if it is not used for a long time (generally more than 15 days). The battery shall be recharged every 3-6 months (depending on whether the indicator is black).

5) For the battery in question, please contact Boleo Heavy Industry dealer in time to solve it.

Maintenance instructions

Rotary reducer lubricating oil capacity	0.5 liters
Rotary reducer lubricating oil capacity	1 liters (each side)
Check the lubricating oil level and add oil	every 250 hours of operation
Change the lubricating oil	every 1000 hours of operation
Check the tightening torque of the connecting bolts of the reducer	every 500 hours of operation



WARNING

The oil in the reducer will heat up shortly after the machine moves. After turning off the engine, the walking reducer and oil are still at a high temperature, which can cause severe burns. Before starting operation, wait for the oil to cool down. Loosen the exhaust screw plug by two to three threads and release the air pressure in the box before removing the screw plug. It is dangerous to remove the screw plug quickly.

A: Walking reducer

1. Check the lubricating oil level of the walking reducer and fill oil




WARNING

The oil in the reducer will heat up shortly after the machine moves. After turning off the engine, the walking reducer and oil are still at a high temperature, which can cause severe burns. Before starting operation, wait for the oil to cool down. Loosen the exhaust screw plug by two to three threads and release the air pressure in the box before removing the screw plug. It is dangerous to remove the screw plug quickly.

Check it every 1000 hours.

- 1) Prepare an Allen wrench.
- 2) Park the excavator on level ground.
- 3) Rotate the walking reducer to make the 3 screw plugs on its outer end are perpendicular to the ground, and then stop the machine.
- 4) Open the screw plug ① and check the position of the lubricating oil level, which should reach the lower part of the screw plug hole

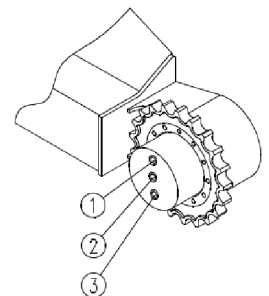

5) Refill the engine oil if necessary (according to the following steps those are used for changing the lubricating oil)

6) Clean the screw plug ① and reinstall it.

2. Replace the lubricating oil (for each reducer)


The first replacement shall be carried out after 1000 hours working for a new machine, and thereafter it shall be done every 1000 hours.

- 1) Park the excavator on level ground.
- 2) Rotate the reducer to make the 3 screw plugs on its outer end perpendicular to the ground, and then stop the machine.
- 3) Drain the oil when the reducer oil is hot.

NOTE

Don't burn yourself by hot oil.

- 4) Loosen screw plug ③ to drain oil, and loosen screw plug ① to drain oil completely.
- 5) Loosen the bolt ②.
- 6) Add the specified lubricating oil from the oil filling hole ① until oil flows out from the oil level inspection hole ②.

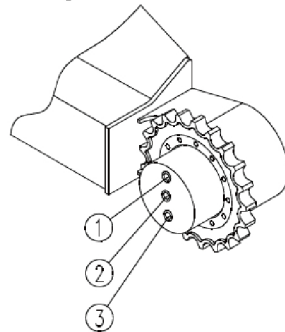

3. Check the tightening torque of the connecting bolts of the walking reducer and the rotary reducer


The tightening inspection of the connecting bolts of the walking reducer

Perform the first inspection after new machine works for 50 hours and then every 500 hours.

B. The tightening inspection of the connecting bolts of the rotary reducer

The first inspection after working for 50 hours and then every 500 hours.

Tighten the bolts connecting the reducer and the platform.

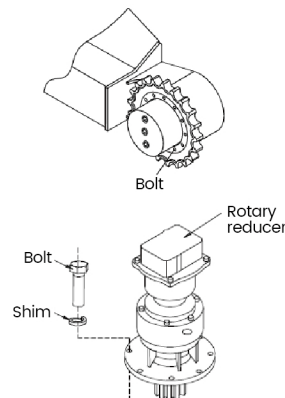

Check and adjust the tension of the track

Check every 10 hours.

- 1) Park the excavator on a level and solid ground.
- 2) Put the bulldozing board at the back and fully extend the piston rod of the bulldozing cylinder until the crawler is slightly lifted.
- 3) Support the bucket on the ground and manipulate the boom cylinder to raise the front of the excavator (as a in Figure 1).
- 4) Correctly tension the track so that there is a 10-15 mm deflection between the middle thrust wheel and the track (as b in Figure 1).
- 5) Remove the cover ① (a in Fig. 2) on each track frame, and expose the fuel nozzle of the tensioner (② in Fig. 2).
- 6) In order to loosen the track, first loosen the joint ② (Fig. 2) to let the grease flow out, and then retighten it after getting the correct tension.
- 7) In order to tension the track, connect the joint of grease gun (provided as a random tool) with the joint ② (Fig. 2). Then add oil by using a grease gun until it is correctly tensioned.

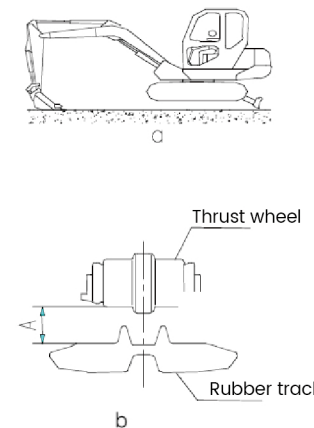


Fig. 1

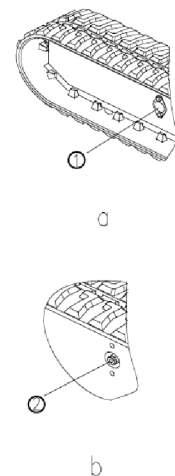


Fig. 2


1. Check the tightening torque of the thrust wheels

The first inspection after working for 50 hours and then every 500 hours.

The tightening torque of bolt ① shall be 110N·m.

If the bolts loose, unscrew the bolts, remove the thread locking agent between the bolt threads, and then apply the thread locking agent to the threaded joints and tighten them as per the specified torque.

If the bolts must be replaced, they shall be replaced with bolts of the same specification and strength class.

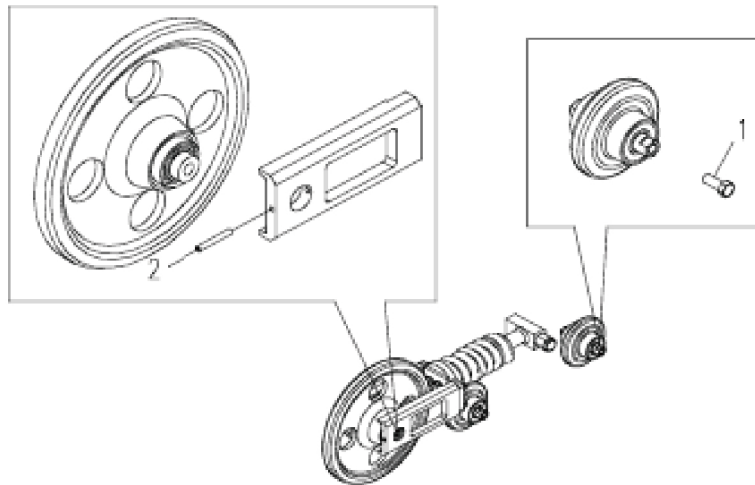


1. Thrust wheel bolt 2. Guide wheel stop pin

Lubricate the lubrication points of the machine every 50 hours.

Lubrication steps:

- 1) Start the working device and put the bucket on the ground.
- 2) Put the bulldozing shovel on the ground.
- 3) Stop the engine.
- 4) Wipe clean the filling nozzles of each oil cup.
- 5) Lubricate each lubrication point and wipe off excess grease squeezed out.

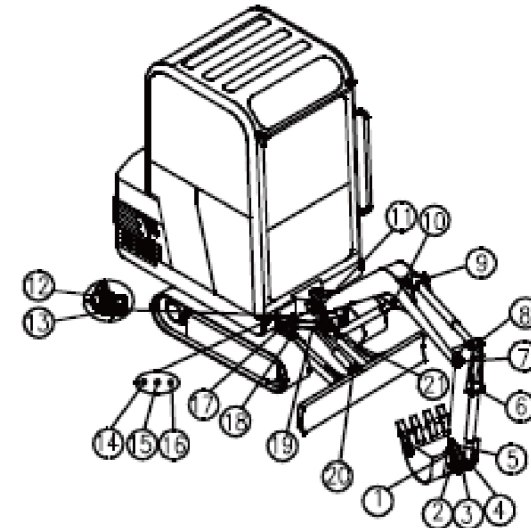

1. Hinge point between stick and bucket
2. Hinge point between connecting rod and bucket
3. Hinge point between rocker and connecting rod
4. The lubrication point of the bucket cylinder head
5. Hinge point between rocker and stick
6. Lubrication point at the tail of bucket cylinder

7. Hinge point between rocker and stick
8. The lubrication point of the stick cylinder head
9. Lubrication point at the tail of stick cylinder
10. Lubrication point at the boom cylinder head.
11. Hinge point between boom and platform
12. Lubrication point at the upper pin of the steering head
13. Lubrication point at the lower pin of the steering head
14. Lubrication point of the swing cylinder
15. Lubrication points inside the rotary motor raceway
16. Lubrication point at the rotary support gear ring
17. Lubrication point at the head of the swing cylinder.
18. Hinge point between bulldozer shovel and frame
19. Lubrication point at the bulldozing cylinder head
20. Lubrication points on the end of the bulldozing cylinder
21. Lubrication point at the tail of the boom cylinder

NOTE

- ▲ 1) If there is abnormal noise in the lubrication area, the additional lubrication beyond the maintenance interval is required.
- ▲ 2) When operating the machine for the first 50 hours, lubricate it every 10 hours.
- ▲ 3) If the excavation operation is carried out in water, lubricate the pin shaft immersed in water before and after the operation.
- ▲ 4) When carrying out heavy load operation or deep excavation, lubricate the mounting pins of the working device before each operation, and then operate the boom, stick, bucket and blade several times before applying grease. In addition, lubricate it every 10 hours.
- ▲ 5) Please fill molybdenum disulfide lithium grease (No. 3), and fill the rotary support and bulldozer with molybdenum disulfide lithium grease (No. 2).




Replace the bucket teeth before the bucket teeth base is worn.

WARNING

When replacing the bucket teeth, it is very dangerous if the working device moves accidentally due to wrong operation. Therefore, before replacing the bucket teeth, put the working device in the locked state, then shut down the engine and lock all joysticks firmly. During replacement, wear necessary protective equipment to prevent the lock pin from flying out.

Replace the bucket teeth

- 1) Place the bottom of the bucket on blocks for removal. Check that the working device is in a stable state and the bucket is placed horizontally. Shut down the engine.
- 2) Loosen the screw and nut on the bucket teeth by using the hexagon socket screwdriver and wrench to remove the bucket teeth.
- 3) Clean the mounting surface. Install the new bucket teeth into the teeth base, and then tighten the screw and nut by using the hexagon socket screwdriver and wrench to install the bucket teeth on the tooth base.

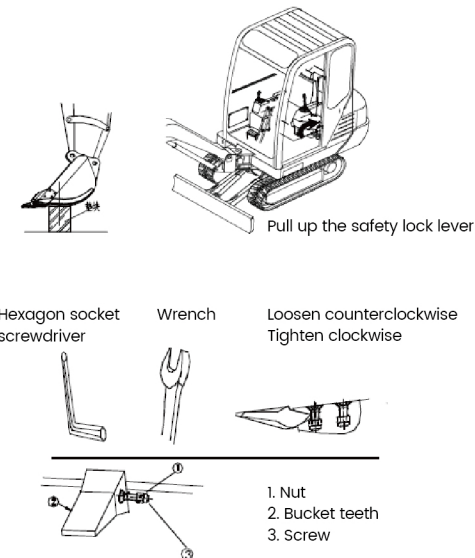

If the floor rubber mats are dirty, clean them at any time to prevent accidents due to slipping and falling of the floor.




WARNING

If you accidentally touch the joystick, the working device or machine will suddenly move, causing serious accidents. Therefore, be sure to stop the machine on a solid and flat ground before removing the floor rubber mat. The operator must lift the pilot safety handle and its upper control box to lock the pilot system before standing up from the seat.

Washing steps of floor mats

- 1) Take out the floor rubber mat in the cab.
- 2) Remove dirt with a brush or directly rinse the floor mat with water.
- 3) Clean the floor in the cab with a dry mop.
- 4) After the floor rubber mat is blown dry, recover the mats in the cab.

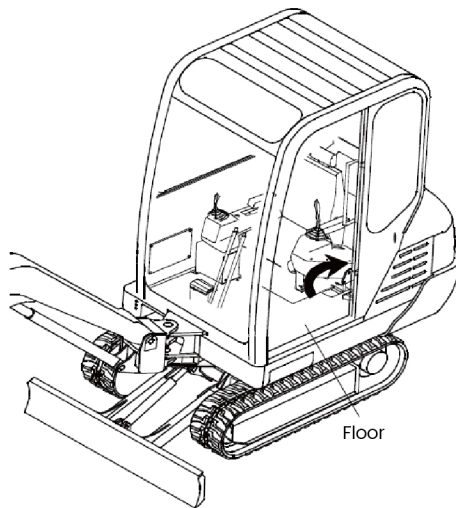

06 Accessories guide

- 6-2 Safety Precautions
- 6-4 Assembly/disassembly steps of accessories
- 6-5 Accessories operation guide
- 6-9 Daily inspection of hydraulic breaker hammer
- 6-10 Quick coupler
- 6-11 Grab bucket
- 6-13 Drilling device
- 6-15 Backhoe bucket with scraper

If you install accessories or options that are not approved by Boleo, it will not only affect the service life of the machine, but also cause some safety problems.

During installing accessories that are not approved by Boleo, please contact Boleo dealer in advance.

If not, we will not be liable for any accidents or damages caused.

1. Safe operation accessories

- The accessories have powerful auxiliary functions. To prevent serious injury or damage, the accessories shall be used correctly.
- Do not use the accessories before reading and understanding the instruction thoroughly. If the instruction is lost, please ask the manufacturer or accessory sales company for a new one.
- Install the necessary front guard on the machine as per condition of the accessories.
- According to the condition of the accessories, vibration and noise can make it difficult for colleagues to convey operating instructions. Before starting the operation, a commander shall be assigned and the signal to be used shall be determined.
- If there is a heavy load on the accessories, do not make turning to the side, especially on slopes, it is very dangerous.
- Compared with a machine equipped with a bucket, the load at front of the working device is larger and is unstable for the machine equipped with accessories such as a breaker hammer. To avoid the risk of tipping, do not operate if the accessory is turned to the side.
- After installing the accessories, the rotation range and the center of gravity of the machine are different, and the machine may move unexpectedly. Be sure to properly check the condition of the machine.
- Before starting operation, set a cordon around the machine to prevent personnel from entering. Do not operate the machine if there are people near the machine.
- To prevent serious accidents caused by wrong operation, do not put your feet on the pedals except operating the pedals.

2. Disassembly or assembly accessories

During accessories disassembly or assembly, be sure to follow the below steps to ensure safety.

- Disassembly and assembly on a firm and level ground.
- If there are two or more people performing operations, ensure and follow these signals during operation.
- A crane shall be used during lifting or carrying heavy objects (over 25Kg).
- During disassembling heavy parts, support the parts before disassembling. During lifting with a crane, pay special attention to the position of the center of gravity.
- It is dangerous to operate if the load is lifted by a crane. Prepare a support and keep it safe.
- During placing disassembled accessories or assembled accessories, make sure that they are in a stable state and will not tip over.
- Do not walk under the load lifted by the crane. Stand in a safe place where there is no danger even if the load falls.



WARNING


A qualification certificate is required to operate a crane. Unqualified personnel are not allowed to operate the crane. For details on disassembly and assembly operations, please contact Boleo Heavy Industry dealer.

1. Disassembly steps

- 1) Put the accessories on the ground and turn off the engine.
- 2) Turn the start switch to the ON position and push the left control box to the free position.
- 3) Operate each working device joystick and accessory control pedal 2 to 3 times forward, backward, left and right in full stroke to eliminate the internal pressure in the hydraulic oil circuit.
- 4) After confirming that the oil temperature has decreased, lock the rotary valves connected to the inlet and outlet pipes on the stick side.
- 5) Remove the hose on the accessory side, put the plug on the combined washer and tighten it to the two outlets.
- 6) Remove the accessories by removing the pins (2 pcs). Then install the bucket.
- 7) Wrap the unconnected ends of the two rubber tubes of the hydraulic hammer with a clean plastic bag, and dust-proof measures shall be taken. Keep well the accessories.

2. Assembly steps

- 1) Remove the bucket.
- 2) Put the accessory on a flat place, and connect the stick and the hydraulic hammer and the connecting rod and the hydraulic hammer with pin A and pin B in turn.
- 3) After confirming that the oil temperature has decreased, remove the plugs from the outlet and inlet respectively. Be careful to prevent dust, dirt, etc. from sticking to the hose port. If the combination gasket is damaged, replace it with a new one.
- 4) Connect the hose on the accessory side. During connecting, check the flow direction of the oil, and be careful not to make a wrong connection.
- 5) Unlock the rotary valves connected to the inlet and outlet pipes on the stick side.
- 6) After installing the accessories, confirm whether the oil level in the hydraulic oil tank is proper.

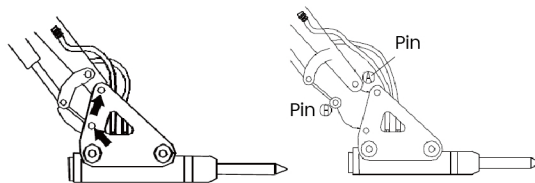

This section introduces the precautions that shall be observed for operating hydraulic excavators equipped with accessories.

NOTE

Select the most suitable accessory for the main engine. The models of machines that can install accessories are different. For the selection of accessories and machine models, please contact your Boleo dealer.

Hydraulic breaker hammer


1. Guidelines for the use of hydraulic breaker hammer

Hydraulic breaker hammer is the most common work accessory. It is widely used in the demolition of buildings, road cracking, tunnel operations, steel slag and stones crushing, and crushing operations in quarries.


- 1) During crushing operations, please make sure that the direction of the apex of the hammer drill rod is perpendicular to the surface of the broken object, and keep it as long as possible. If it is inclined to the surface of the broken object, the drill rod may slip off the surface, which may damage the drill rod and affect the piston.

During crushing, please select the appropriate hitting point, and confirm that the drill rod is indeed stable before hitting.

It is required to keep adjusting the bucket cylinder during operation to keep the penetration direction of the drill rod and the direction of the breaker hammer body in a straight line.

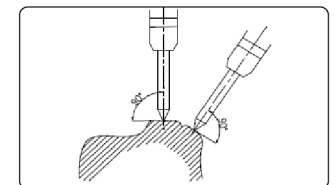


The direction of the apex of the hammer drill rod shall be perpendicular to the surface of the broken object

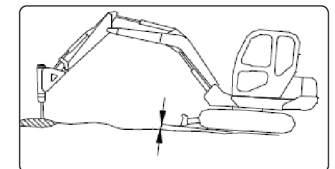

- 2) During impacting, press the drill rod onto the impact surface to make the chassis is about 5 cm off the ground, and the machine shall not be away from the ground too much.


3) During continuous impacting to the same impact surface, if the drill rod cannot penetrate or break the surface within 1 minute, change the impact position to break it near the edge.

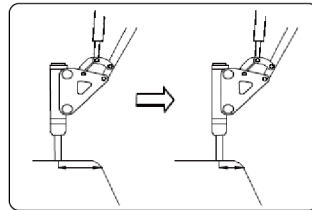

4) Make sure that the drill rod always impact the surface properly to prevent the impact force from being used if there is no resistance.

If the rock or the target has been crushed, stop the action of the breaker hammer immediately. The continuous aimless impacting will cause the front part and the main bolts to loosen and damage, and even damage the excavator itself.

Aimless impacting comes from improper insertion and shaking during use of the breaking hammer.

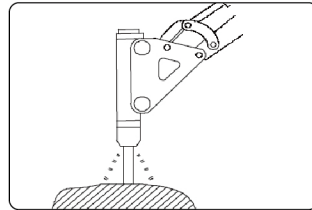



2. Operation taboos for hydraulic breaker hammer

In order to ensure longer service life and safe operation, do not operate the machine in any of the following:


NOTE

Do not operate all cylinders to the end of the cylinder stroke, and always leave a margin of about 5 cm.


- 1) Push heavy objects or large rocks with the breaker hammer.
- 2) Operate with turning force.

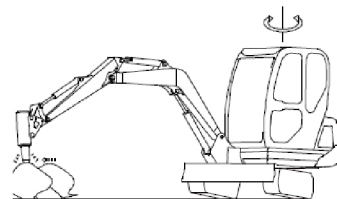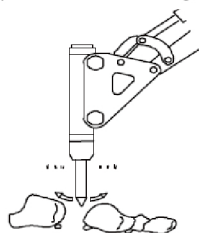


3) The drill rod is moved during impact operation.

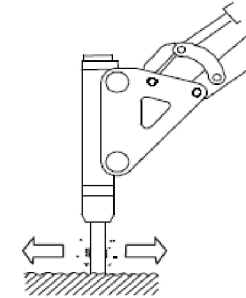


4) Apply impact force horizontally or upward

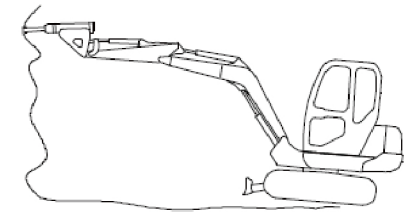


5) Swing the breaker after it has penetrated the rock

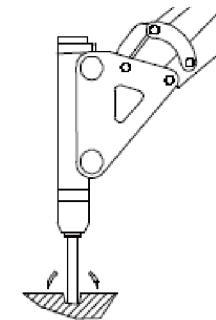


6) Pecking operation

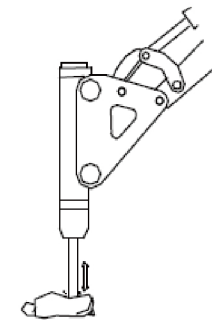


7) Carry out crushing operations in water or muddy ground

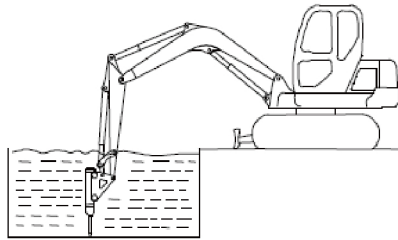


8) Use the breaking hammer as a tool for lifting heavy objects.

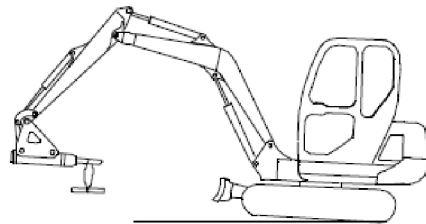

9) The bucket cylinder is fully extended to lift the machine off the ground.


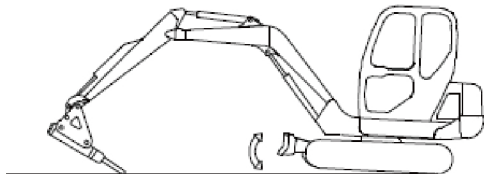


Carry out the daily inspection and maintenance of the hydraulic breaker hammer according to the following table.

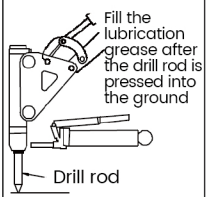Serial number	Inspection or maintenance items	Check points	Maintenance method
1	Check whether the bolts and nuts are loose or missing	Body bolts and side plate bolts	Tighten the bolts or reinstall new bolts
2	Check the hose parts for looseness, hose damage or oil leakage	Breaker hammer hydraulic pipeline High pressure tubing	Re-tighten the loose part and replace the severely damaged part
3	Lubrication 	It is better to use 10ml/time lubricating oil for lubrication before operation and after each continuous operation for 2 to 3 hours. Lubricating oil shall be filled at 5-10 times for each lubrication.	Fill lubricating oil from the lubricating oil filling hole at front of the breaking hammer
4	Check the capacity and pollution of hydraulic oil	Condition of hydraulic oil	The hydraulic oil quality changes due to different working environments. The simple way to judge the quality of the oil is to observe whether the color of the oil changes. If the oil quality deteriorates seriously, please drain the hydraulic oil in the hydraulic oil tank and clean the oil tank before filling new hydraulic oil.

1) Pry up with a crowbar ①.

2) Put the bucket pin into ②③, put down, put down the crowbar, and the bucket is installed.

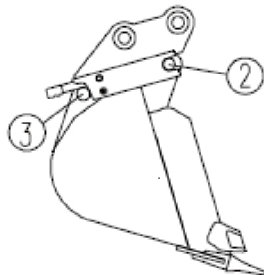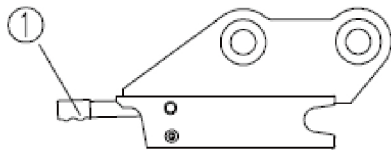

2. Unloading the bucket

1) Pry up ① with a crowbar. 2) Unload the bucket.

The grab buckets are used for digging or loading on one side of a ditch or confined space. It is applicable to the foundation works such as cleaning up the sundries in the sewage ditch and dredging the passageway of the upper and lower sewers.

1. Grab bucket installation

1) First remove the bucket, bucket cylinder, connecting rod, rocker or other accessories (as shown by the arrow in Fig. 1);

2) Install the grab bucket directly on the stick (as shown by arrow ① in Fig. 2);

3) Install the relevant grab bucket pipe assembly onto the connecting seat of the stick body (as shown by arrow ② in Fig. 2);

4) Then connect the oil inlet of the large chamber of the original bucket oil cylinder to the oil inlet of the large chamber of the grab bracket oil cylinder, and connect the oil inlet of the small chamber of the original bucket oil cylinder to the oil inlet of the small chamber of the grab bucket oil cylinder (as shown by the arrow ③ in Fig. 2).

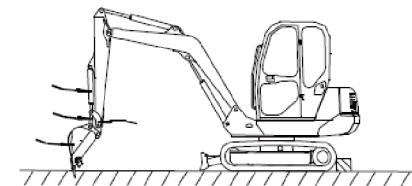


Fig. 1

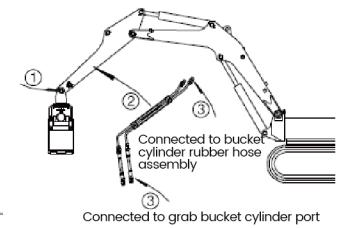



Fig. 2

2. Grab bucket operation


You can control the stick to operate the distance of the grab bucket by operating the left pilot valve handle; you can control the lifting and lowering of the boom and the retraction of the grab bucket by operating the right pilot valve handle, in order to carry out excavation operations

3. Precautions for grab bucket operation

- 1) For safety, it is necessary to avoid sudden walking, turning and stopping of the machine.
- 2) Make the bucket teeth vertical when digging.

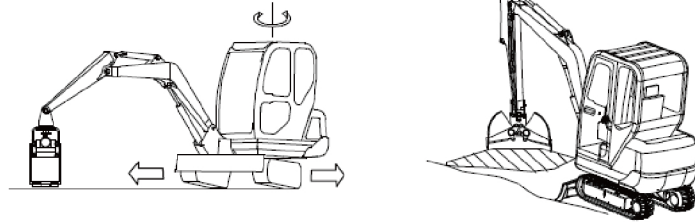

- 3) Do not use a grab bucket to crush stones or cut into the soil.
- 4) Do not use grab bucket to drive or pull piles.

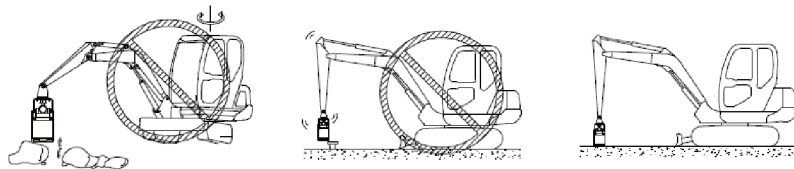

- 5) Before leaving the machine, open the grab bucket and lower it to the ground.


NOTE

Remove the grab bucket from the stick when transporting the machine.

4. Grab bucket maintenance

Lubrication

- 1) Park the machine on a hard and level ground, lower the working device to the ground, and then shut down the engine.
- 2) Use a grease gun to inject grease into the grease fitting as shown by the arrow in the right figure. (There are two grease fittings on the left and right sides of the grab bucket and one grease fitting on the pin connected to the stick)

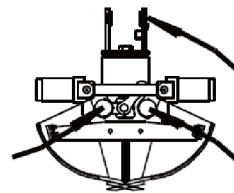


1. Installation of drilling device

- 1) Remove the bucket or other accessories.
- 2) Put the accessory on a flat place, and connect the stick to the drilling device and the connecting rod to the drilling device with pin A and pin B in turn.
- 3) After confirming that the oil temperature has decreased, remove the plugs from the outlet and inlet respectively. Be careful to prevent dust, dirt, etc. from sticking to the hose port.

If the combination gasket is damaged, replace it with a new one.

- 4) Connect the hose on the accessory side. During connecting, check the flow direction of the oil, and be careful not to make a wrong connection.
- 5) Unlock the rotary valves connected to the inlet and outlet pipes on the stick side.
- 6) After installing the accessories, confirm whether the oil level in the hydraulic oil tank is proper.

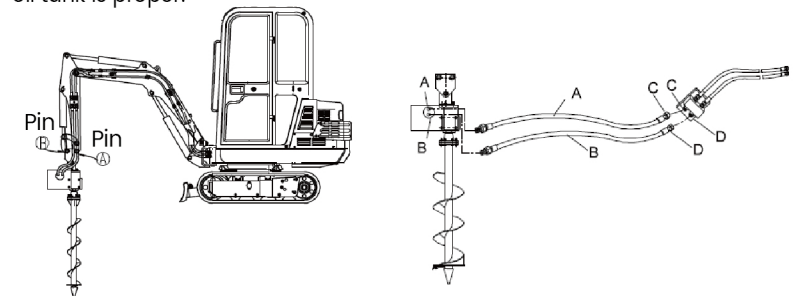

2. Operation of drilling device


- 1) Operate the pilot valve handle that controls the boom and stick, and lift the top of the drilling tool vertically. Operate the boom oil cylinder to gently press the drill bit against the ground, lift the front part of the machine, and exert pressure on the drill bit during drilling.
- 2) Step down the auxiliary control pedal, and the drilling tool starts to work (rotate) when it reaches a certain depth. Operate the boom cylinder and stick cylinder to pull the drill bit out of the drill hole when the drilling tool still rotates.
- 3) If there is mud on the drilling tool, the drilling tool can rotate reversely by operating the solenoid valve, and the mud will fall off.

3. Precautions for operation of drilling device

1) Please make sure that the direction of the drill bit is perpendicular to the working surface when drilling and keep this state as far as possible. If it is inclined to the working surface, the drilling tool will be damaged in this case. During drilling, please select the appropriate drilling point, and confirm that the drill bit is indeed stable before drilling.

It is required to keep adjusting the bucket cylinder during operation to keep the penetration direction of the drilling tool and the direction of the drilling tool body in a straight line.

- 2) If there is not enough depth, pull out the drilling tool first, and then restart the operation.
- 3) It can only be used to drill holes in the mud when the drilling tool is connected to the top of the machine, and it must not be used to drill holes on stones or mixed stones.
- 4) Avoid pulling out the drilling tool when it is not rotating, which may cause bending and damage.
- 5) The connecting seat of the drilling tool should be vertical when drilling to prevent the drilling tool from falling off, otherwise the screw of the adjusting seat will be damaged.
- 6) It is prohibited to use drilling devices for oblique drilling operation.

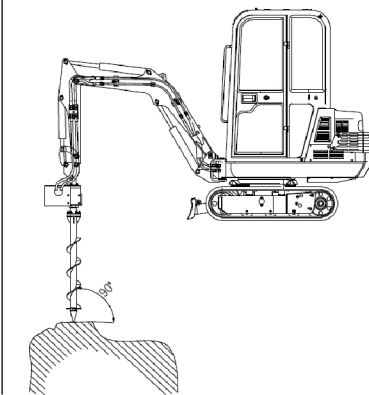

1. Backhoe bucket installation

It is installed in the same way as the bucket.


2. Operation of the backhoe bucket

By operating the handle of the right pilot valve, the scraper of backhoe bucket will retract inwards and the backhoe bucket will turn outwards when swinging to the right, the scraper of backhoe bucket will push outwards and the backhoe bucket will retract inwards when swinging to the left.

3. Maintenance of the backhoe bucket

Lubrication

- 1) Park the machine on a hard and level ground, lower the working device to the ground, and then shut down the engine.
 - 2) Use a grease gun to inject grease into the grease fitting.
- (As shown by the arrow in the right figure)

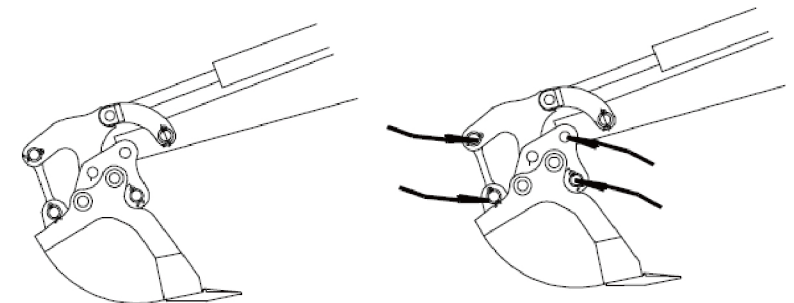

[illegible][illegible]